

K26-2S



Kawasaki ZX250R-Ninja 2008-

Kit for the left side

ID	Description	Cat.no.	Pcs
1	slider RDMoto	SL	1
2	cap	SLcap..	1
4	Slider adapter	DV-317	1
7	screw M6x25	877	3
8	screw M4x16	876	2
9	screw M10x25mm	868	1
10	steel adapter	626	1
11	poly cylinder d= 150mm	463	1
12	screw M10x30mm	888	1
13	screw M8x25mm	831	1
14	dural.bar AL16(M8)x209x30x30		1

Kit for the right side

ID	Description	Cat.no.	Pcs
1	slider RDMoto	SL	1
2	cap	SLcap..	1
4	Slider adapter	DV-317	1
7	screw M6x25	877	3
8	screw M4x16	876	2
9	screw M10x25mm	868	1
10	steel adapter	627	1
11	poly cylinder d= 150mm	463	1
12	screw M10x30mm	888	1
13	screw M8x25mm	831	1

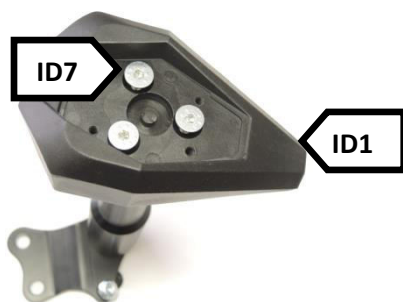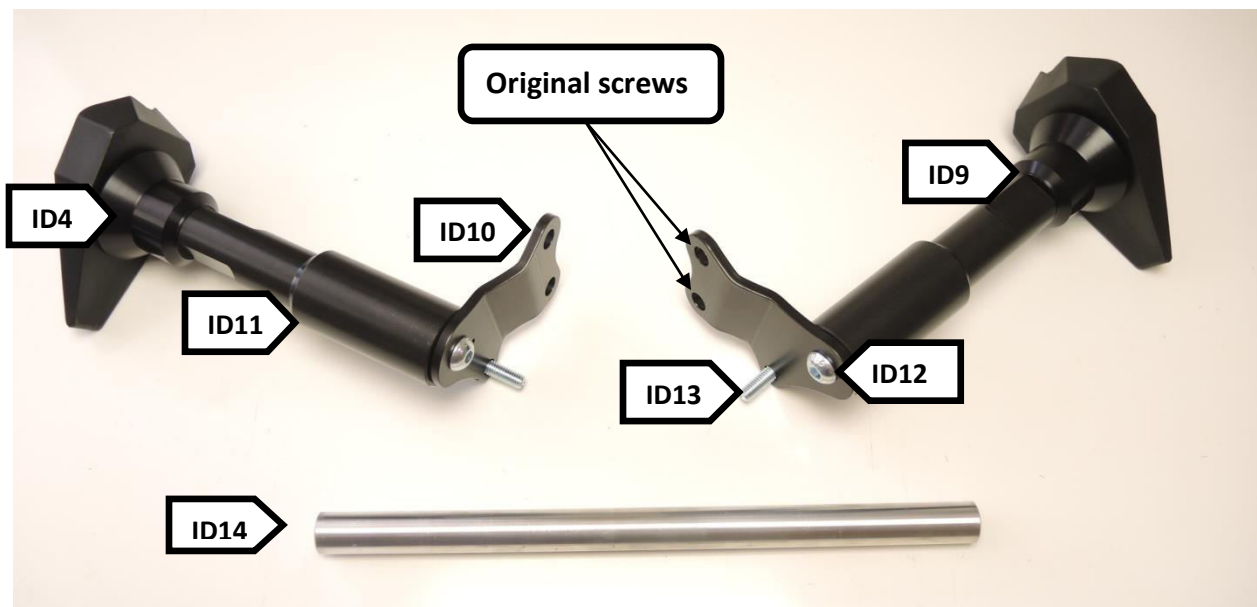



Installation:

1. Remove side fairing of motorcycle.
2. Connect steel adapter (ID10) and 150mm poly adapter (ID11) with two M10 screws (ID12).
3. Set rotation of poly rollers correctly (to prevent damage of fairing)
4. Now connect this adapter with frame of motorcycle using original screws.
5. Don't forget to Place steel rod (ID14) between adapters using screws M8 (ID13).
6. Put fairing back (note: If poly roller touches fairing set rotation of poly adapters correctly)
7. Now place slider (ID1) on slider adapter (ID4) using M10 screw (ID9).
8. Tighten slider with three screws M6 (ID7).
9. In the end connect cover with two screws M4 (ID8).

Warning – we recommend to use safety glue on threads. (medium strong – blue colour).