

S36SDM


Suzuki GSX-R1000 2012-

Kit for the left side

ID	Description	Cat.no.	pcs
1	SDM adapter (cylinder)	DV12	1
2	Bolt M10x60x1,25mm	896	1
3	Dural. cylinder d=10mm	108	1
4	Bolt M10x70mm	851	1
5	Steel adapter	570	1
6	Tape 3M	-	1
7	Poly nut M10 d=20mm	X10	1
8	Washer (string)	801	1
9	SDM adapter	537/B	1
10	Flat washer M6	1023	2
11	Bolt M6x20	1024	2

Kit for the right side

ID	Description	Cat.no.	pcs
1	SDM adapter (cylinder)	DV12	1
2	Bolt M10x60x1,25mm	896	1
3	Dural. cylinder d=3mm	284	1
4	Bolt M10x70mm	851	1
5	Steel adapter	569	1
6	Tape 3M	-	1
7	Poly nut M10 d=20mm	X10	1
8	Washer (string)	801	1
9	SDM adapter	537/B	1
10	Flat washer M6	1023	2
11	Bolt M6x20	1024	2

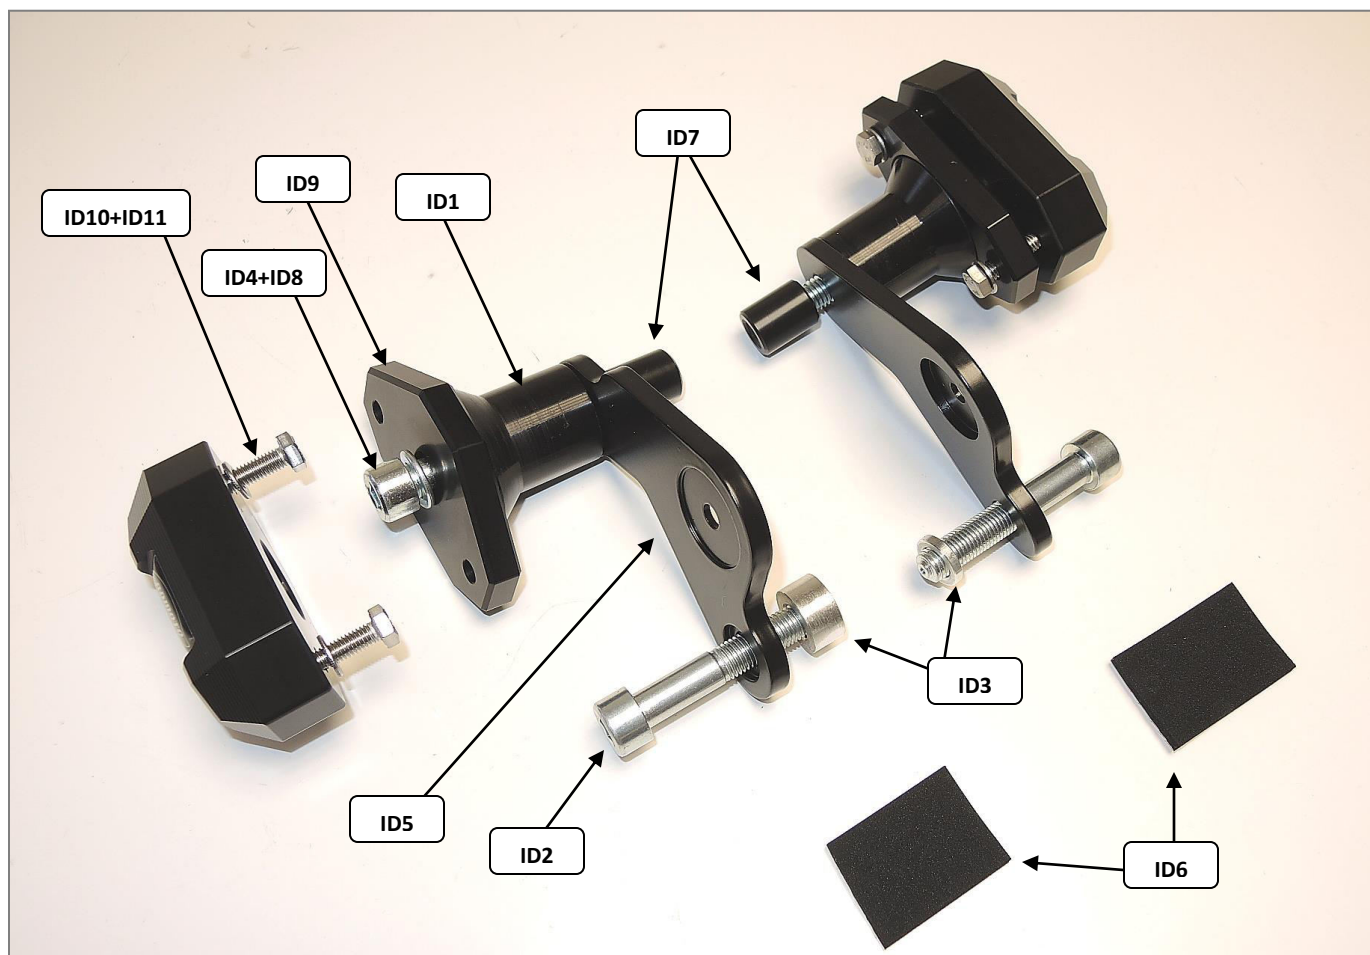

Instrucitons:

1. Remove fairing of motorcycle.
2. Remove original Bolt M10 from the frame.
3. Stick 3M tape (ID6) on the steel adpter.
4. Insert dural cylinder (ID3) between steel adapter (ID5) and frame of motorcycle. Tighten steel adapter using bolt M10 (ID2).
5. Prepare SDM adapters (ID1+ID9). Fit these adapters using bolt M10 (ID4 + string washer ID8).
6. On the end of bolt M10 (ID4) mount poly nut (ID7).
7. In the end fit protector using two M6 bolts (ID5 + washer ID6).
8. **We recommend to use the glue on all threads (medium strong).**

(note: longer cylinder (ID3) is on the left)

