

CF91

KTM 1290 Adventure 2016-

Mounting kit left side

ID	Description	Cat. No.	Pcs
1	Upper crash frame	CF91	1
2	Bolt M10x100	885	1
3	Safety nut M8	809	4
4	Washer M8 - flat	802	4
5	dural. roller d=60mm	6	1
6	3M tape		4
7	Plastic cap M8	X46	4
8	Stirrup M8	X78	2
9	Bolt M8x30	834	1

Mounting kit right side

ID	Description	Cat. No.	Pcs
1	Upper crash frame	CF91	1
2	Bolt M10x100	885	1
3	Safety nut M8	809	4
4	Washer M8 - flat	802	4
5	dural. roller d=60mm	6	1
6	3M tape		4
7	Plastic cap M8	X46	4
8	Stirrup M8	X78	2

Mounting instructions:

Proceed with mounting the crash frames following instructions on attached pictures.


The procedure stays the same for both sides, except that the front bolt M8 (ID.8) is fitted from left side.

Note - For threads of all screws, we recommend using a medium strength (blue) glue.





Bolt M8x30 (ID.9)

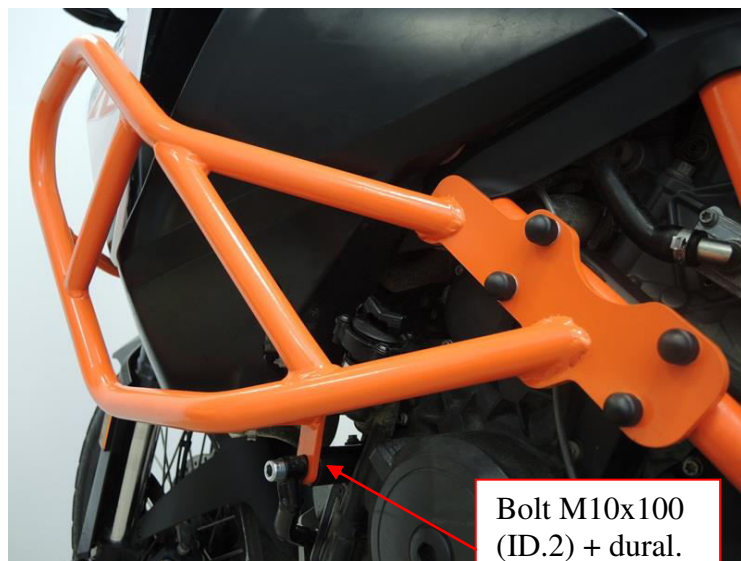

Bolt M10x100 (ID.2) + dural. roller (ID.5)



Stirrup M8 (ID.8) + Washer M8 (ID.4) + safety nut M8 (ID.3) + cap M8 (ID.7) + 3M tape (ID.6).