

CF110KD-SL01-K

KTM 790 Duke 2018-2019

KTM 890 Duke 2020-


Kit for left side			
ID	Description	Cat.no.	Pcs
1	Frame	CF110	1
2	Steel adapter	X113	1
3	Bolt M10x60mm	1048	2
4	Dural. roller d=8mm	1334	1
5	Bolt M10x55mm	1002	1
6	Dural. roller d=10mm	111	1
7	Washer M10	804	3
8	Plastic cover M10	X4	1
9	Bolt M10x80mm	853	1
10	Dural. roller d=13mm	1279	1
11	Dural. roller d=23mm	1278	1
12	Hexagon bolt M8x25mm	815	1
13	Dural. roller	317	1
14	Bolt M10x70mm	851	1
15	Dural. roller d=70mm	1280	1
16	Silenblok	X34	1
17	Sticker RDmoto		1
18	Bolt M6x25mm	877	3
19	Bolt M4x16mm	876	2
20	Washer M8	802	1
21	Crash slider	SL01-K	1
22	Cover for crash slider	capSL-K	1

Kit for right side			
ID	Description	Cat.no.	Pcs
1	Frame	CF110	1
2	Steel adapter	X113	1
3	Bolt M10x60mm	1048	2
4	Dural. roller d=8mm	1334	1
5	Bolt M10x55mm	1002	1
6	Dural. roller d=10mm	111	1
7	Washer M10	804	3
8	Plastic cover M10	X4	1
9	Dural. roller d=39mm	1304	1
10	Dural. roller d=25mm	1277	1
11	Hexagon bolt M8x25mm	815	1
12	Dural. roller	317	1
13	Bolt M10x70mm	851	1
14	Dural. roller d=70mm	1280	1
15	Silenblok	X34	1
16	Sticker RDmoto		1
17	Bolt M6x25mm	877	3
18	Bolt M4x16mm	876	2
19	Washer M8	802	1
21	Crash slider	SL01-K	1
22	Cover for crash slider	capSL-K	1

We recommend using a medium-strength thread adhesive.

Instruction :

- 1.) First install the steel cut parts on both sides (same bolts + L + P rollers) see photo.**

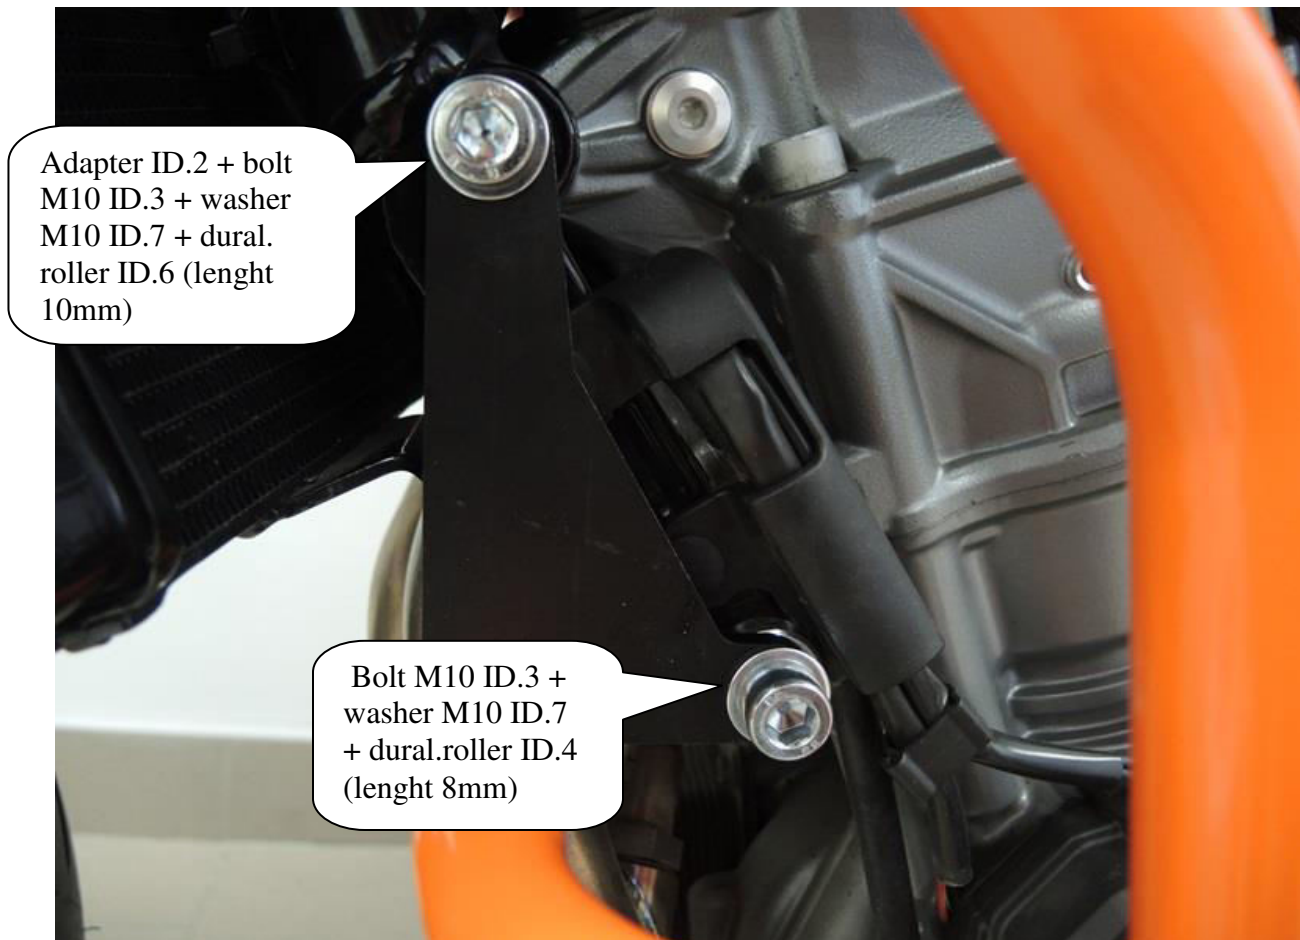

- 2.) Mount sliders and roller with silenblock (L + P side same) on frames.**
- 3.) Then use the M10 bolts and rollers to attach the protective frame (one side first)**
- 4.) Follow the same procedure when installing the other side.**

Right side

Bolt M10 ID.5 +
washer M10 ID.7 +
dural. roller ID.10
(length 25mm) +
cover M10 ID.8

Bolt M10 ID.13 +
roller ID.12 + bolt
M6 ID.17 + bolt M4
ID.18

Bolt original + dural.
roller ID.9 (length
39mm)

Bolt M8 ID11 +
washer M8 ID.19



Dural. roller ID.14 +
silenblok ID.15



Left side

Bolt M10 ID.14 +
roller ID.13 + bolt
M6 ID.18 + bolt M4
ID.19

Bolt M10 ID.5 +
washer M10 ID.7 +
dural. roller ID.11
(length 23mm) +
cover M10 ID.8

Bolt M8 ID12 +
washer M8 ID.20

Bolt M10 ID.9 + dural.
roller ID.10 (length 13mm)

Dural. roller ID.15 +
silenblok ID.16