



CF174

Honda Transalp 750 2023-

Kit for left side :

| ID. | Description | Cat.No. | Pcs |
|-----|---------------------------|---------|-----|
| 1 | Steel adapter | X151 | 1 |
| 2 | Bolt M10x75x1,25mm | 938 | 2 |
| 3 | Nut M10x1,25mm | 1071 | 2 |
| 4 | Bolt M8x25mm | 831 | 2 |
| 5 | Washer M8-flat | 802 | 3 |
| 6 | Steel adapter under light | X88 | 1 |
| 7 | Dural.roller l=18,5mm | 1406 | 1 |
| 8 | Bolt M6x20mm | 1022 | 2 |
| 9 | Washer M6-flat | 947 | 4 |
| 10 | Bolt M6x40mm | 866 | 1 |
| 11 | Nut M6 | 948 | 1 |
| 12 | Bolt M8x40mm | 828 | 1 |
| 13 | Nut M8 | 809 | 1 |
| 14 | Dural.roller l=6mm | 453 | 1 |
| 15 | Sticker RDmoto | | 2 |

Kit for right side:

| ID. | Description | Cat.No. | Pcs |
|-----|--------------------|---------|-----|
| 1 | Steel adapter | X123 | 1 |
| 2 | Bolt M10x75x1,25mm | 938 | 2 |
| 3 | Nut M10x1,25mm | 1071 | 2 |
| 4 | Bolt M8x25mm | 831 | 2 |
| 5 | Washer M8-flat | 802 | 3 |
| 6 | Dural.roller l=6mm | 453 | 1 |
| 7 | Bolt M8x25mm | 833 | 1 |

The assembly process:


During assembly, we recommend using thread glue - medium strength (blue).

Left and right side – main attachment :


The assembly of the left and right sides is the same.
First install the steel adapters and then you can install
the crash frames. For assembly use: steel adapters
ID.1 + bolts M10x75x1.25mm ID.2 + nuts
M10x1.25mm ID.3 + bolts M8x25mm ID.4 +
washers M8 ID.5




Installation of crash frames under the light:

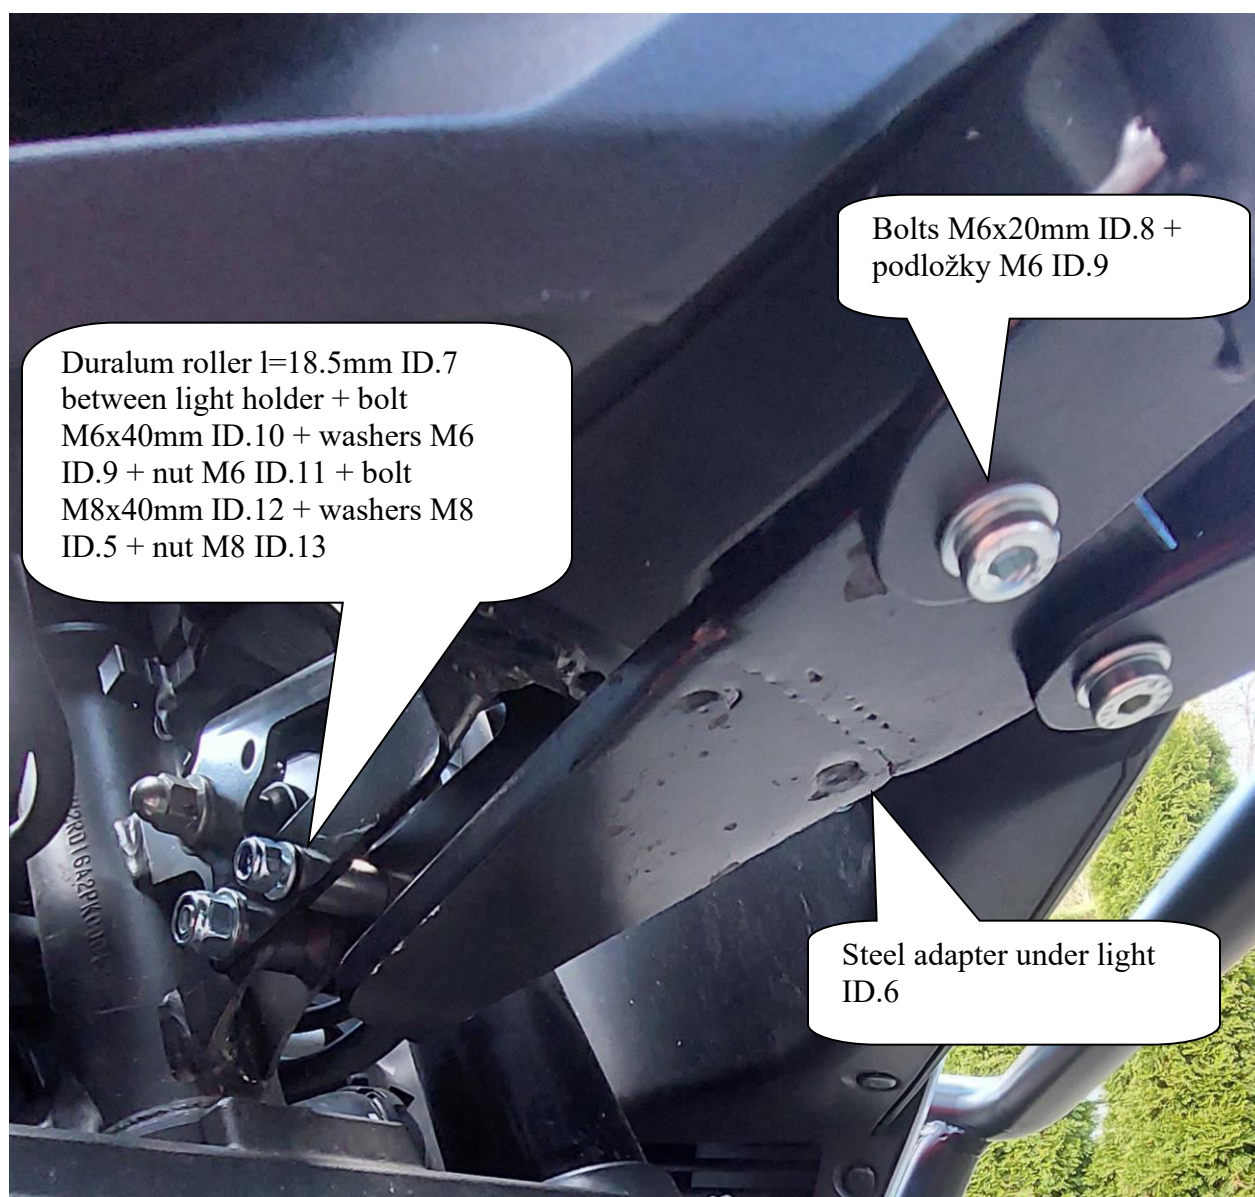

Left side - lower attachment:

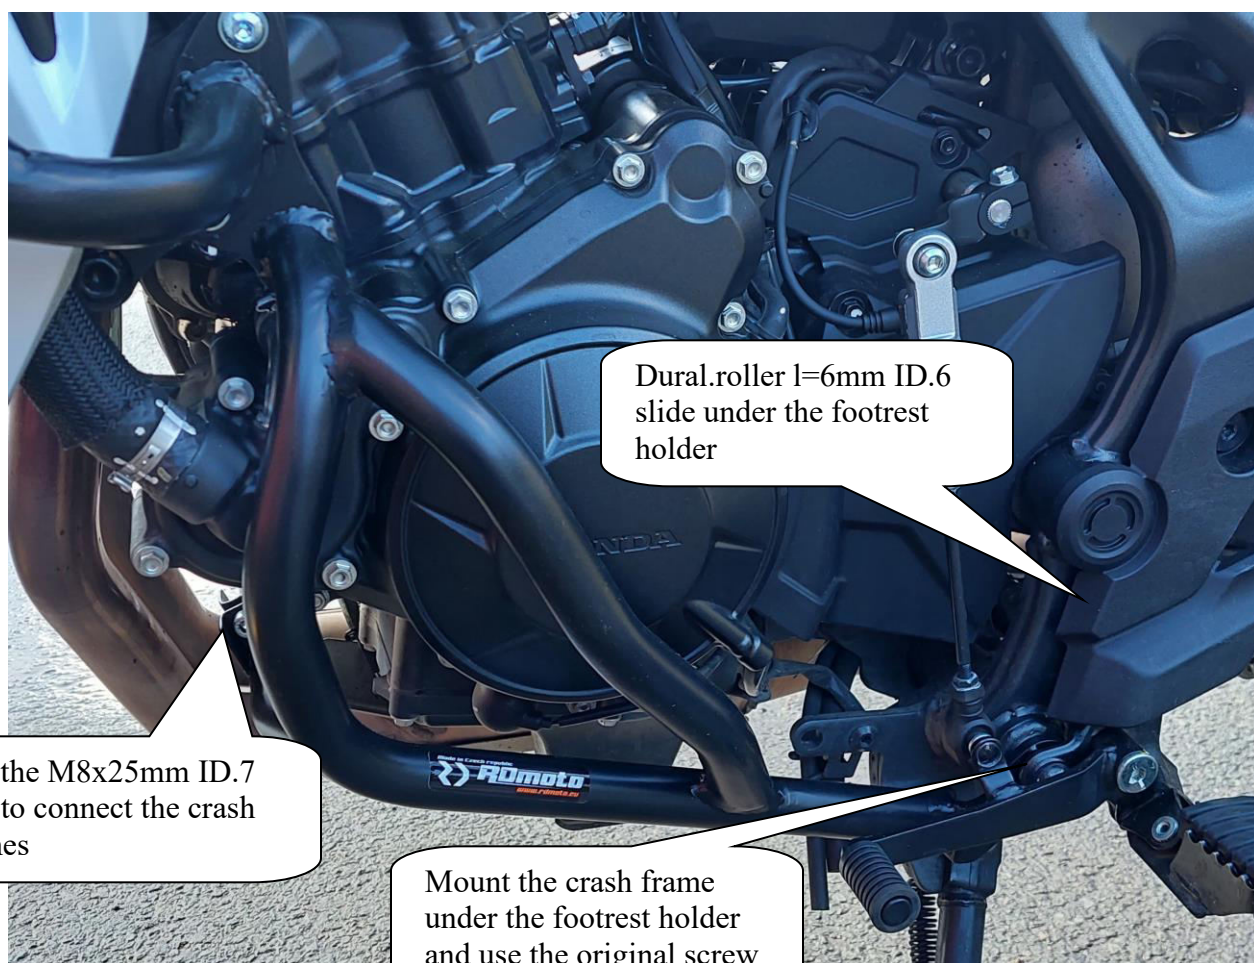

Right side - lower attachment:

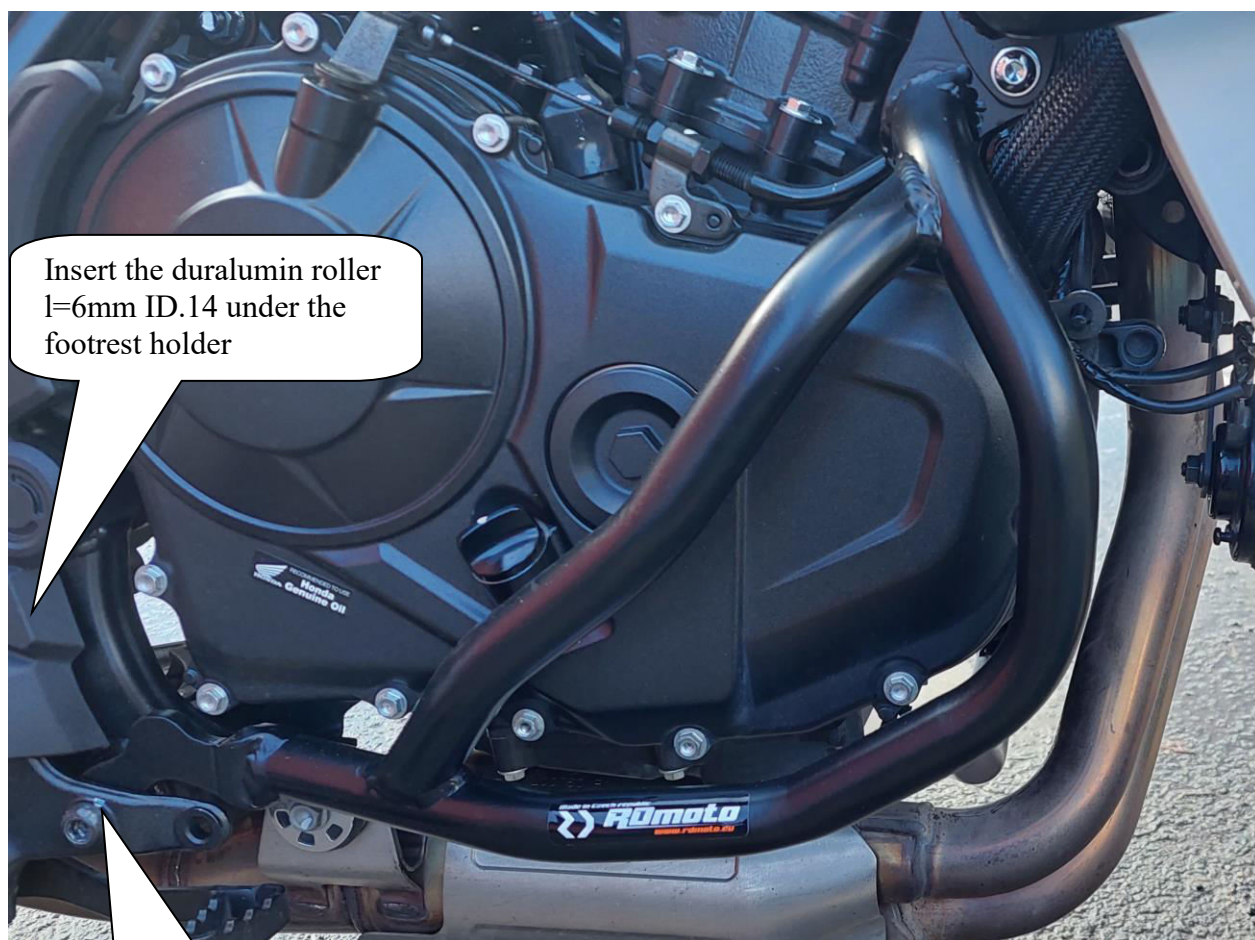

Insert the duralumin roller
l=6mm ID.14 under the
footrest holder

Mount the crash frame
under the footrest holder
and use the original screw