

BN4


Benelli BN251_2015-

LEFT SIDE KIT

ID	Description	Cat.No.	Pcs
1	Steel insert M10	X1	1
2	Bolt M10x90	880	1
3	Dura. Cylinder 25,5mm	1227	1

RIGHT SIDE KIT

ID	Description	Cat.No.	Pcs
1	Steel insert M10	X1	1
2	Bolt M10x90	880	1
3	Dura. Cylinder 25,5mm	1227	1

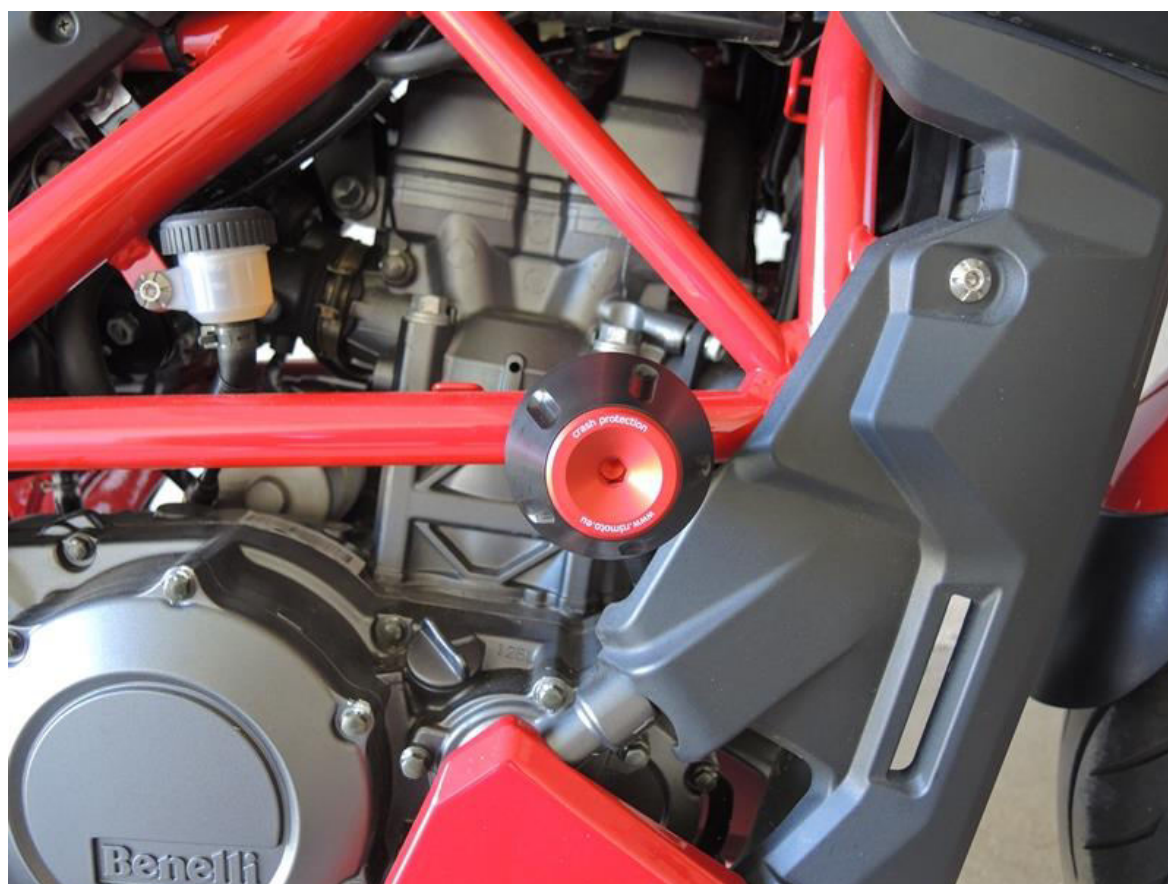

INSTRUCTIONS

- 1) Unbolt original bolt from the frame of motorcycle.
- 2) Insert dural cylinder ID3 into the frame.
- 3) Insert steel insert ID1 and bolt ID2 into the protector.
- 4) Mount this kit into the frame of motorcycle.

We recommend to use safety glue on all threads.

