

H2S


Honda CB600F Hornet 1998-2006 Honda CBF600(S) 2004-2007

Kit for left side:

ID	Description	Cat.N	QTY
1	Adapter moto	313	1
2	Bolt M6x25	877	3
3	Bolt M4x16	876	2
4	Bolt M10x85mm	981	1
5	Nut M10 – safety	810	1
6	Washer M10	804	1

Kit for right side:

ID	Description	Cat.N	QTY
1	Adapter moto	292	1
2	Bolt M6x25	877	3
3	Bolt M4x16	876	2
4	Bolt M10x85mm	981	1
5	Nut M10 – safety	810	1
6	Washer M10	804	1

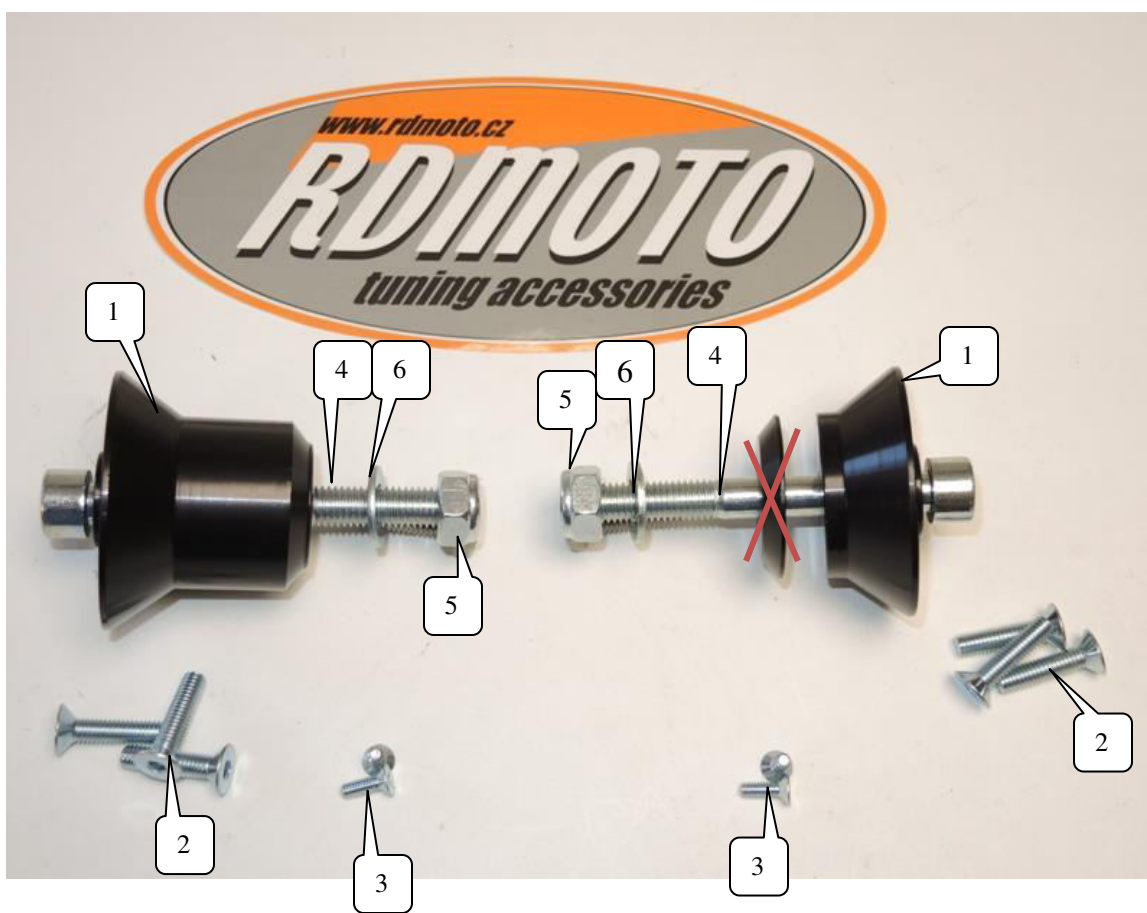

Instruction to assembly left side:

1. Remove the original bolt from frame.
2. Use bolt ID.4 for gripping of duralumin adapter ID.1, use the nut ID.5 and washer ID.6 for tighten, from back side.
3. For gripping slider use bolts ID.2
4. Insert cover into slider and use bolts ID.3 for gripping.

Instruction to assembly right side:

1. Remove the original bolt from frame.
2. Use bolt ID.4 for gripping of duralumin adapter ID.1 bolt put through the frame and engine use the nut ID.5 and washer ID.6 for tighten.
3. For gripping slider use bolts ID.2
4. Insert cover into slider and use bolts ID.3 for gripping.

Warning – we recommend to use safety glue on threads of all bolts (medium strong – blue colour).

