

# H38SD


Honda CBR1000RR 2012-  
**WITH ABS**

## Kit for left side:

ID.	Description	Cat.NO	QTY
1	SLD adapter	537	1
2	Bolt M8x25mm	815	2
3	Washer M8	800	2
4	Bolt M8x25mm (oval)	831	1
5	Steel adapter	523	1
6	Dural.cylinder 50mm	13	1
7.1	Dural.cylinder 11mm	17	1
8	Bolt M10x70	851	1
9	3M Tape		1
10.1	Bar for connection 8x463x30x30		1
11	Bolt M12x70x1,25mm	917	1
12	Washer M12	803	1

## Kit for right side:

ID.	Description	Cat.NO	QTY
1	SLD adapter	537	1
2	Bolt M8x25	815	2
3	Washer M8	800	2
4	Bolt M8x25mm (oval)	831	1
5	Steel adapter	524	1
6	Dural.cylinder 50mm	13	1
7.2	Dural.cylinder 2mm	167	1
8	Bolt M10x70	851	1
9	3M Tape		1
10.2	<b>Steel bracket for ABS</b>	X16	1

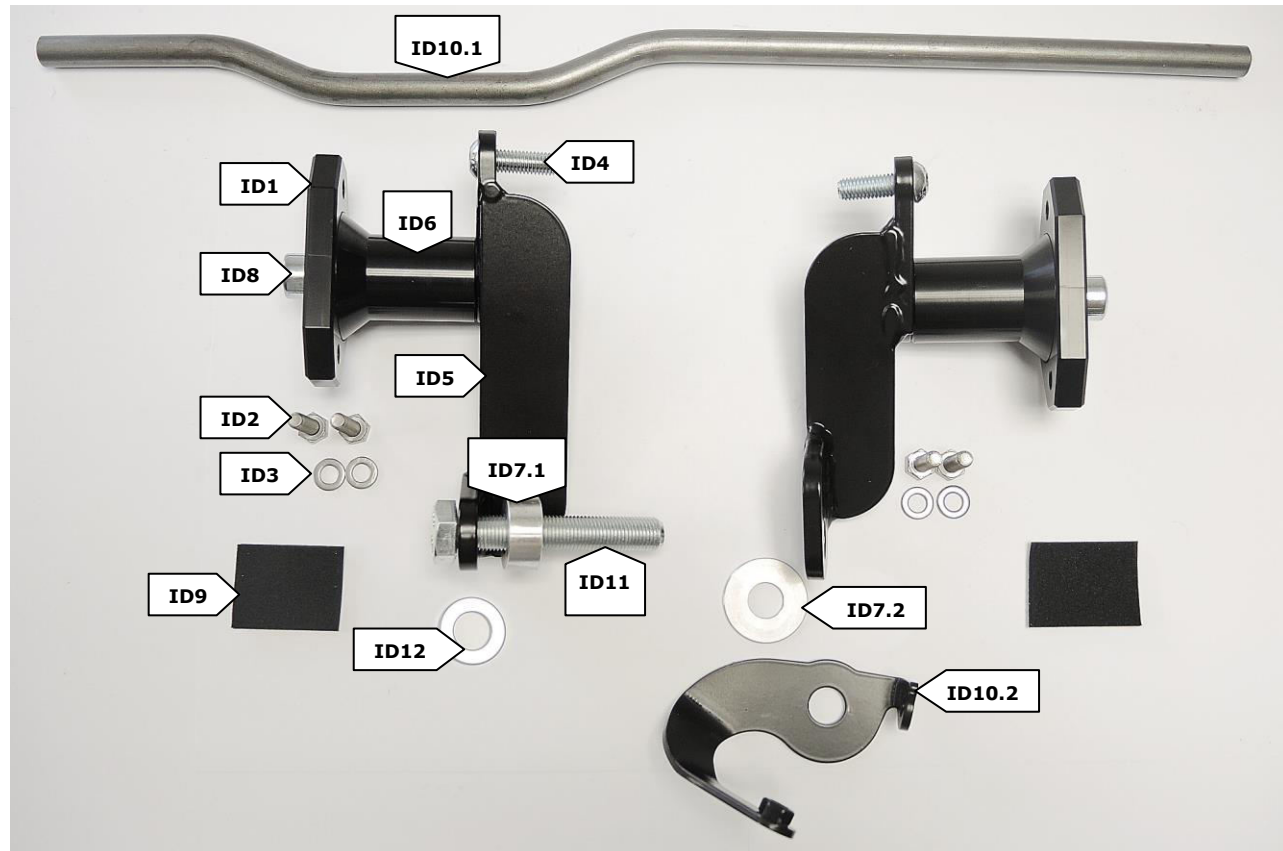

### Instructions:

- 1.) Dismantle fairing of motorcycle.
- 2.) Dismantle original bolts M12 from the frame.
- 3.) Stick 3M tape (ID9) on the frame to prevent damage.
- 4.) Fit steel adapters ID5 on the frame of motorcycle. On the left side use bolt ID11, washer ID12 and cylinder ID7.1. On the right side use original bolt with cylinder ID7.2 and ABS adapter ID10.2.
- 5.) Place connection rod ID10.1 between adapters and fit it using two M8 bolts (ID4).
- 6.) Mount fairing back on the motorcycle.
- 7.) Fit SLD adapter ID1 and cylinder ID6 on the steel adapter using M10 bolt (ID8).
- 8.) In the end fit slider using two bolts M8 and washers (ID2 and ID3).

