

A4


Aprilia RSV 1000 Mile '04-'08

Fitting kit left side:

ID	Description	Cat.N	Qty
1	Steel box M12	X2	1
2	Steel adapter	650	1
3	Bolt M10x100	885	1
4	Bolt M8x40	828	1
5	Dural. spacer d=12mm	130	1
6	Dural.spacer d=43mm	129	1
7	Dural.cylinder with thread d=70	420	1
8	Bolt M12x40	826	1
9	Bolt M12x50	869	1

Fitting kit right side:

ID	Description	Cat.N	Qty
1	Steel box M12	X2	1
2	Steel adapter	651	1
3	Bolt M10x100	885	1
4	Bolt M8x30	834	1
5	Dural.spacer d=41,5mm	128	1
6	Dural.cylinder with thread d=80	131	1
7	Bolt M12x40	826	1
8	Bolt M12x50	869	1

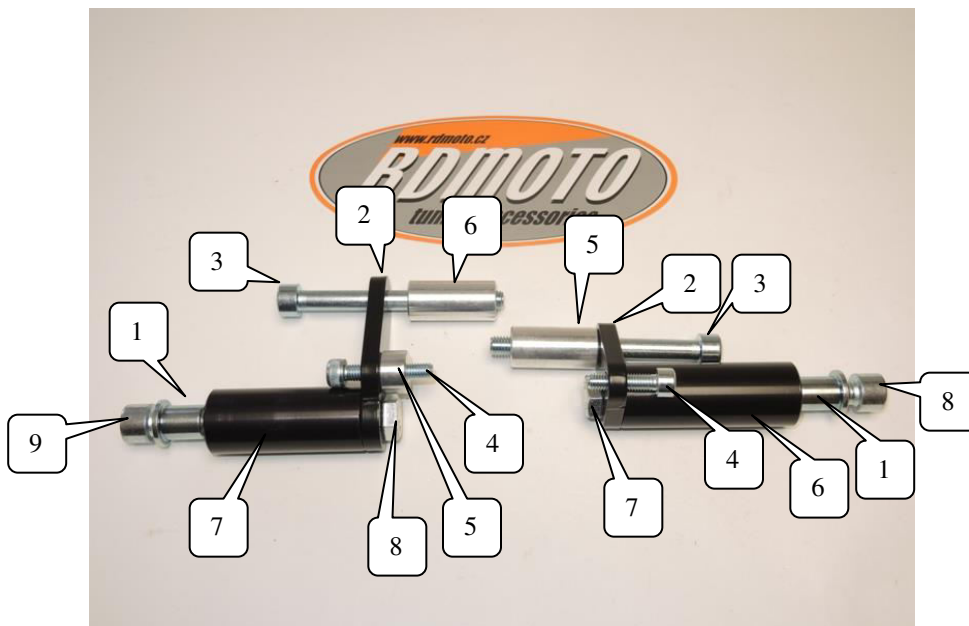

Fitting kit left side:

1. Remove the left hand side fairing and make hole into the fairing.
2. Remove the original bolt from frame as shown on the picture.
3. On the adapter ID.2 mounting dural.cylinder ID.7 from the back side tighten it by bolt ID.8.
4. Insert bolts ID.3 and ID.4 trough the adapter. On this bolts insert dural.cylinder ID.5 and ID.6. Longer is front.
5. This kit mounting on the frame and refit the left side fairing.
6. Into the protector insert steel box ID.1 Gripping protector by bolt ID.9

Fitting kit right side:

1. Remove the left hand side fairing and make hole into the fairing.
2. Remove the original bolt from frame as shown on the picture.
3. On the adapter ID.2 mounting dural.cylinder ID.6 from the back side tighten it by bolt ID.7.
4. Insert bolts ID.3 and ID.4 trough the adapter. On the bolt M10x100 insert dural.cylinder ID.5.
5. This kit mounting on the frame and refit the right side fairing.
6. Into the protector insert steel box ID.1 Gripping protector by bolt ID.8.



You will have to drill the hole in the fairing during installation. It is therefore necessary intervention in the original fairing!

Warning: We recommend use the glue of all threads. Medium strong.

