

K36


Kawasaki ZZR1400/ZX-14R 2012-

Kit for the left side

ID	Description	Cat.no.	pcs
1.1	Aluminium adapter	707	1
2	Dural roller l=90mm	143	1
3	Dural roller l=12mm	80	1
4	Screw M10x130	883	1
5	Steel insert M10	X1	1
6.1	Screw M10x65x1,25	945	1
7	Screw M8x35	861	1

Kit for the right side

ID	Description	Cat.no.	pcs
1.2	Aluminium adapter	708	1
2	Dural roller l=90mm	143	1
-	-	-	-
4	Screw M10x130	883	1
5	Steel insert M10	X1	1
6.2	Screw M10x55x1,25	915	1
-	-	-	-

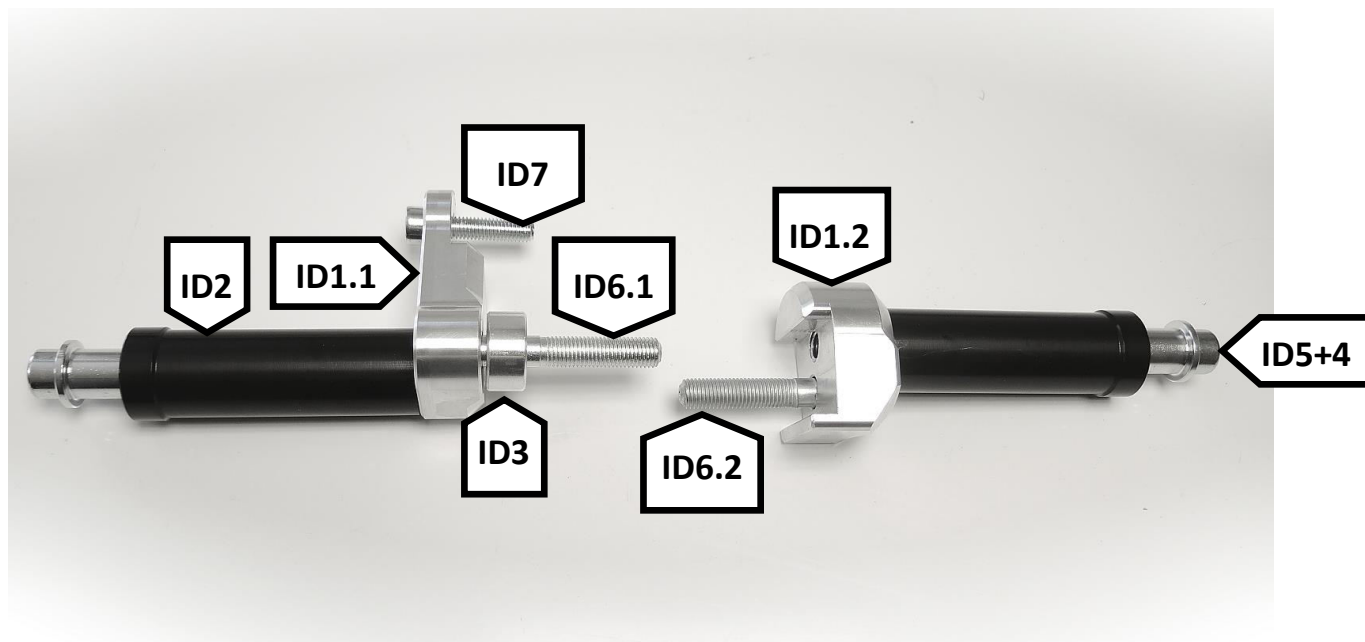

Assembly for the left side:

1. Remove fairing from motorcycle.
2. First install aluminium adapter.
3. Attach aluminium adapter (ID1.1) with screws M10 (ID6.1) and M8 (ID7).
4. Dont forget to place dural roller (ID3) under screw M10 (ID6.1).
5. Now install fairing back.
6. Attach protector on the aluminium adapter with screw M10 (ID4) dural adapter (ID2) and steel insert (ID5).

Assembly for the right side

(almost the same as on the left)

Diferences:

- a. Instead of Aluminium adapter (1.1) use aluminum adapter (1.2).
- b. There is not any 12mm dural roller (ID3).
- c. Instead of Screw (ID6.1) use screw (ID6.2).

