


K36SDM

Kawasaki ZZR1400/ZX-14R 2012-

Kit for the left side			
ID	Description	Cat.no.	pcs
1.1	Aluminium adapter	707	1
2	Dural roller l=90mm	238	1
3	Dural roller l=12mm	80	1
4	Screw M10x140	953	1
5	Dural roller l=20mm	2	1
6	Washer M10	801	1
7	Dural holder for slider SLDM	537/B	1
8	Screw M6x20	1024	2
9	Washer M6	1023	2
10.1	Screw M10x65x1,25	945	1
11	Screw M8x35	861	1

Kit for the right side			
ID	Description	Cat.no.	pcs
1.2	Aluminium adapter	708	1
2	Dural roller l=90mm	238	1
-	-	-	-
4	Screw M10x140	953	1
5	Dural roller l=20mm	2	1
6	Washer M10	801	1
7	Dural holder for slider SLDM	537/B	1
8	Screw M6x20	1024	2
9	Washer M6	1023	2
10.2	Screw M10x55x1,25	915	1
-	-	-	-

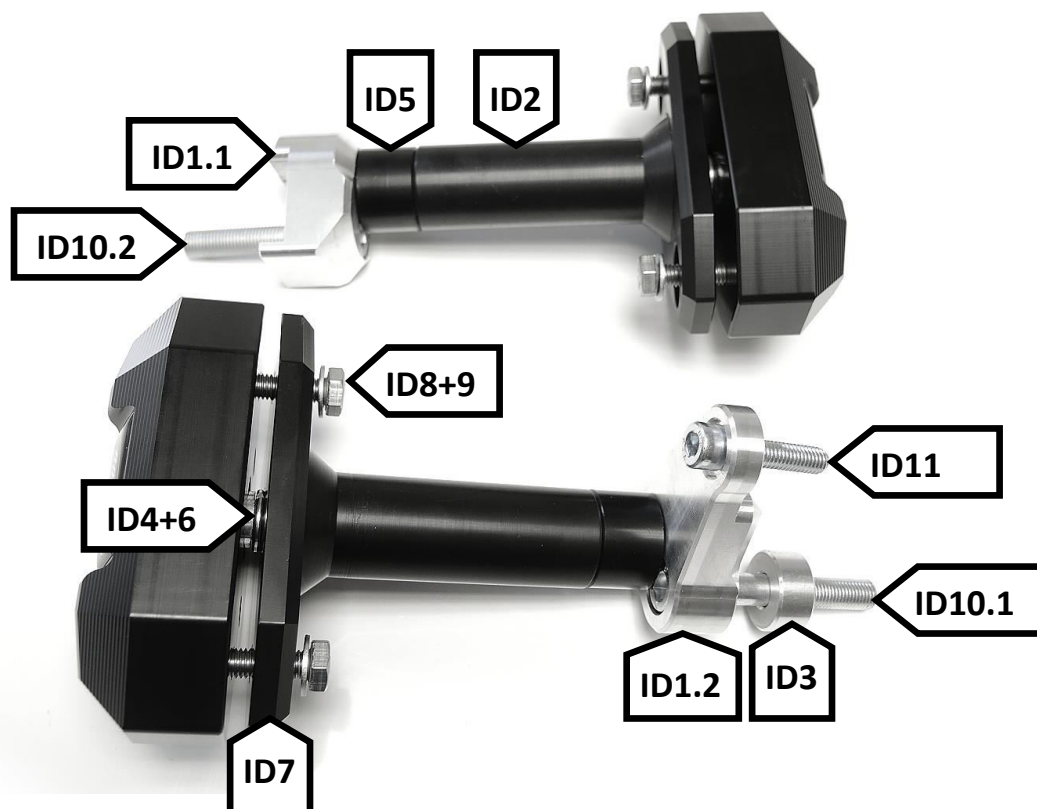

Assembly for the left side:

1. Remove fairing from motorcycle.
2. First install aluminium adapter.
3. Aluminium adapter (ID1.1) attach with screw M10 (ID10.1) a M8 (ID11).
4. Dont forget to place dural roller (ID3) under screw M10 (ID9).
5. Now install fairing back.
6. Attach slider holder (ID7) with screw M10 (ID4) on aluminium adapter. Between slider holder and aluminum adapter are two dural rollers (ID2) and (ID5). Dont forget to insert washer (ID6).
7. Now attach slider on slider holder with two screws (ID8) and washers (ID9).

Assembly for the right side

(almost the same as on the left)

Diferences:

- a. Instead of Aluminium adapter (1.1) use aluminum adapter (1.2).
- b. There is not any 12mm dural roller (ID3).
- c. Instead of Screw (ID10.1) use screw (ID10.2).

