

Y28SD


Yamaha XJ6 Diversion F 2010-

Kit for the left side

No.	Description	Cat.no.	Pcs
1	Druval. Cylinder 30mm	DV11	1
2	Bolt M10x50x1,25mm	921	1
3	Bolt M10x50mm	849	1
4	Duralumin adapter	615	1
5	Tape 3M	-	-
6	Plastic cap	X4	1
7	Washer M10 (spring)	801	1
8	SLD adapter	537	1
9	Bolt M8x25mm	815	2
10	Washer M8	800	2

Kit for the right side

No.	Description	Cat.no.	Pcs
1	Druval. Cylinder 30mm	DV11	1
2	Bolt M10x50x1,25mm	921	1
3	Bolt M10x50mm	849	1
4	Duralumin adapter	616	1
5	Tape 3M	-	-
6	Plastic cap	X4	1
7	Washer M10 (spring)	801	1
8	SLD adapter	537	1
9	Bolt M8x25mm	815	2
10	Washer M8	800	2

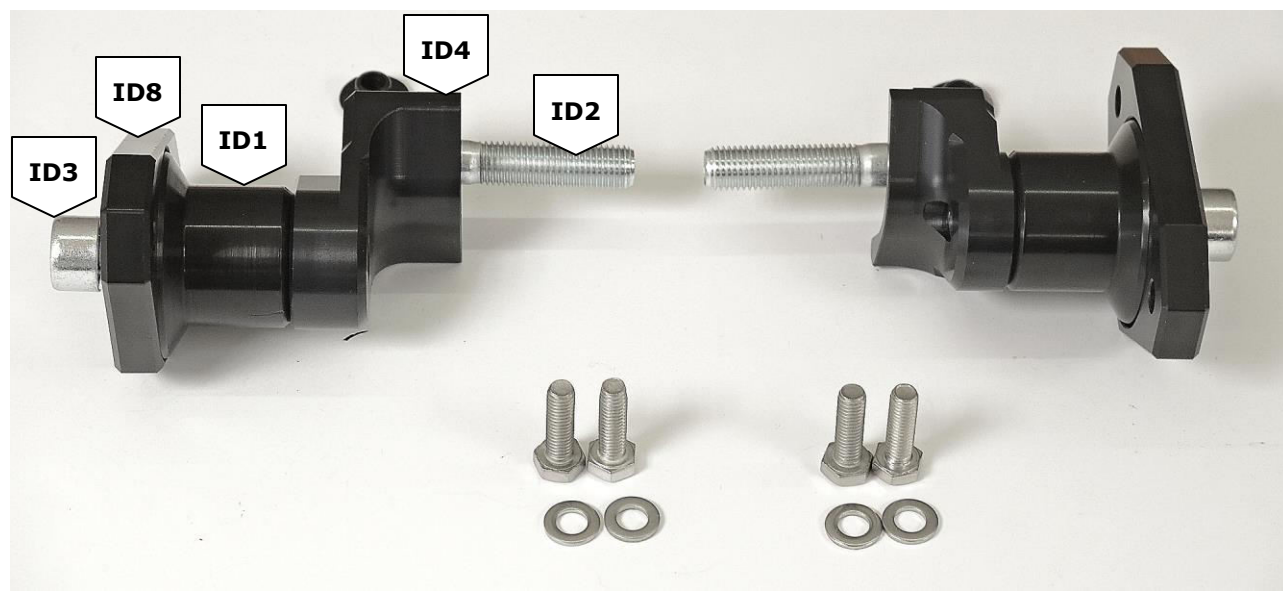

Instructions

- 1) **We recommend to use medium strong glue on all threads.**
- 2) Dismantle side fairing and original bolt from the frame according to the picture below.
- 3) Stick 3M tape on the frame of motorcycle to prevent its damage.
- 4) Fit adapter ID4 on the frame using bolt ID2.
- 5) Prepare SLD adapter ID8 and dural. cylinder ID1 and fit it on the steel adapter using bolt M10 (ID3) and washer ID7.
- 6) Fit slider using two bolts ID9 and washers ID10.
- 7) In the end place plastic caps on both bolts.

ILLUSTRATIVE PHOTOS OF PLACE OF THE INSTALLATION

