

CF112

Honda Dominátor 1997-

Kit for Left Side			
ID	Description	Cat. No.	Pcs.
1	Frame		1
2	Bolt M10x25	868	1
3	Washer flat M10	804	2
4	Safety Nut M10	810	1
5	Cover plastic M10	X35	2
6	Cover plastic M10	X4	1
7	Bolt M8x130	884	1
8	Dural. roller d=30mm	431	1
9	Washer M8	802	1
10	Plastic cover M8	X5	1
11	Rod 10x260x30x30		1
12	Steel Adapter	X114	1
13	3M Tape		1
14	RDmoto Sticker		1


Kit for Right side			
ID	Description	Cat. No.	Pcs.
1	Frame		1
2	Bolt M10x25	868	1
3	Washer flat M10	804	2
4	Safety Nut M10	810	1
5	Cover plastic M10	X35	2
6	Cover plastic M10	X4	1
7	Bolt M8x60	838	1
8	Dural. roller	1269	1
9	Washer M8	802	1
10	Plastic cover M8	X5	1
11	Nut M8	809	1
12	Stirrup M10	X38	1
13	3M Tape		1
14	RDmoto Sticker		1
15	Plastic cover M8	X46	1

We recommend medium strenght thread glue.

Mounting Instructions:

- 1.) First, use the M10 ID.12 stirrup, M10 ID.3 washers and M10 ID.4 nuts to attach the steel adapter ID.12 onto the motorcycle frame.
- 2.) Unscrew the original bolt on left side, leading through the motorcycle. Due to access, you will have to také off spring on the right side leading from rear brake and move it aside.
- 3.) Then, push the M10 ID.11 rod through the crash frame and motorcycle frame and fit it with M10 ID.3 washer and M10 ID.4 nut.
- 4.) In the front part, under bottom steel adapter (as shown on attached picture), unscrew the original M8 bolt.
- 5.) Put the M8 ID.9 washer onto the M8 ID.7 bolt and push through the crash frame, ID.8 roller and motorcycle frame.
- 6.) Mount the crash frame onto the fitted steel adapter in the upper part using M10 ID.2 bolt and M10 ID.3 washer.
- 7.) Do not tighten the bolts and nuts yet.
- 8.) There will be a rod sticking out from the right rear side – fit it with M10 ID.3 washer and M10 ID.4 nut.
- 9.) Unscrew the M8 bolt from motorcycle frame and replace it with ID.8 dural. roller, M8 ID.9 washer and M8 ID.7 bolt.

- 10.) In the front bottom part, fit the crash frame onto the M8 bolt sticking out from motorcycle frame and then attach the M8 ID.9 washer and M8 ID.11 nut.
- 11.) In the upper part, attach the frame to the steel adapter with M10 ID.3 washer and M10 ID.2 bolt.
- 12.) Finally, tighten all screws and fit the plastic covers onto the bolts and put up the stickers.

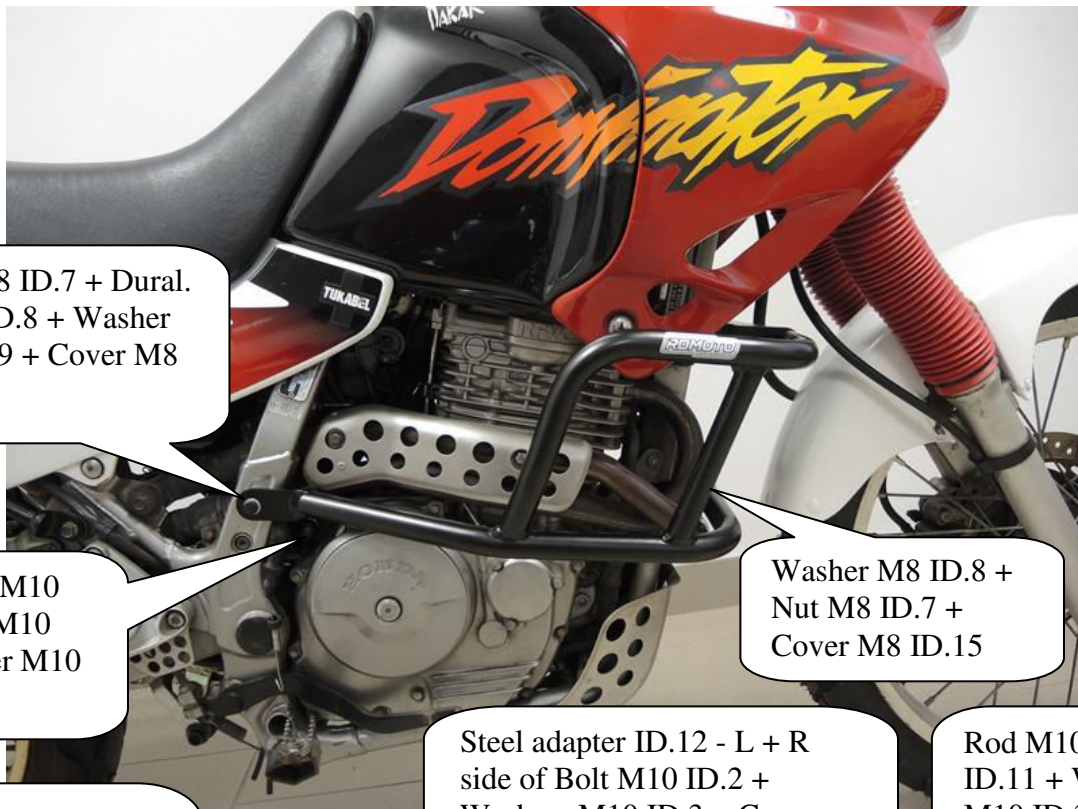

Bolt M8 ID.7 + Dural. roller ID.8 + Washer M8 ID.9 + Cover M8 ID.10

Washer M8 ID.8 + Nut M8 ID.7 + Cover M8 ID.15

Washer flat M10 ID.3 + Nut M10 ID.4 + Cover M10 ID.5

Steel adapter ID.12 - L + R side of Bolt M10 ID.2 + Washers M10 ID.3 + Covers M10 ID.6

Rod M10 x 260mm ID.11 + Washer flat M10 ID.3 + Plastic cover ID.5

Stirrup M10 ID.12 - L+P side of nut M10 ID.4 + 3M Tape ID.13 + Washer M10 ID.3 + Plastic cover ID.5



Bolt M8 ID.7 + Washer M8 ID.9 + Dural. roller ID.8 + Cover M8 ID.10

