

H26



Honda CBR600RR 2009-

Kit for left side:

ID	Description	Cat.N	QTY
1	Steel box M12	X2	1
2	Bolt M12x110x1,25	910	1
3	Dural.cylinder d=31,5	288	1

Kit for right side:

ID	Description	Cat.N	QTY
1	Steel box M12	X2	1
2	Bolt M12x90x1,25	931	1
3	Dural.cylinder d=16,5	289	1

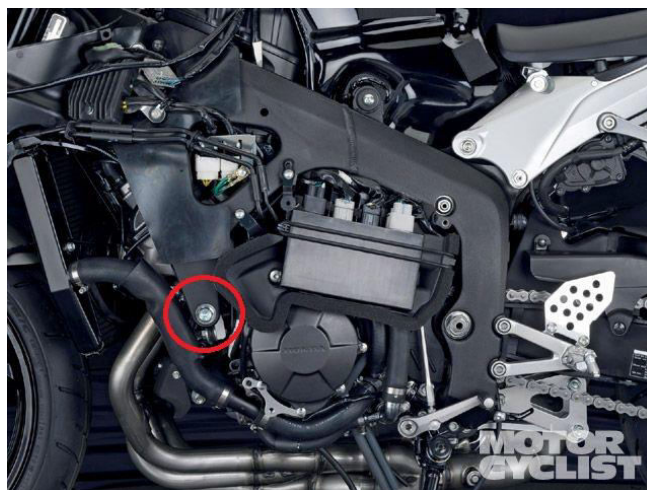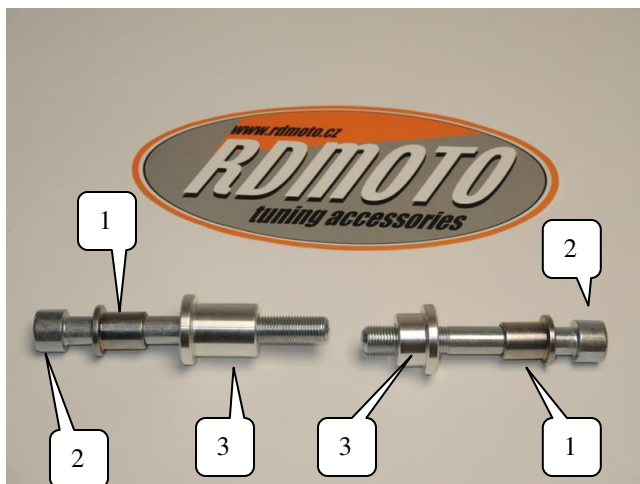

You will have to drill the hole in the fairing during installation. It is therefore necessary intervention in the original cow!

Take out fairing from bike and make a hole.

Instruction to assembly left side:

1. Take out original bolt from frame.
2. Insert steel box ID.1 into the protector. Under the protector insert dural.cylinder ID.3. This set gripping on the frame.

Instruction to assembly left side:

1. Take out original bolt from frame.
2. Insert steel box ID.1 into the protector. Under the protector insert dural.cylinder ID.3. This set gripping on the frame.

Warning: We recommend use the glue of all threads. Medium strong.