

# H56


## Honda CB1100 RS/EX 2017-

### Fitting kit left side:

ID	Description	Cat.n	QTY
1	Dural. adapter	676	1
2	Bolt M10x110	879	2
3	Washer M10	804	3
4	Nut M10	810	2
5	Plastic 's cover	X4	2
6	Steel box	X2	1
7	Dural.cylinder d=50	209	1
8	Bolt M12x90	808	1
9	Dural.cylinder d=14,5	1160	2

### Fitting kit right side:

ID	Description	Cat.n	QTY
1	Dural. adapter	677	1
2	Bolt M10x110	879	2
3	Washer M10	804	3
4	Nut M10	810	2
5	Plastic 's cover	X4	2
6	Steel box	X2	1
7	Dural.cylinder d=30	170	1
8	Bolt M12x70	977	1

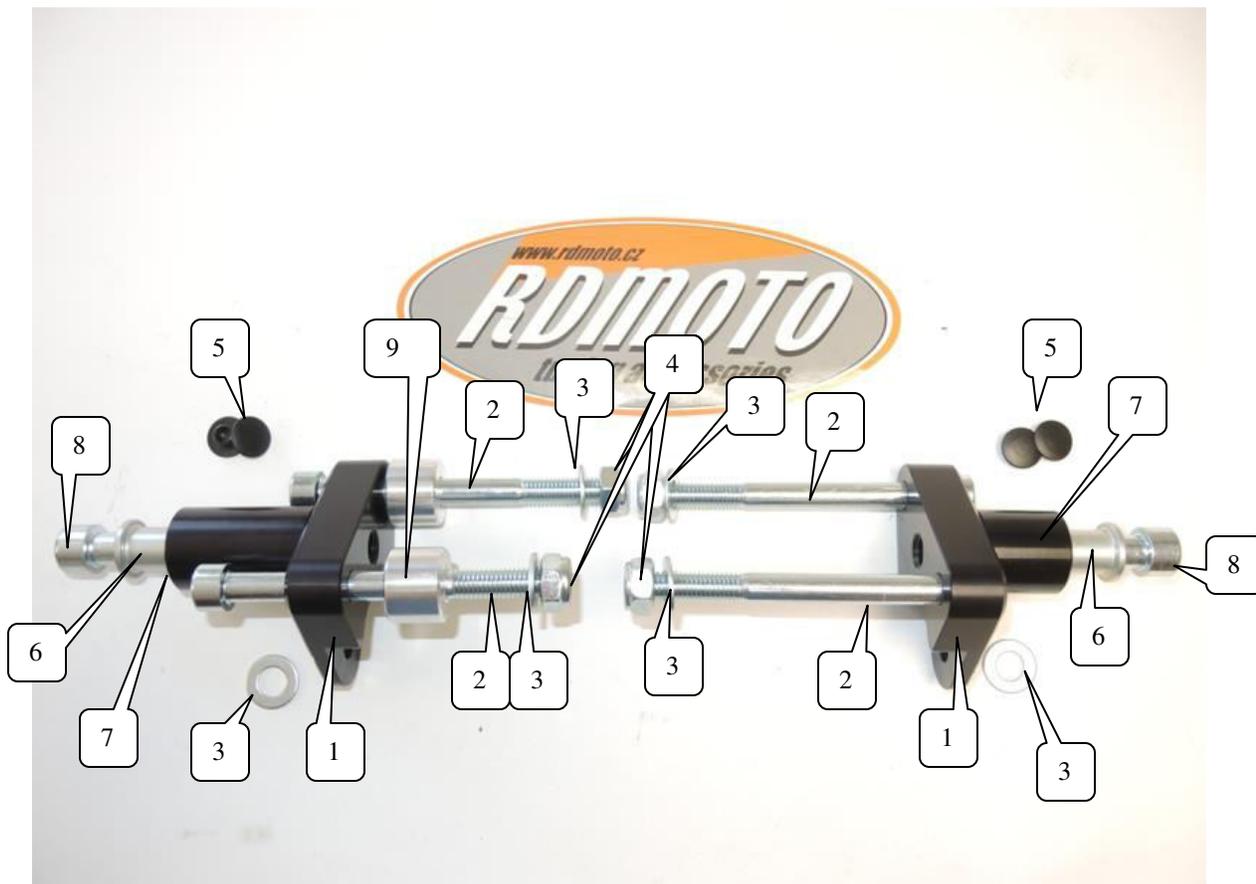

**Instruction to assembly-left side:**

1. Take out original bolts from frame and engine.
2. Insert bolts ID.2 into the duralumin adapter ID.1. Under the adapter insert dural. cylinders ID.9. This set mounting on frame. Tighten it by nuts ID.4 and washers ID.3.
3. Take original bolt from engine M10, insert washer ID.3 on this bolt and make assembly.
4. Put plastic covers into the bolts (see photo).
5. Insert steel box ID.6 into the protector with bolt ID.8.
6. This kit mounting on dural. adapter.

**Instruction to assembly-right side:**

1. Take out original bolts from frame and engine.
2. Insert bolts ID.2 into the duralumin adapter ID.1. This set mounting on frame. Tighten it by nuts ID.4 and washers ID.3.
3. Take original bolt from engine M10, insert washer ID.3 on this bolt and make assembly.
4. Put plastic covers into the bolts (see photo).
5. Insert steel box ID.6 into the protector with bolt ID.8.
6. This kit mounting on dural. adapter.

**Warning: We recommend use the glue of all threads. Medium strong.**

