

# K17


## Kawasaki ER-6F 2006-2008

### Kit for the left side

No.	Description	Cat.no.	Pcs
1	Protector	-	1
2	Duralumin adapter	529	1
3	Dural. cylinder d=41mm	92	1
4	Dural. cylinder d=27,6mm	91	1
5	Dural. cylinder d=45,5mm	90	1
6	Bolt M10x50mm	849	1
7	Bolt M8x80mm	843	2
8	Bolt M6x50mm	867	1
9	Nut M6-safety	948	1
10	3M tape	-	1
11	Dural. cylinder - 15mm	8	1
12	Steel insert	X1	1

### Kit for the right side

No.	Description	Cat.no.	Pcs
1	Protector	-	1
2	Duralumin adapter	530	1
3	Dural. cylinder d=25mm	88	1
4	Dural. cylinder d=20,5mm	89	1
-	-	-	-
6	Bolt M10x55mm	1002	1
7	Bolt M10x130mm	883	1
8	Bolt M8x45mm	820	1
9	Nut M10-safety	810	1
10	3M tape	-	1
11	Dural. cylinder - 15mm	8	1
12	Steel insert	X1	1

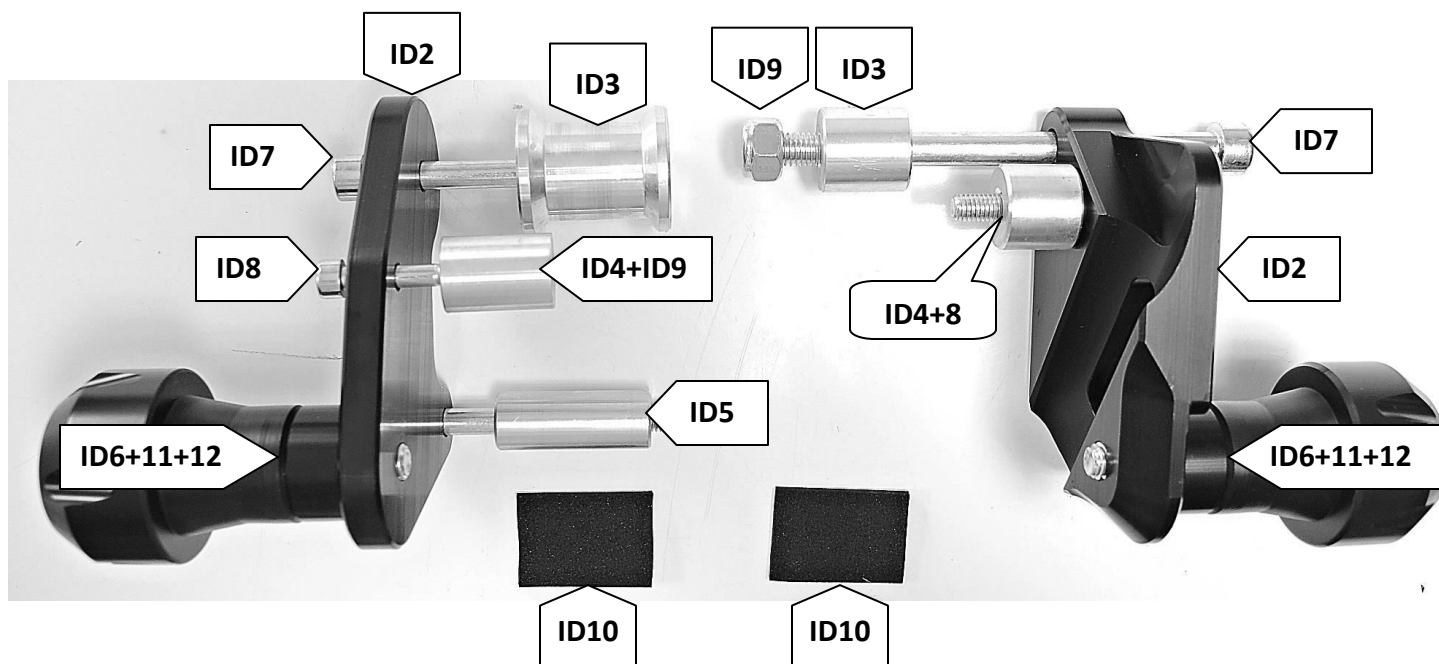

### **Instructions- the left side:**

1. Remove original bolts and fairing of motorcycle.
2. Insert bolts (ID6), (ID7) and (ID8) into the duralumin adapter (ID2).
3. Place cylinders (ID3), (ID4) and (ID5) on bolts.
4. Stick 3M tape on the frame.
5. Mount adapter with bolts and cylinders on the frame.
6. Tighten bolt (ID8) using nut (ID9).
7. In the end mount protector with cylinder (ID11) and steel insert (ID12) into the adapter using bolt (ID6).

**We recommend to use the glue on all threads (medium strong).**



### **Instructions - the right side:**

1. Remove original bolts and fairing of motorcycle.
2. Insert bolts (ID7) and (ID8) into the duralumin adapter (ID2).
3. Place cylinders (ID3) and (ID4) on bolts.
4. Stick 3M tape on the frame.
5. Mount adapter with bolts and cylinders on the frame.
6. Tighten bolt (ID7) using nut (ID9).
7. In the end mount protector with cylinder (ID11) and steel insert (ID12) into the adapter using bolt (ID6).

**We recommend to use the glue on all threads (medium strong).**

