

K41


Kawasaki Ninja 250SL (15)

Kit for the left side

ID	Description	Cat.no.	Pcs
1	Dural. cylinder	DV5	1
2	Steel insert	X1	1
3	Bot M8x40	835	1
4	Poly spacer 40mm	X65	1
5	Bolt M10x80	852	1
6	Alu adapter	DV1216	1
7	Bolt M6x30	864	1
8	Washer M6 (flat)	947	1
9	Rod 10x335x30x30		1
10	Nut M10 (safety)	804	1
11	Washer M10 (flat)	810	1
12	Left steel adapter	712	1

Kit for the right side

ID	Description	Cat.no.	pcs
1	Dural. cylinder	DV5	1
2	Steel insert	X1	1
3	Bot M8x40	835	1
4	Poly spacer 40mm	X65	1
5	Bolt M10x80	852	1
6	Adapter	DV1216	1
7	Bolt M6x30	864	1
8	Washer M6 (flat)	947	1
9	-	-	-
10	Nut M10 (safety)	804	1
11	Washer M10 (flat)	810	1
12	Right steel adapter	713	1

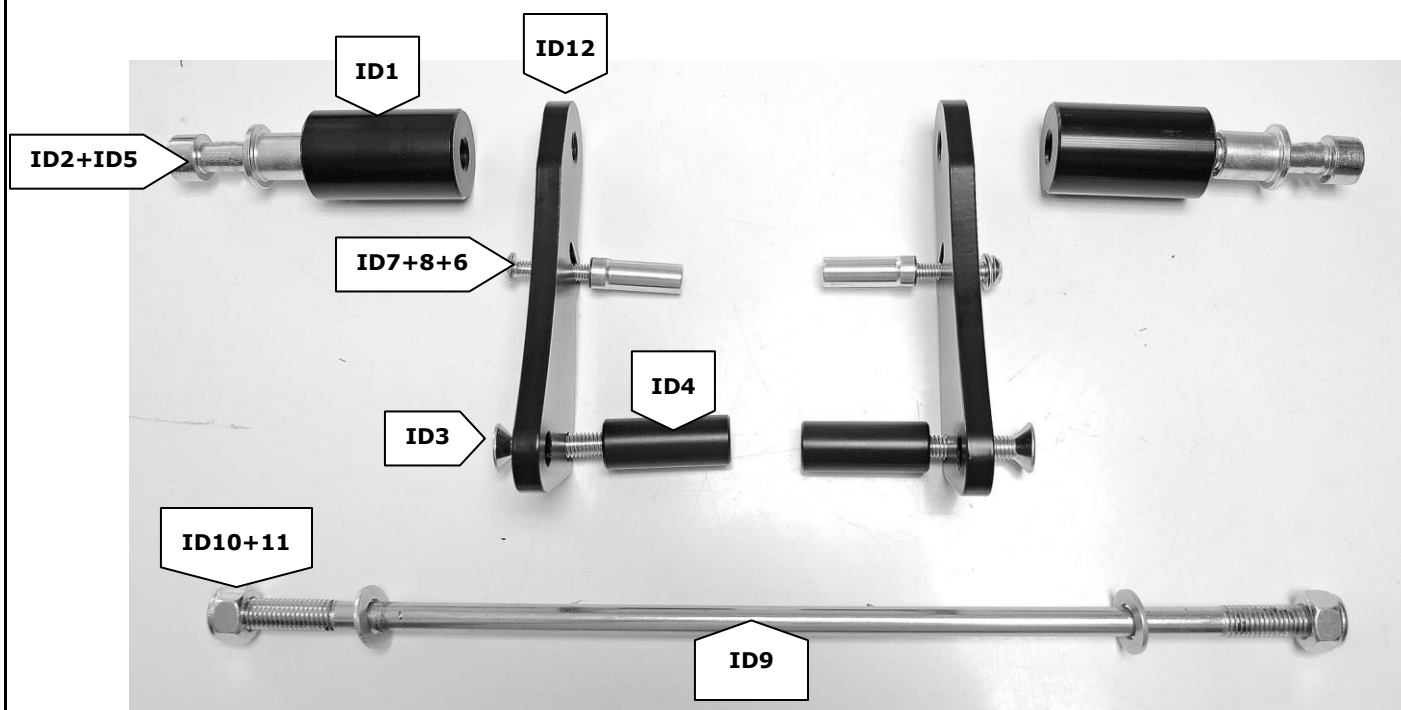

Instructions:

- 1.) We recommend to use the glue on all threads (medium strong).
- 2.) Remove original rod from the frame of motorcycle.
- 3.) Mount kit for protectors according to the picture below.
 - a. Mount Bolt M8 (ID3) with poly spacer (ID4) on the steel adapter (ID12).
 - b. Assembly Bolt M6 (ID7 + washer (ID8)) with alu adapter (ID6) on the steel adapter (ID12).
- 4.) Mount this adapter on the frame using connection rod (ID9).
- 5.) Tighten rod using two M10 safety nuts (ID10 + washer (ID11)).
- 6.) In the end mount protector with dural. cylinder (ID1) and steel insert (ID2) on the steel adapter (ID12) using bolt M10 (ID5).

