

S47S


Suzuki GSX-S1000 '15-

Mounting Kit Left Side:

ID	Description	Cat. No.	Pcs.
1	SL adapter	292	1
2	Bolt M10x30	882	1
3	Dural.roller d=15	1281	2
4	Bolt M10x65x1,25	945	2
5	Plastic cover	X4	2
6	Aluminium adapter- Left side	735	1
7	Bolt M6x25	877	3
8	Bolt M4x16	876	2

Mounting Kit Right Side:

ID	Description	Cat. No.	Pcs.
1	SL adapter	292	1
2	Bolt M10x30	882	1
3	Dural.roller d=15	1281	1
4	Dural.roller d=10mm	1282	1
5	Plastic cover	X4	2
6	Bolt M10x75x1,25	938	1
7	Bolt M10x70x1,25	898	1
8	Aluminium adapter - Right side	734	1
9	Bolt M6x25	877	3
10	Bolt M4x16	876	2

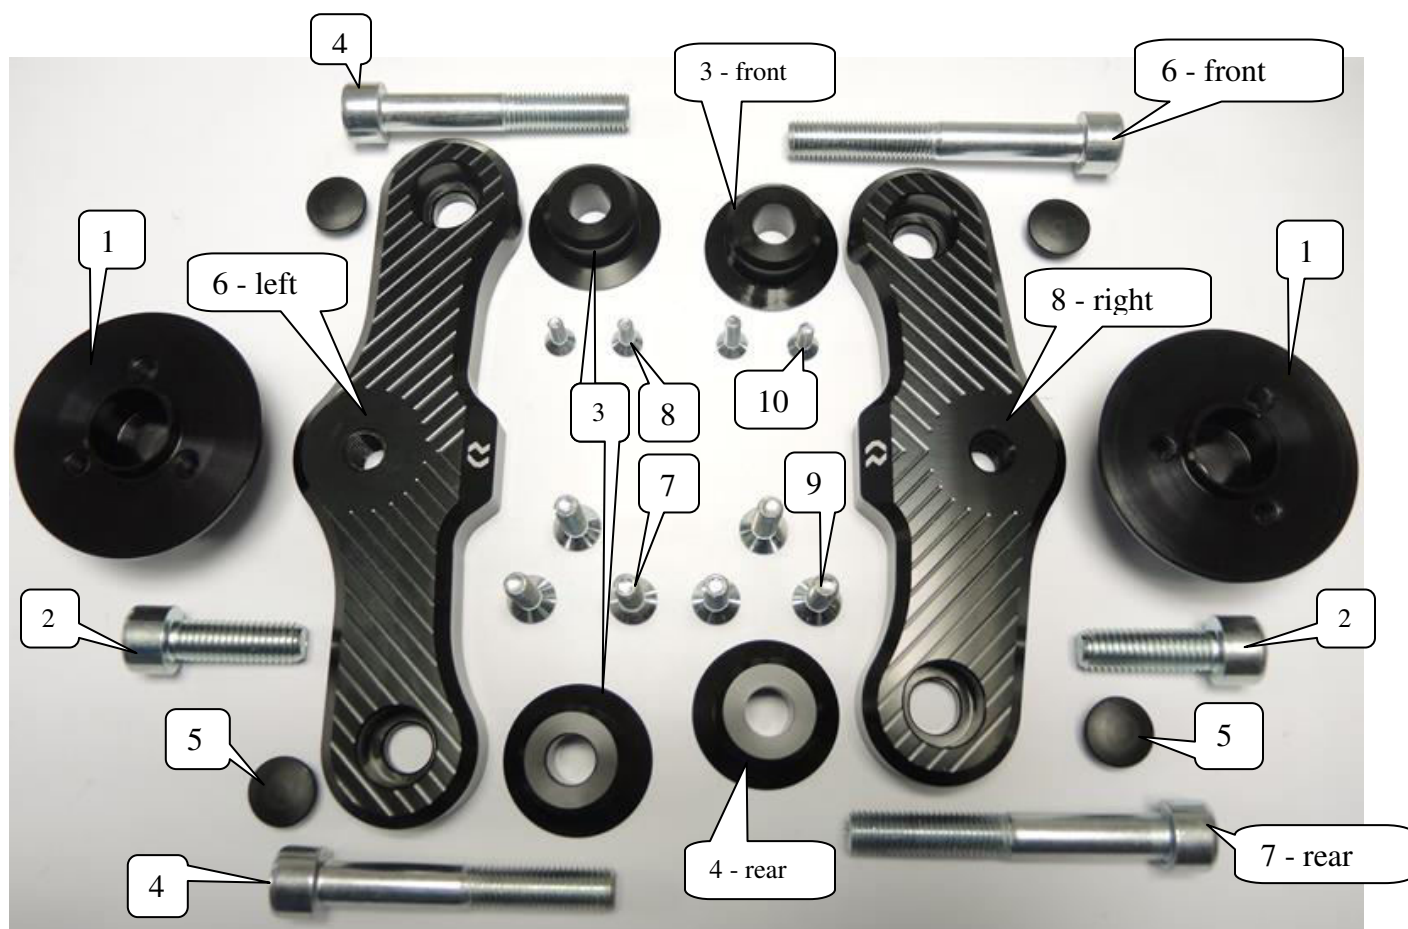

Mounting instructions

1. Unscrew the original bolts on right side.
2. Put the ID.6 bolt into the front part of ID.8 adapter and fit with ID.3 roller. In rear part, do the same with ID.7 bolt and ID.4 roller. Then, mount this assembly into the motorcycle frame.
3. Now put the ID.1 SI Adapter onto the ID.2 bolt and mount into adapter already on your motorcycle.
4. Use the M6 ID.9 bolts to fit the slider and M4 ID.10 bolts to fit the cover.
5. Finally, tighten all screws and fit the ID.5 covers.
6. We recommend fully finishing one side before proceeding with the other.

Note: We recommend using medium strength thread glue (blue color) during assembly.

