

# Y9SDM


## Yamaha R1 2004-2006

### Left Side Fitting Kit:

ID	Description	Cat.no.	Ks
1	SLDM adapter	537/B	1
2	Dural. cylinder 40 mm	DV12	1
3	Bolt M10x60	850	1
4	Washer M6	1023	2
5	Bolt M6x20	1024	2
6	Dural. adapter	583	1
7	Bolt M10x70x1,25	898	1
8	Dural. cylinder 16,5mm	106	1
9	Washer M10	804	1
10	Plastic cap	X4	1
11	3M tape	3M	1

### Right Side Fitting Kit:

ID	Description	Cat.no.	Pcs
1	SLDM adapter	537/B	1
2	Dural. cylinder 30 mm	DV11	1
3	Bolt M10x60	850	1
4	Washer M6	1023	2
5	Bolt M6x20	1024	2
6	Dural. adapter	582	1
7	Bolt M10x100x1,25	892	1
8	Dural. cylinder 27,5mm	107	1
9	Washer M10	804	1
10	Plastic cap	X4	1
11	3M tape	3M	1

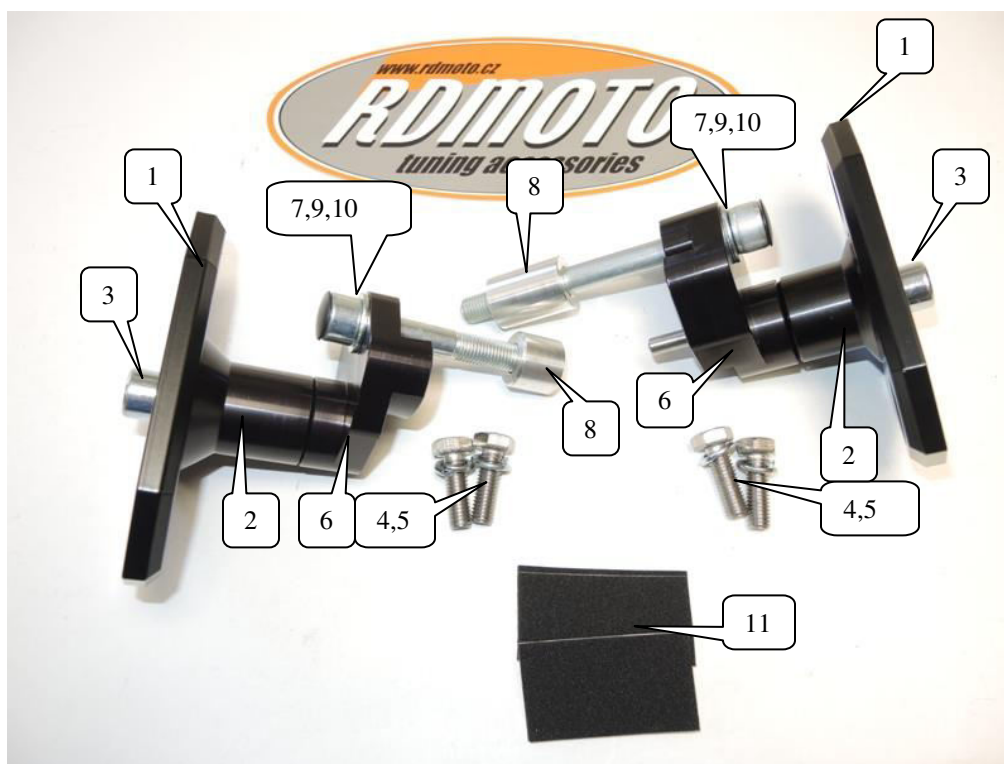

**Instructions for the left side:**

1. Remove original bolt M10 from the frame.
2. Stick 3M tape on the frame of motorcycle to prevent damage from adapter.
3. Prepare bolt ID7 and washer ID9 and put bolt with washer through the adapter ID6.
4. Put cylinder ID8 on the bolt (between frame and adapter). Put adapter on the frame and tighten it. Place plastic cap ID10 on the bolt.
5. Prepare bolt ID3 and put SLDM adapter ID1, cylinder ID2 on it. Fit this kit into the adapter ID6.
6. Fit slider from back side using two bolts ID5 and washers ID4.

**We recommend to use the glue on all threads (blue color – medium strong).**

