

Y34S



Yamaha R3/250 '14-


Kit for left side:

ID	Description	Cat.N	QTY
1	Bolt M10x90x1,25	890	1
2	Bolt M10x85x1,25	934	1
3	Dural. spacer 21mm	1163	1
4	Dural. spacer 30mm	DV3	1
5	Dural. bracket	686	1
6	Dural. adapter	318	1
7	Bolt M10x30	882	1
8	Bolt M6x25	877	3
9	Bolt M4x16	876	2

Kit for right side:

ID	Description	Cat.N	QTY
1	Bolt M10x90x1,25	890	1
2	Bolt M10x85x1,25	934	1
3	Dural. spacer 21mm	1163	1
4	Dural. spacer 30mm	DV3	1
5	Dural. bracket	687	1
6	Dural. adapter	318	1
7	Bolt M10x30	882	1
8	Bolt M6x25	877	3
9	Bolt M4x16	876	2

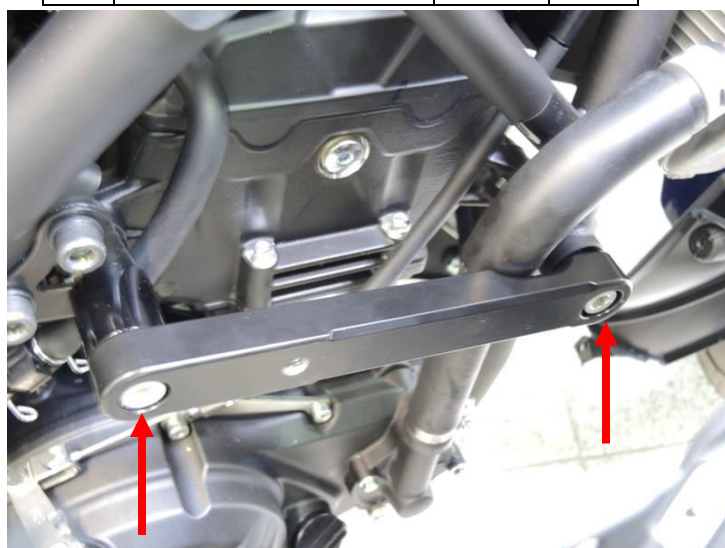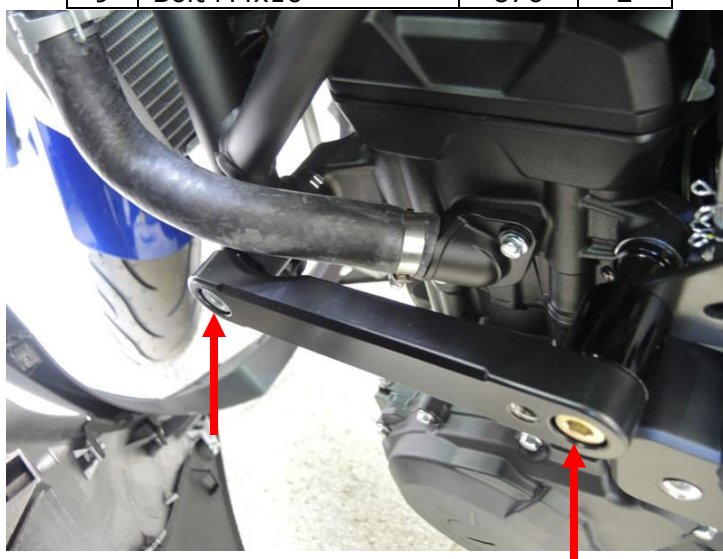

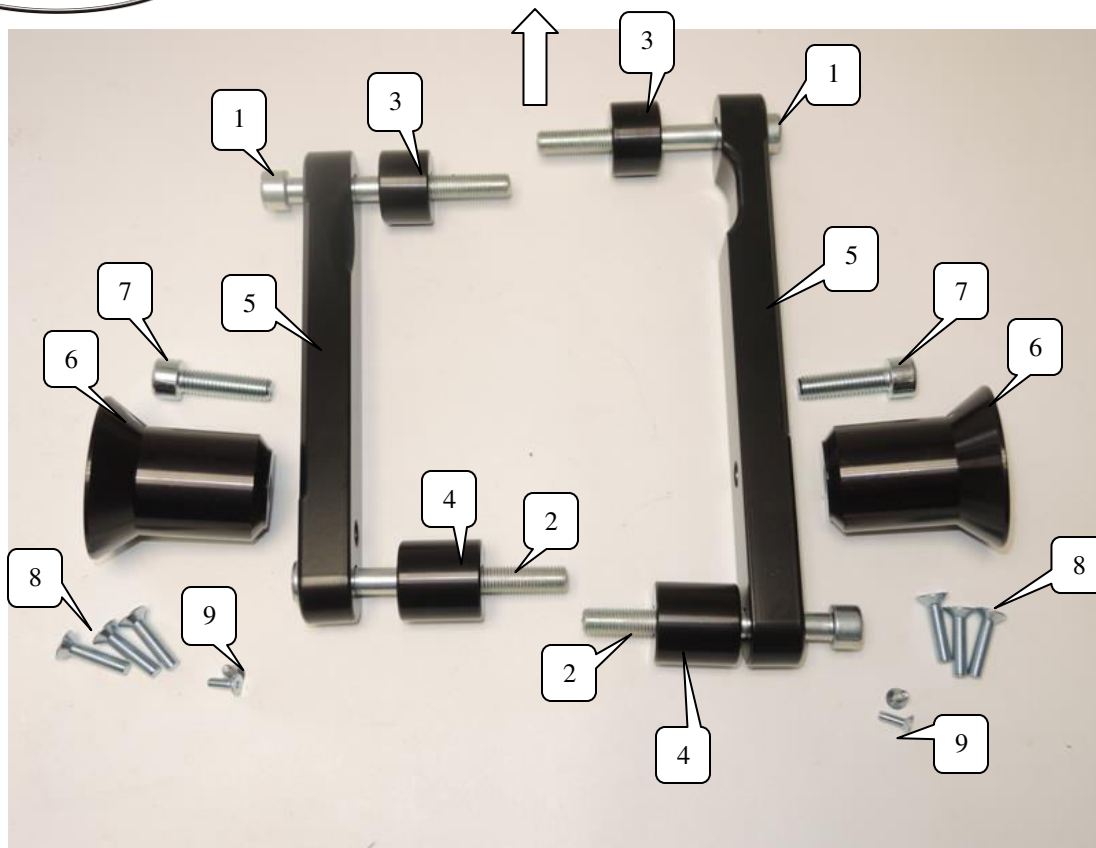

Instruction to assembly:

1. Remove left side fairing of the bike. Remove left side original bolts of the frame as shown arrows on the picture.
2. Put dural. spacer ID.3 into the frame (front) and slightly tighten bolt ID.1. Between the dural. bracket ID.5 and engine bracket insert spacer ID.4. Use bolt ID.2.
3. Tighten both bolts and put fairing back of the bike.
4. Remove right side fairing of the bike. Remove right side original bolts of the frame as shown arrows on the picture.
5. Put dural. spacer ID.3 into the frame (front) and slightly tighten bolt ID.1. Between the dural. bracket ID.5 and engine bracket insert spacer ID.4. Use bolt ID.2.
6. Tighten both bolts and put fairing back of the bike.
7. **Left side:** For mounting dural. adapter ID.6 use bolt ID.7. Put slider on the adapter and tighten it by bolts ID.8. Insert aluminum cover and tighten it by bolts ID.9.
8. **Right side:** For mounting dural. adapter ID.6 use bolt ID.7. Put slider on the adapter and tighten it by bolts ID.8. Insert aluminum cover and tighten it by bolts ID.9.

Warning: We recommend use the glue of all threads. Medium strong.