

# KTM5


## KTM RC 125/200/390 2014-

### Kit for the left side

No.	Description	Cat.no.	Pcs
1	Left mounting plate	678	1
2	Clamp spacer 22mm	680	1
3	Thread clamp 22mm	682	1
4	Clamp spacer 16mm	681	1
5	Thread clamp 16mm	683	1
6	Bolts M6x35 button head	989	4
7	Steel box	X1	1
8	Dural spacer d=60mm	DV 6	1
9	Bolt M10x100	885	1

### Kit for the right side

No.	Description	Cat.no.	Pcs
1	Right mounting plate	679	1
2	Clamp spacer 22mm	680	1
3	Thread clamp 22mm	682	1
4	Clamp spacer 16mm	681	1
5	Thread clamp 16mm	683	1
6	Bolts M6x35 button head	989	4
7	Steel box	X1	1
8	Dural spacer d=60mm	DV 6	1
9	Bolt M10x100	885	1

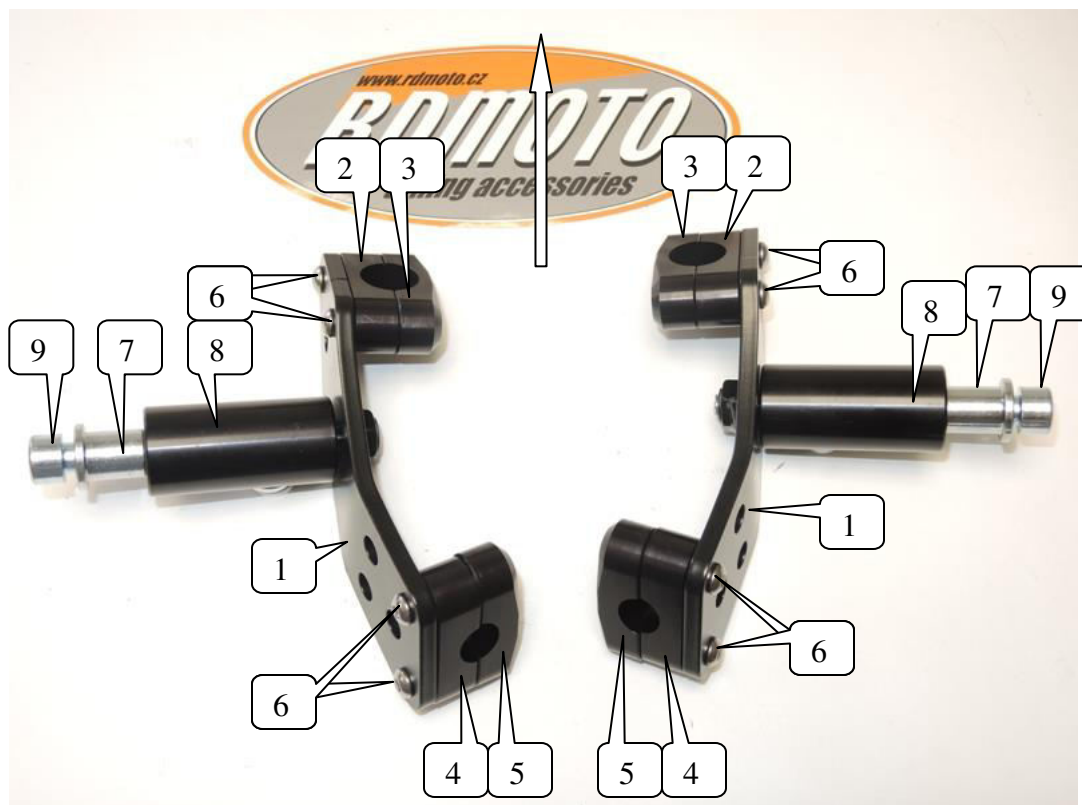

**Instruction to assembly left hand side:**

1. Remove the fairing original bolts M8.
2. Place the clamp spacer ID.2 and ID.4.
3. Place the appropriate threaded clamps ID.3 and ID.5 around the frame and secure using the M6x35 bolts ID.6.
4. Place the steel box ID.7 into the protector, protector with steel box place onto bolt ID.9, next under the protectors place dural.spacer ID.8.
5. This kit assembly into the threaded hole in the mounting plate ID.1 and tighten ensuring.

**Instruction to assembly right hand side:**

1. Remove the fairing original bolts M8.
2. Place the clamp spacer ID.2 and ID.4.
3. Place the appropriate threaded clamps ID.3 and ID.5 around the frame and secure using the M6x35 bolts ID.6.
4. Place the steel box ID.7 into the protector, protector with steel box place onto bolt ID.9, next under the protectors place dural.spacer ID.8.
5. This kit assembly into the threaded hole in the mounting plate ID.1 and tighten ensuring.

**Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).**

