

A10


Aprilia V4 Tuono 2011-

Mounting kit Left Side:

ID	Description	Cat.no	Pc
1	Aluminium Insert M10	X1	1
2	Bolt M10x75mm	1007	2
3	Bolt M10x55mm	1002	1
4	Dural. roller d=20mm	2	1
5	Dural. roller d=20,7mm	459	2
6	Dural. adapter	501	1
7	Plastic cover M10	X4	2

Mounting kit Right Side:

ID	Description	Cat.No.	Pc
1	Aluminium Insert M10	X1	1
2	Bolt M10x90mm	880	2
3	Bolt M10x55mm	1002	1
4	Dural. roller d=20mm	2	1
5	Dural. roller d=20,7mm	459	2
6	Dural. Adapter	500	1
7	Plastic cover M10	X4	2

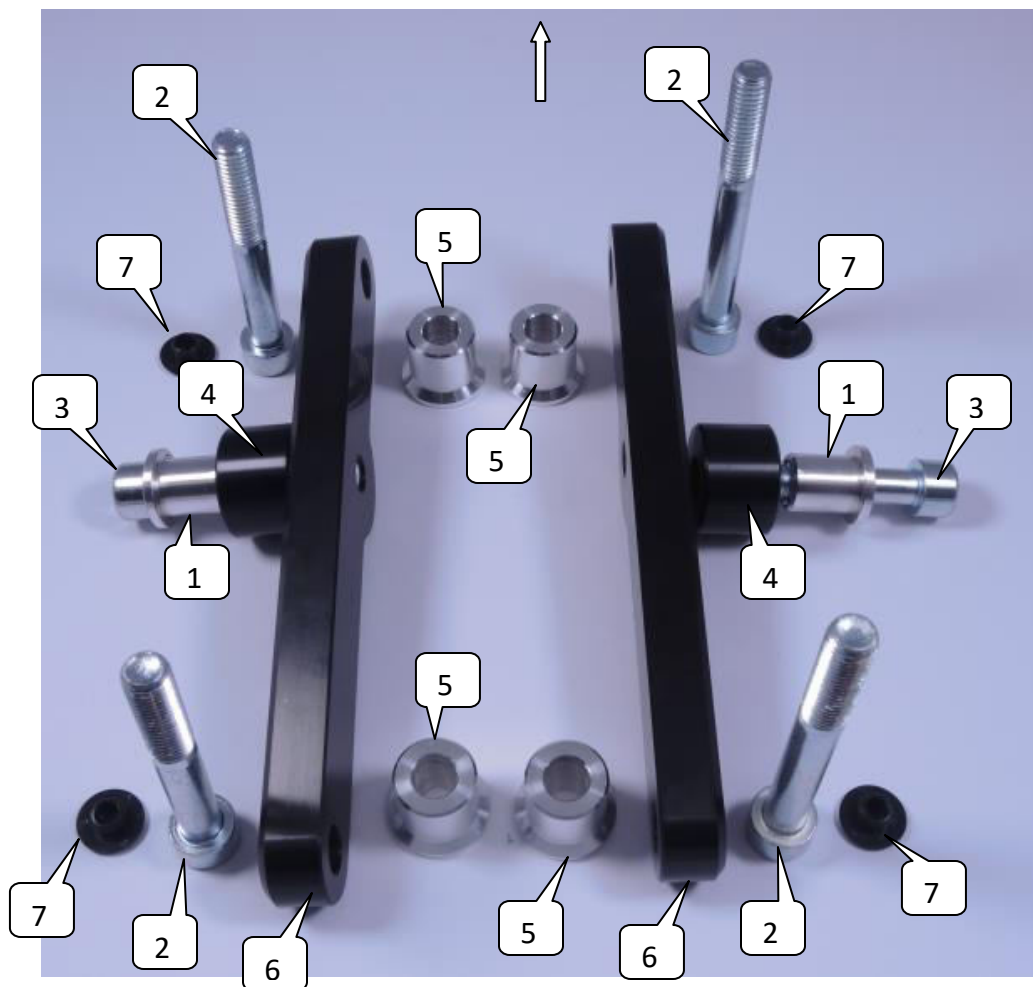

Mounting Kit Left Side:

1. Unmount the original side plastic and M10 bolts from motorcycle frame.
2. Mount the dural. adapter (ID.6) onto the motorcycle frame (see place of fitment at the bottom picture).
3. Now insert the dural. rollers (ID.5) under the dural. adapter and tighten the bolts (ID.2). Place ID.7 plastic covers on top of the bolts.
4. Equip ID.3 bolt with ID.1 aluminium insert. Then insert ID.4 dural. roller underneath the protector and tighten with the ID.3 bolt.

Mounting Kit Right Side:

Mounting instructions for right side are the same as on the left.

1. Unmount the original side plastic and M10 bolts from motorcycle frame.
2. Mount the dural. adapter (ID.6) onto the motorcycle frame (see place of fitment at the bottom picture).
3. Now insert the dural. rollers (ID.5) under the dural. adapter and tighten the bolts (ID.2). Place ID.7 plastic covers on top of the bolts.
4. Equip ID.3 bolt with ID.1 aluminium insert. Then insert ID.4 dural. roller underneath the protector and tighten with the ID.3 bolt.

Note: We recommend using medium strenght thread glue during assembly.

