

BN9SD

Benelli 752S 2019-

Mounting Kit Left Side:

Mounting Kit Right Side:

ID	Description	Cat.No	Pcs
1	Dural. roller l=30mm	11	1
2	Bolt M10x180mm	978	1
3	Dural. roller l=40,5mm	1327	1
4	Nut M10 - insuriance	810	1
5	Adapter SLD	537	1
6	Bolt M8x25mm	815	2
7	Washer M8 - insuriance	800	2

ID	Description	Cat.No	Pcs
1	Dural. roller d=30mm	11	1
2	Bolt M10x50mm	849	1
3	Dural. bolt l=20mm	447	1
4	Dural.roller l=39mm	1328	1
5	Adapter SLD	537	1
6	Bolt M8x25mm	815	2
7	Washer M8 - insuriance	800	2


Mounting kit :




Mounting Instructions – Right Side:

1. Remove the original plastic cover in the motorcycle frame.
2. Mount the dural. roller (ID. 4) in the frame.
3. Install the dural. screw (ID.3) into the dural. roller.
4. Now take the M10x50mm screw (ID.2), slide the SLD adapter (ID.5) and the dural. roller (ID.1) onto the screw.
5. Mount the entire assembly to the dural. screw on the motorcycle.
6. Mount the SLD slider itself on the adapter with M8x25mm screws (ID.6) with M8 washers (ID.7)

Note: We recommend using medium strenght thread glue during assembly (blue).

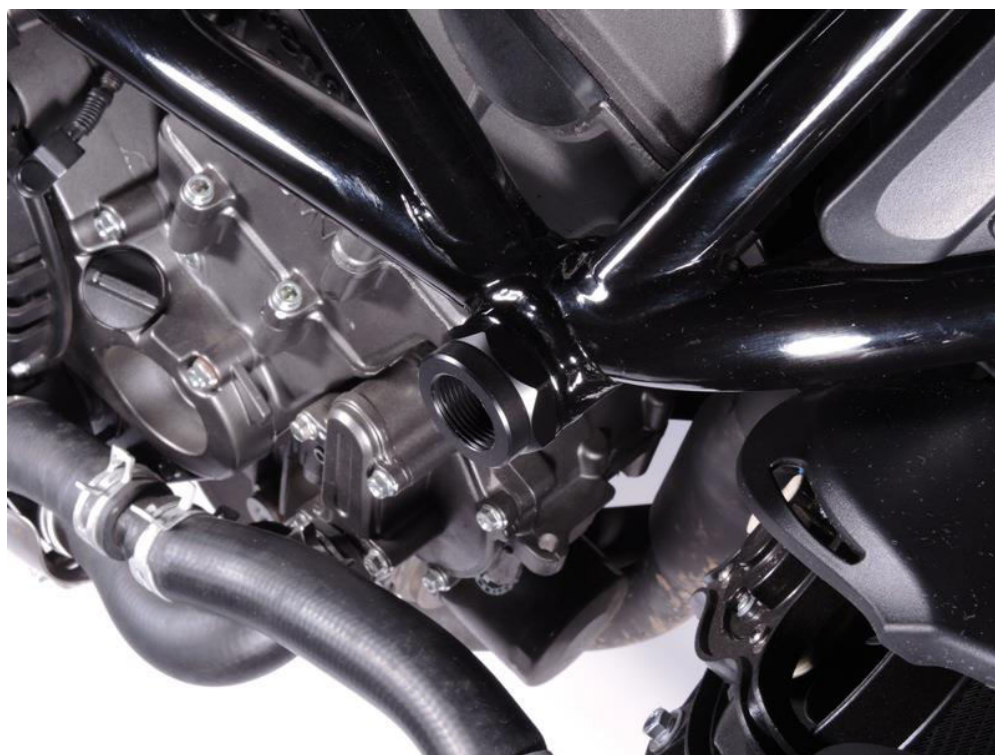

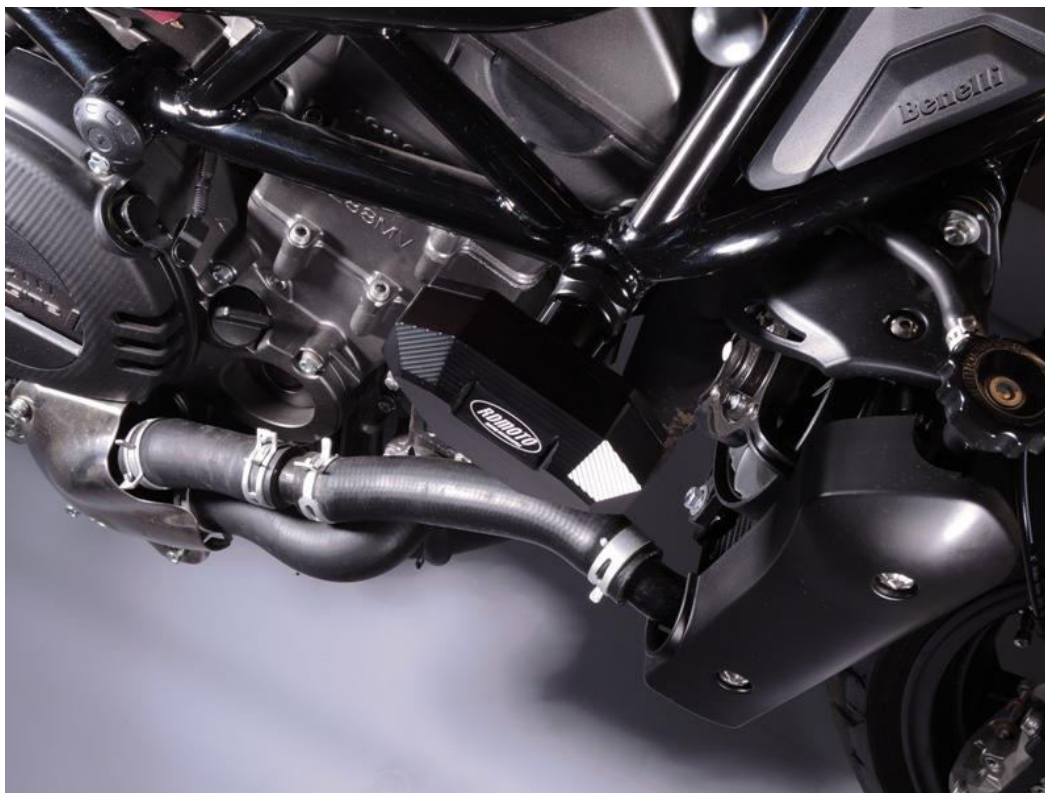

Mounting Instructions – Left Side:

1. Remove the original plastic cover in the motorcycle frame
2. Insert the dural. roller (ID.3) into the frame
3. Now take the screw M10x180mm (ID.2), slide the SLD adapter (ID.5) and the dural. roller (ID.1) onto the screw.
4. Mount the assembly to the motorcycle frame, secure with an M10 nut (ID.4) from the back.
5. Mount the SLD slider itself on the adapter with M8x25mm screws (ID.6) with M8 washers (ID.7)

Note: We recommend using medium strenght thread glue during assembly (blue).

