



CF192

Benelli TRK702

Kit for left side:

ID.	Description	Cat.No.	Pcs.
1	Crash protector	N111	1
2	Dural.roller l=15mm	1218	1
3	Bolt M10x160x1,25mm	929	1
4	3M tape		2
5	Washer M10	804	1
6	Bolt M8x16mm	829	1
7	Washer M8	802	2
8	Bolt M6x35mm	989	3
9	Washer M6	947	4
10	Dural.roller l=5mm	433	1
11	Bolt M8x30mm	834	3
12	Dural.adapter	680	1
13	Dural.adapter with threads	682	1
14	Dural.roller l=5mm	478	1
15	Nut M6-insurance	948	1
16	Dural.roller l=16,5mm	106	1
17	Bolt M8x40mm	828	1
18	Sticker RDmoto		2


Kit for right side:

ID.	Description	Cat.No.	Pcs.
1	Crash protector	N111	1
2	Dural.roller l=15mm	1218	1
3	Bolt M10x180x1,25mm	969	1
4	3M tape		2
5	Washer M10	804	1
6	Bolt M8x16mm	829	1
7	Washer M8	802	1
8	Bolt M6x35mm	989	2
9	Washer M6	947	2
10	Dural.roller l=5mm	433	1
11	Bolt M8x30mm	834	2
12	Dural.adapter	680	1
13	Dural.adapter with threads	682	1
14	Dural.roller l=5mm	456	1

The assembly process:


During assembly, we recommend using thread glue - medium strength (blue).

Main attachment (L+R side) :

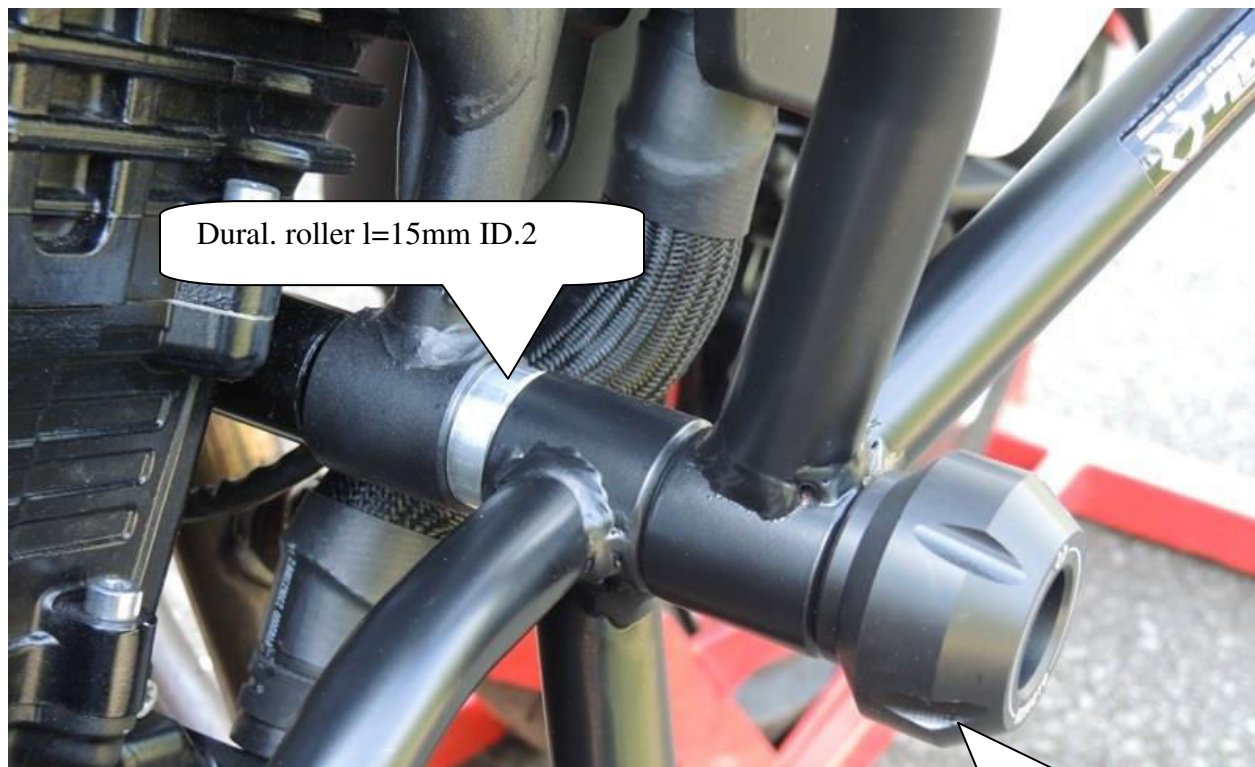

Bolt M10x160x1,25mm ID.3 (for left attachment) or bolt M10x180x1,25mm ID.3 (for right attachment) + washer M10 ID.5 + original nut M10 + protector ID.1 + bolt M8x16mm ID.6 + washer M8 ID.7


Mounting under light :

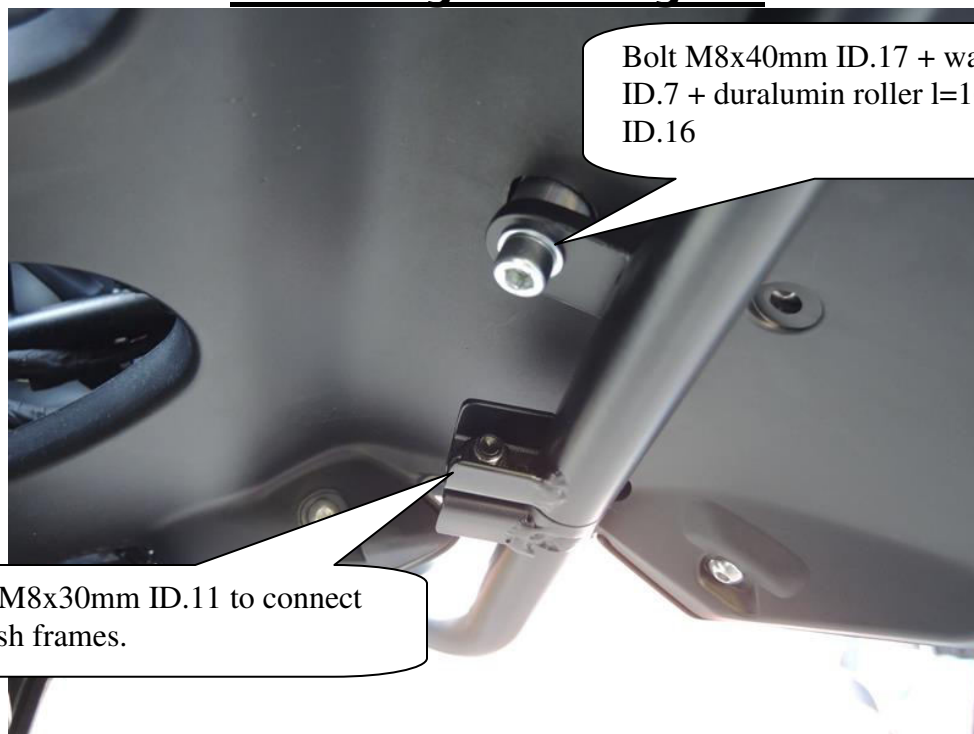

Bolt M8x40mm ID.17 + washer M8 ID.7 + duralumin roller l=16.5mm ID.16


Screw M8x30mm ID.11 to connect the crash frames.

Side attachment :

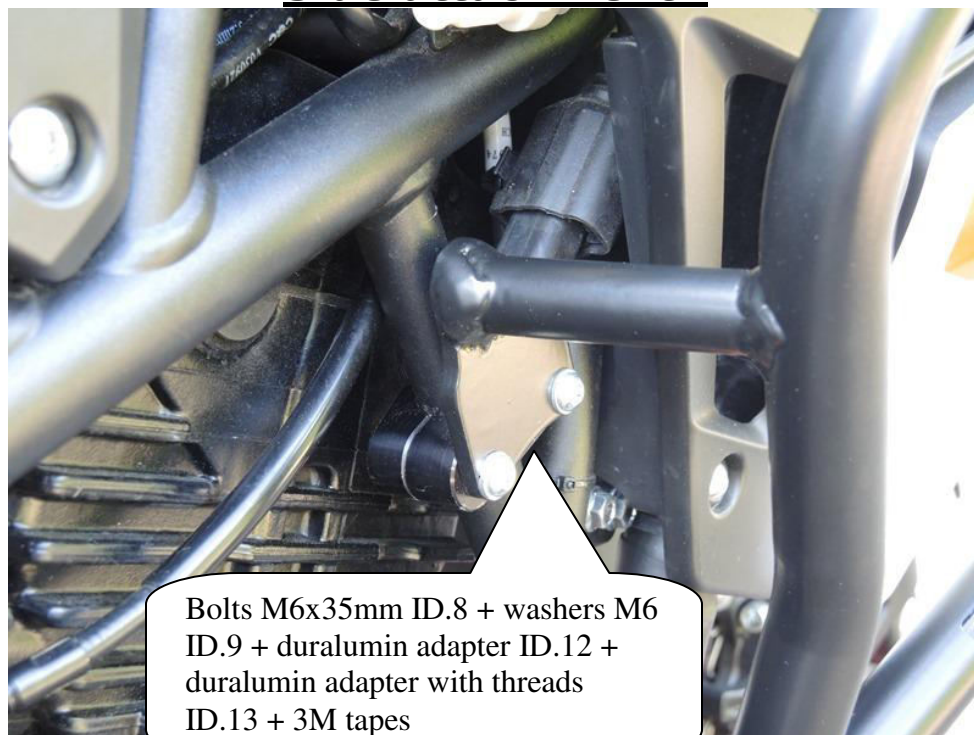

Bolts M6x35mm ID.8 + washers M6 ID.9 + duralumin adapter ID.12 + duralumin adapter with threads ID.13 + 3M tapes


Left side – under attachment :

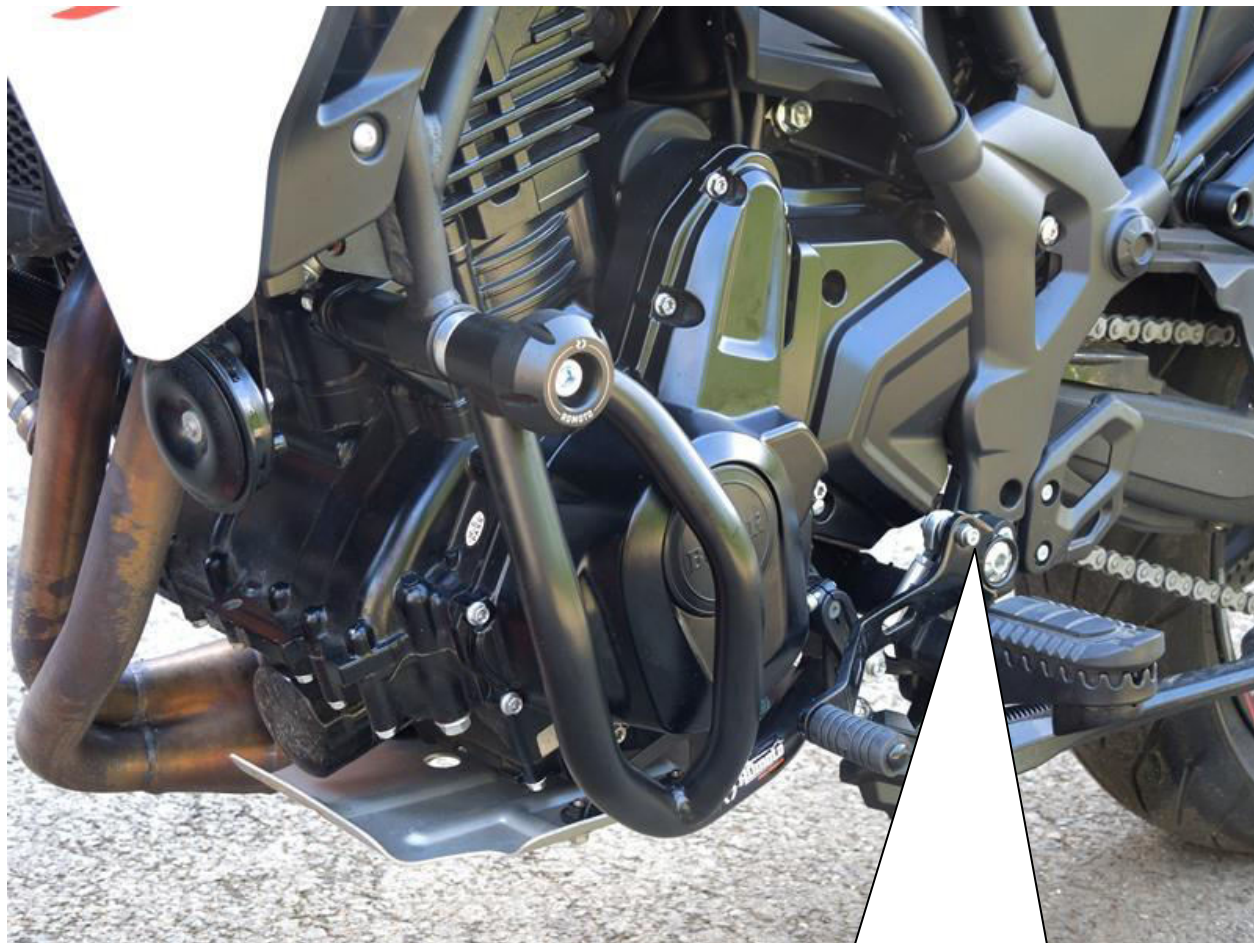

Loosen the original footrest holder, insert a duralumin roller l=5mm, diameter 19.8mm ID.10 under the upper attachment, insert the crash frame under the lower attachment and tighten the M8x30mm ID.11 bolts at both points.

Dismantle the bolt that holds the shift lever rod and use a duralumin roller l=5mm, diameter 16mm ID.14 to center it. Put M6 ID.9 washers on both sides of the roller and tighten with M6x35mm ID.8 bolt and M6 ID.15 nut.

Right side – under attachment :

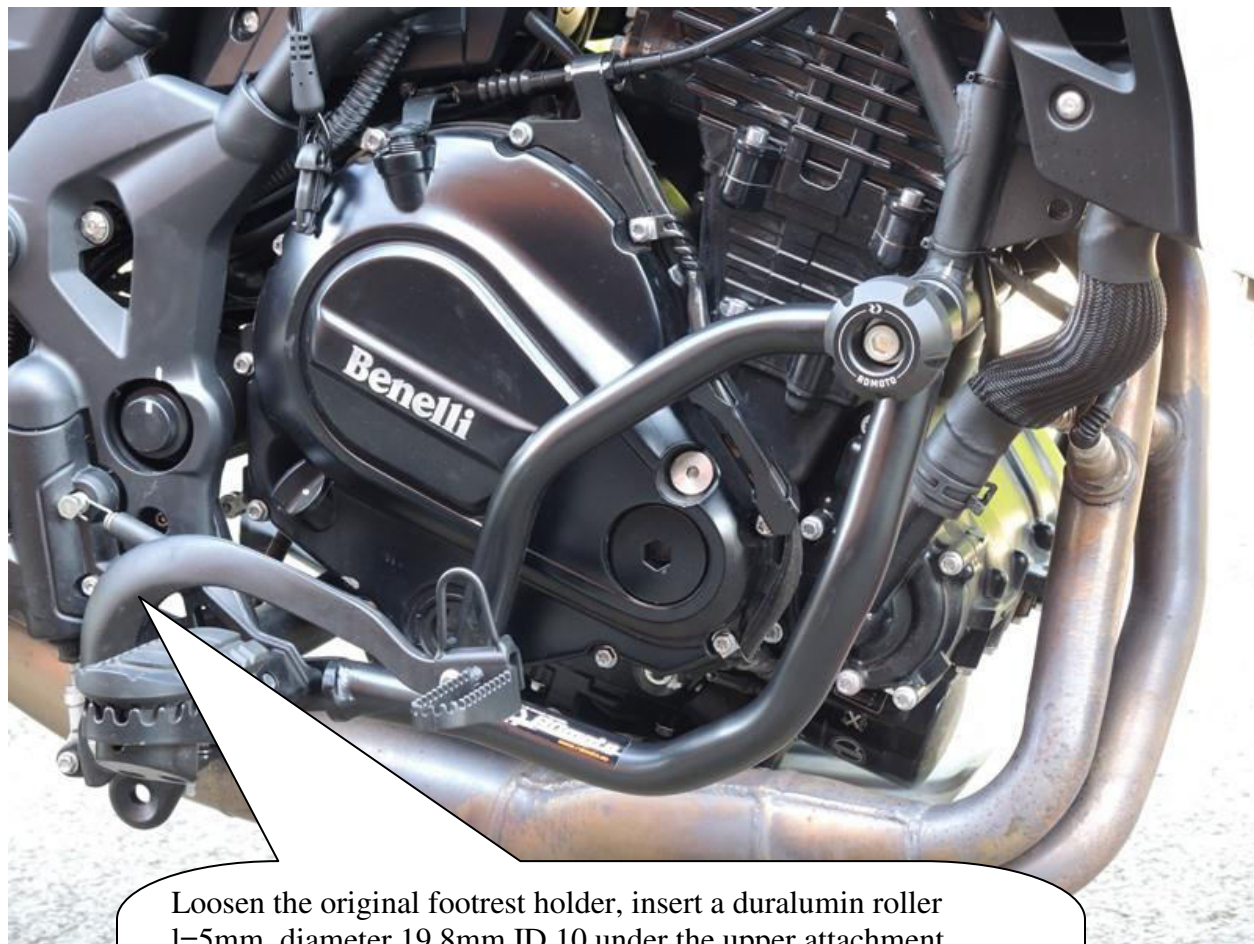

Loosen the original footrest holder, insert a duralumin roller l=5mm, diameter 19.8mm ID.10 under the upper attachment, insert the crash frame under the lower attachment and tighten the M8x30mm ID.11 bolts at both points.

Disassemble the bolt that holds the brake and insert the roller l=5mm, diameter 24.8mm ID.14 under the brake, remove the original bolt.