



CF173

Honda Transalp 750 2023-

Kit for left side:

ID.	Description	Cat.No.	Pcs.
1	Steel adapter	X151	1
2	Bolt M10x75x1,25mm	938	2
3	Nut M10x1,25mm	1071	2
4	Bolt M8x20mm	824	2
5	Washer M8-flat	802	3
6	Dural.roller l=6mm	453	1
7	Bolt M8x25mm	833	1
8	Sticker RDmoto		2


Kit for right side:

ID.	Description	Cat.No.	Pcs.
1	Steel adapter	X123	1
2	Bolt M10x75x1,25mm	938	2
3	Nut M10x1,25mm	1071	2
4	Bolt M8x20mm	824	2
5	Washer M8-flat	802	3
6	Dural.roller l=6mm	453	1

We recommend using medium strength thread glue during assembly.

Left side :

The assembly of the left and right sides is the same.
First install the steel adapters and then you can install
the crash frames. For assembly use: steel adapters
ID.1 + bolts M10x75x1.25mm ID.2 + nuts
M10x1.25mm ID.3 + bolts M8x20mm ID.4 +
washers M8 ID.5

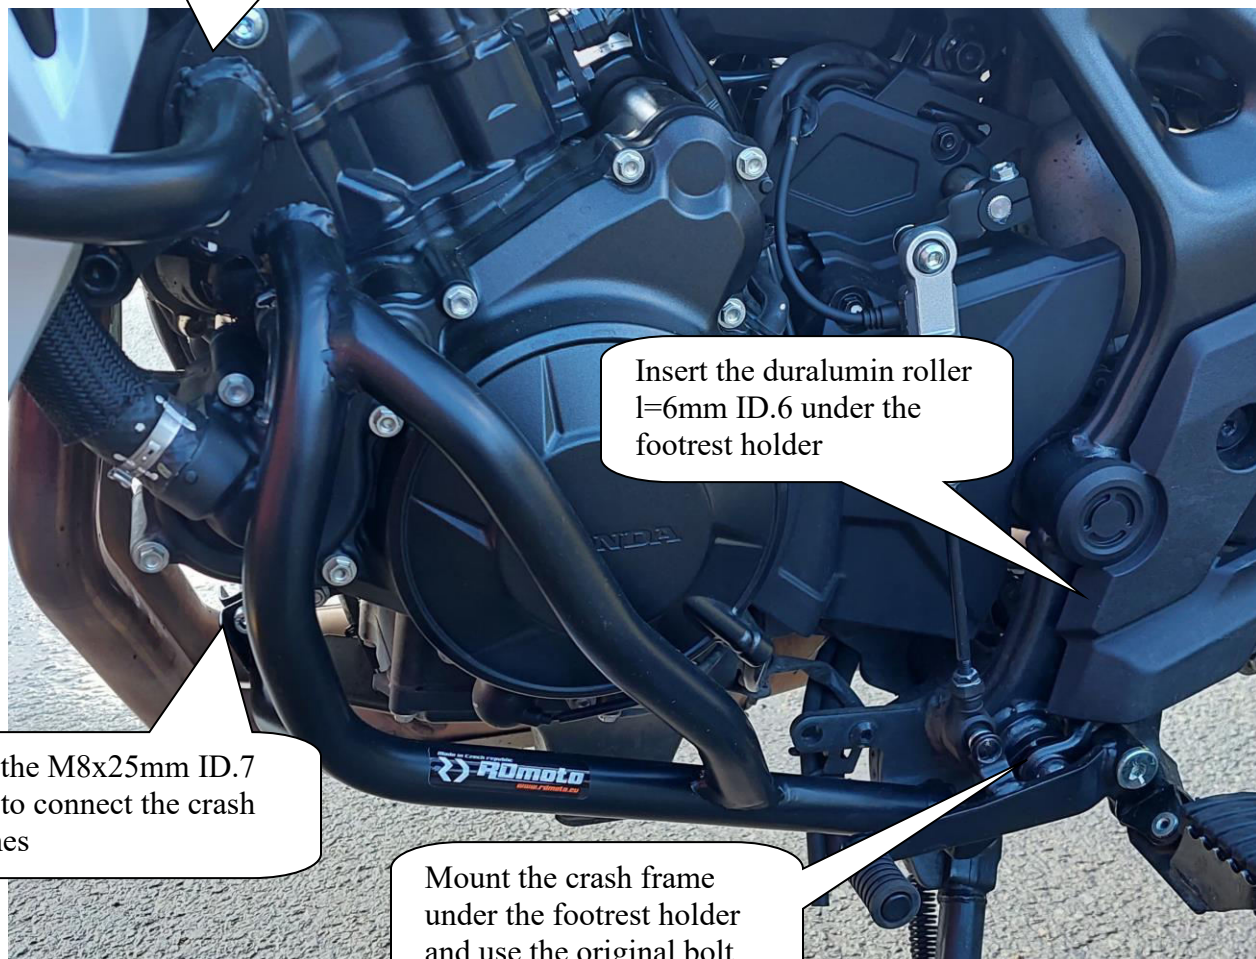


Insert the duralumin roller
l=6mm ID.6 under the
footrest holder

Use the M8x25mm ID.7
bolt to connect the crash
frames

Mount the crash frame
under the footrest holder
and use the original bolt

Right side :

The assembly of the left and right sides is the same. First install the steel adapters and then you can install the crash frames. For assembly use: steel adapters ID.1 + bolts M10x75x1.25mm ID.2 + nuts M10x1.25mm ID.3 + bolts M8x20mm ID.4 + washers M8 ID.5

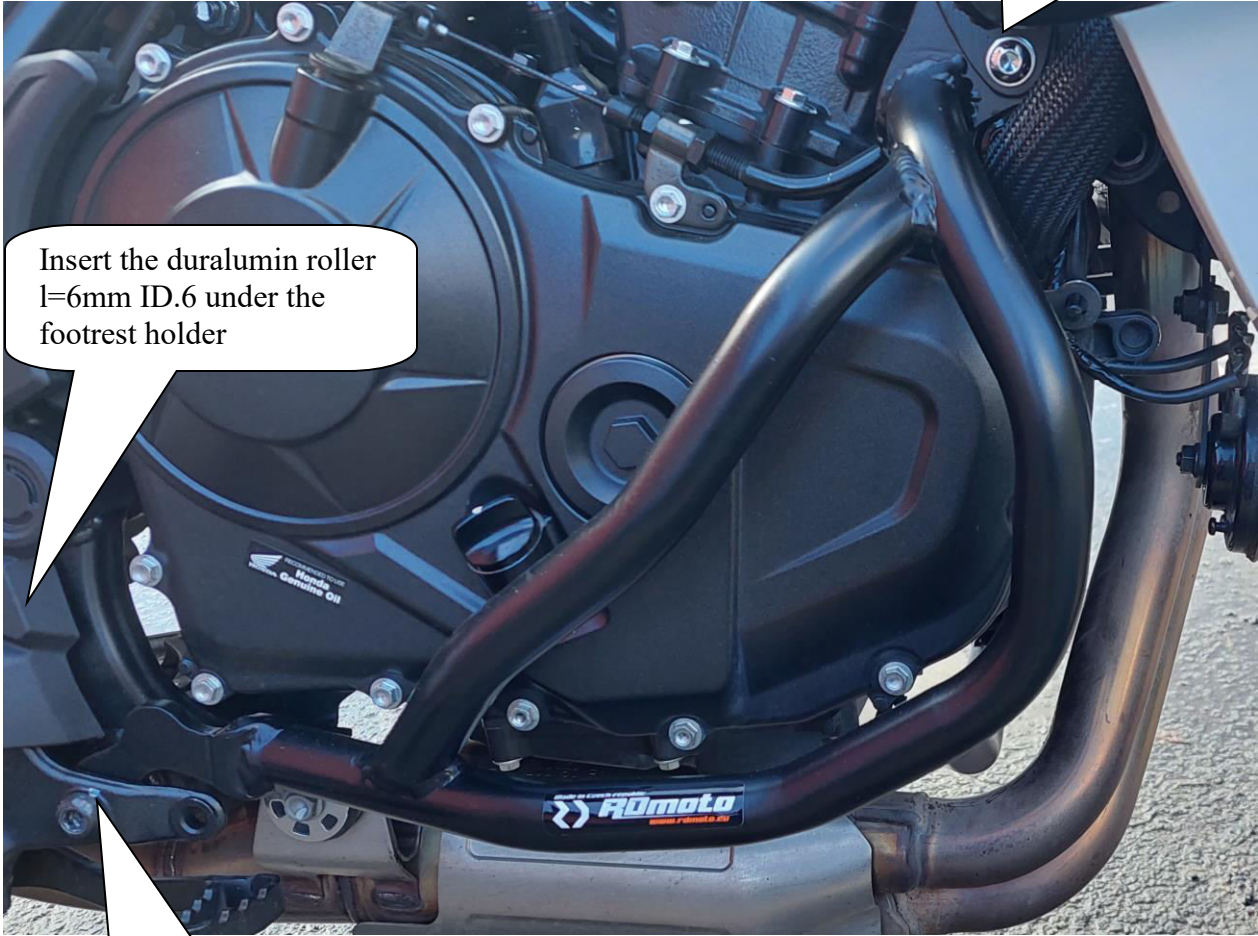

Insert the duralumin roller
l=6mm ID.6 under the
footrest holder

Mount the crash frame
under the footrest holder
and use the original bolt