



RDMOTO CZECH REPUBLIC
info@rdmoto.eu
www.rdmoto.eu

CF176-PH01

CFmoto NK800

Kit for left side


ID	Description	Cat.No.	Pcs
1	Protector	PVPKN-0/16	1
2	Dural.insert to the protector	X131	1
3	Steel adapter	771	1
4	Bolt M10x110mm	879	1
5	Bolt M10x60mm	973	2
6	Dural.roller l=10mm	111	1
7	Dural.roller l=8,5mm	1399	1
8	Bolt M10x30mm	846	1
9	Dural.roller l=32,5mm	427	1
10	Bolt M10x100mm	885	1
11	Washer M10	804	1
12	Plastic roller l=25mm	1345	1
13	Dural.rod l=253mm	AL18(M10)x253x30x30	1
14	Sticker RDmoto		1

Kit for right side


ID	Description	Cat.No.	Pcs
1	Protector	PVPKN-0/16	1
2	Dural.insert to the protector	X131	1
3	Steel adapter	772	1
4	Bolt M10x85mm	981	1
5	Bolt M10x60mm	973	2
6	Dural.roller l=13mm	1155	1
7	Dural.roller l=11mm	110	1
8	Bolt M10x30mm	846	1
9	Dural.roller l=27,5mm	107	1
10	Bolt M10x110mm (kužel)	1051	1
11	Sticker RDmoto		1

Note: We recommend using medium strenght thread glue for all bolts (blue color).

Left side :

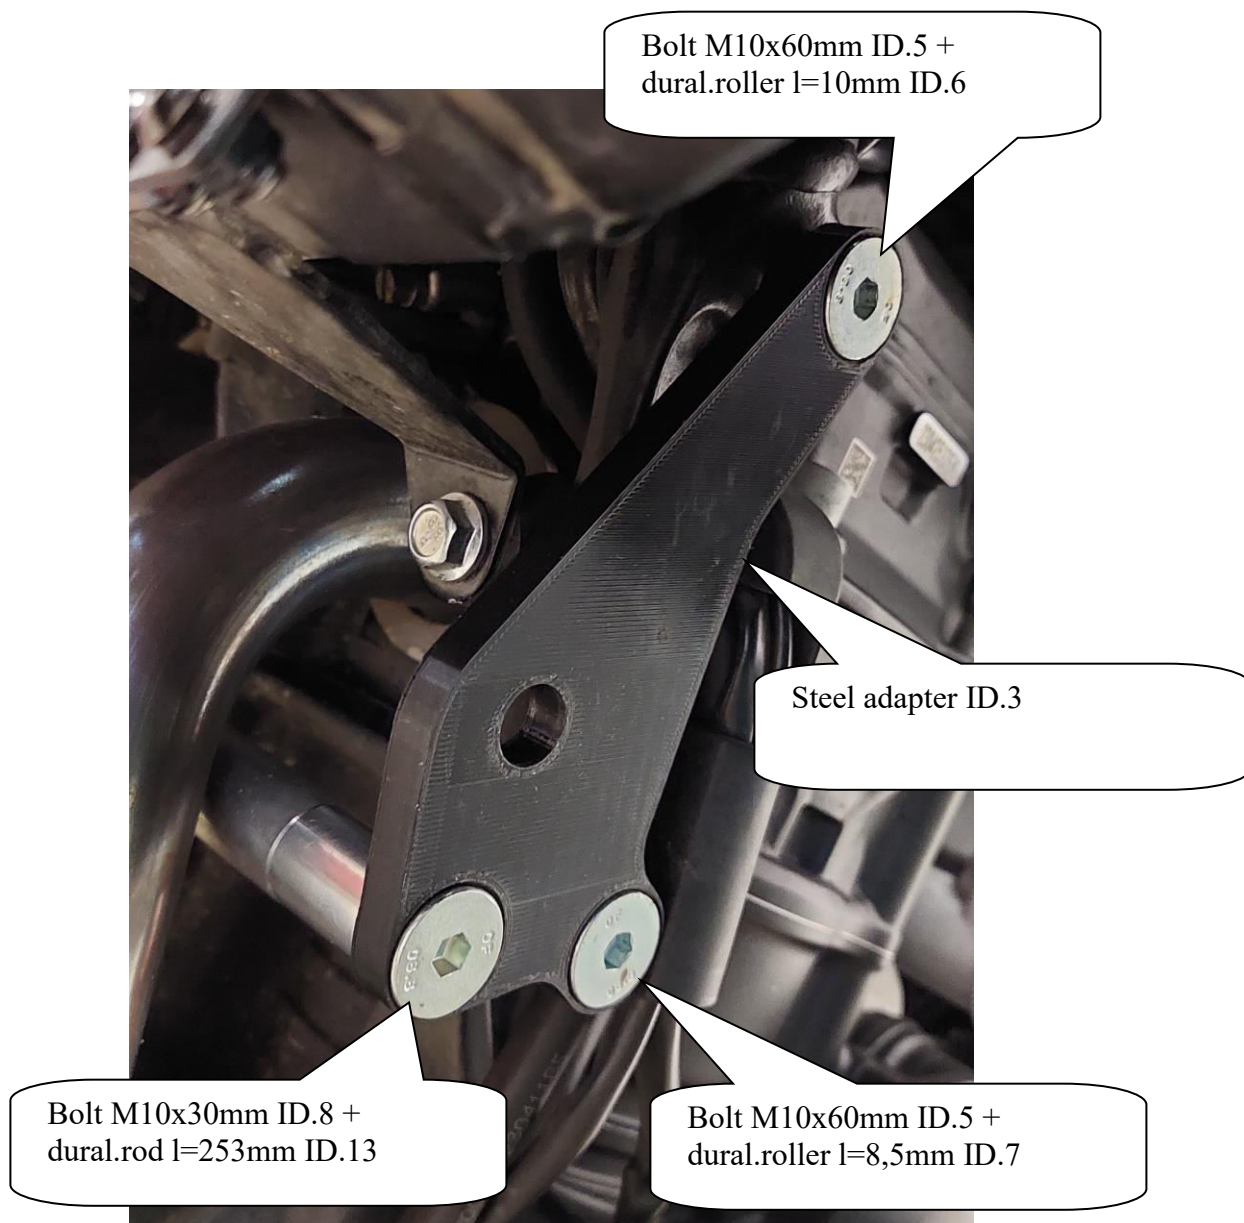

Bolt M10x110mm ID.4 + Al insert for protector ID.2 + crash protector ID.1 + plastic roller under protector l=25mm ID.12

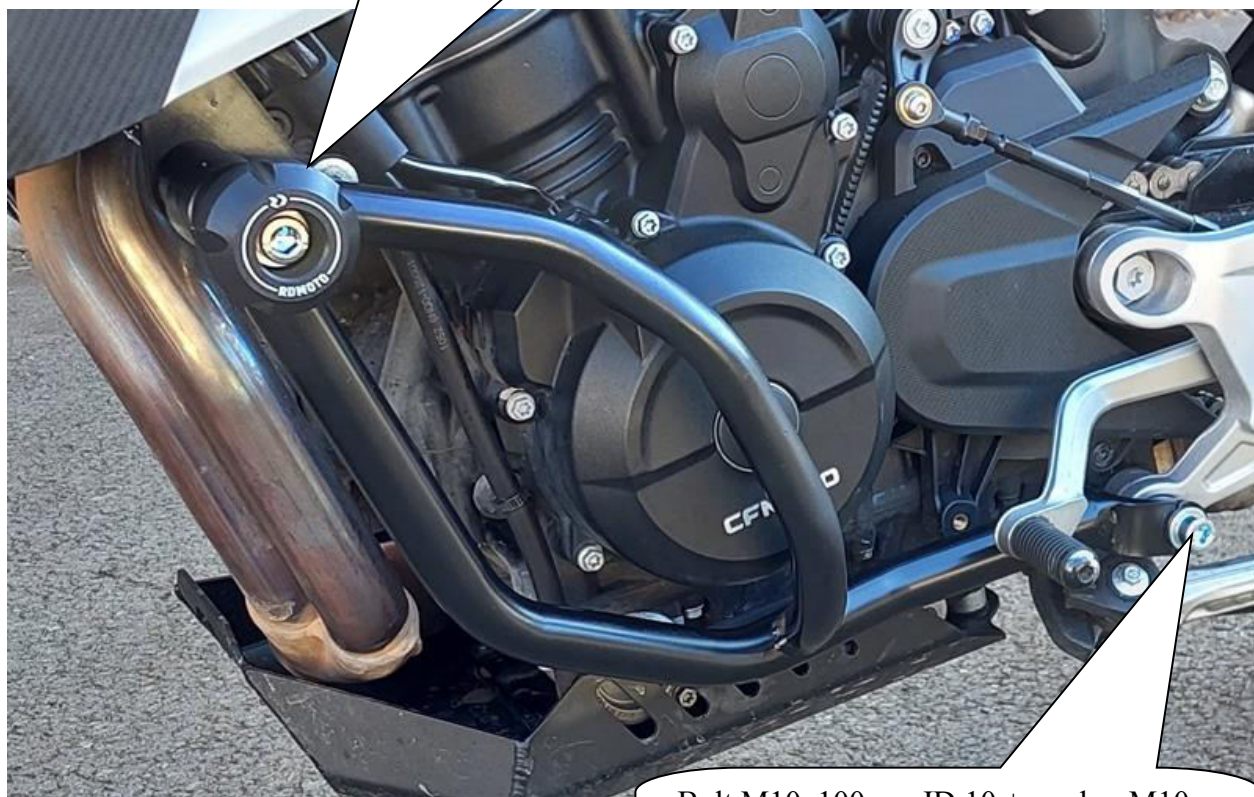

Bolt M10x100mm ID.10 + washer M10 ID.11 + dural. roller l=32.5mm ID.9

Right side :

Bolt M10x60mm ID.5 +
dural.roller l=13mm ID.6

Steel adapter ID.3

Bolt M10x60mm ID.5 +
dural.roller l=11mm ID.7

Bolt M10x30mm ID.8

Bolt M10x85mm ID.4 + Al insert for
protector ID.2 + crash protector ID.1



Bolt M10x110mm ID.10 + dural.roller
l=27,5mm ID.9