

H7-2


Honda CBR600RR 2007-2008

Kit for the left side

ID	Description	Cat.no.	QTY
1	Steel box M12	X2	1
2	Bolt M12x100x1,25mm	911	1
3	Dural. cylinder d=20mm	425	1

Kit for the right side

ID	Description	Cat.no.	QTY
1	Steel box M12	X2	1
2	Bolt M12x100x1,25mm	911	1
3	Dural. cylinder d=20mm	425	1

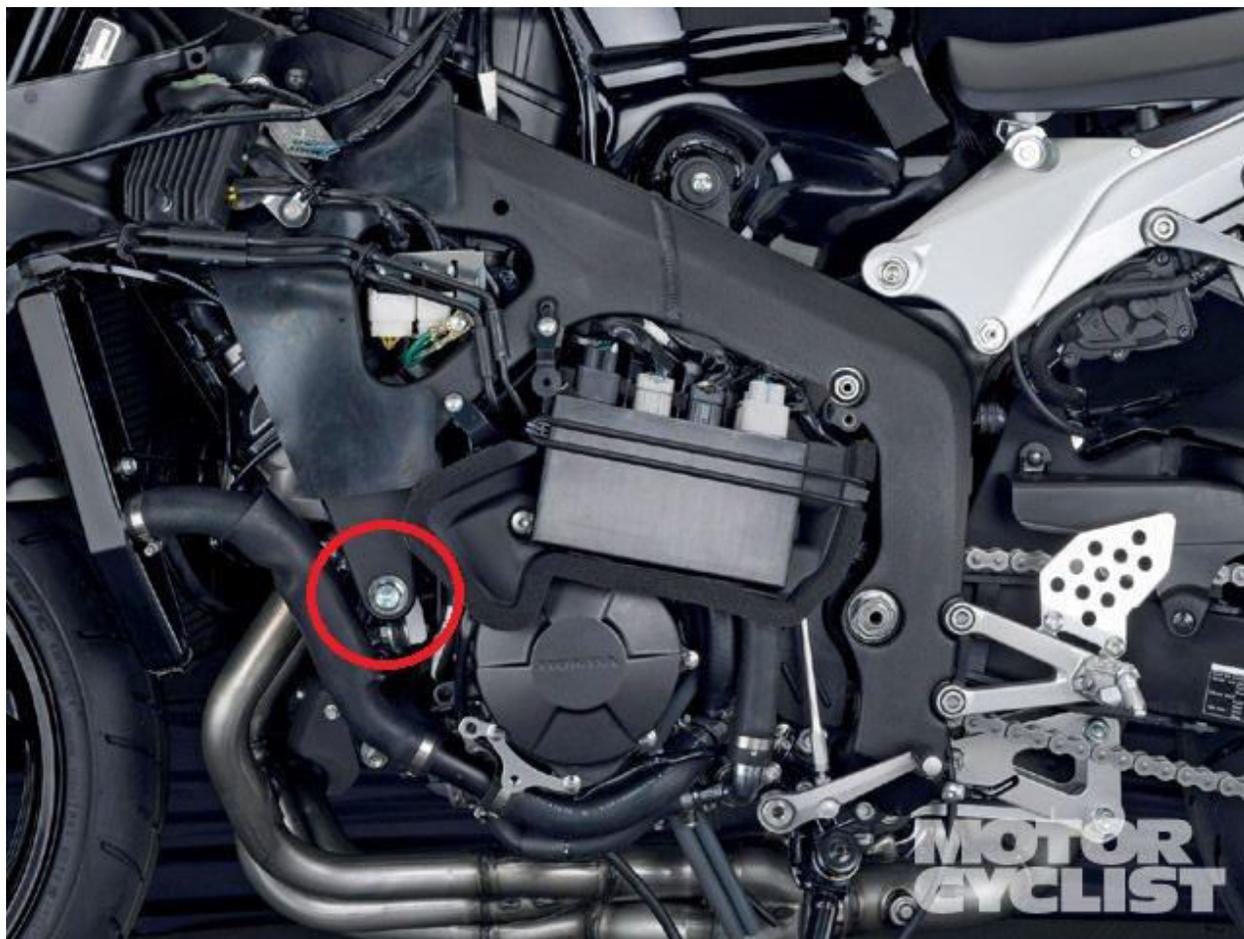

Installation:

You will have to drill the hole in the cowl during installation. It is therefore necessary intervention in the original cowl!

Installation of the left and right protector make in gripping about the attached photo above. Give the steel box M12 (ID. 1) on both bolts. Put the duralumin cylinder (ID. 3) under the protector on the left side and use the bolt (ID. 2) for tightening. Put the duralumin cylinder (ID. 3) under the protector on the right side and use the bolt (ID. 2) for tightening. At first finish the one side and then mount the second side.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

