

H39SD


Honda CB500 X/ CB500 F 2013-


Mounting kit – Left side

ID	Description	Cat. No.	Pcs
1	Dural. Protector carrier	646	1
2	Dural. Protector carrier	537	1
3	bolt M10x75x1,25	938	1
4	Dural. Roller d=20mm	435	1
5	Dural. Adapter d= 55mm	DV-13	1
6	Allen bolt cap	X4	1
7	Bolt M10x85	981	1
8	Bolt M8x25	815	2
9	Washer M8	802	2

Mounting kit – Right side:

ID	Description	Cat. No.	Pcs
1	Dural. Protector carrier	647	1
2	Dural. Protector carrier	537	1
3	bolt M10x75x1,25	938	1
4	Dural. Roller d=20mm	435	1
5	Dural. Adapter d= 55mm	DV-13	1
6	Allen bolt cap	X4	1
7	Bolt M10x85	981	1
8	Bolt M8x25	815	2
9	Washer M8	802	2

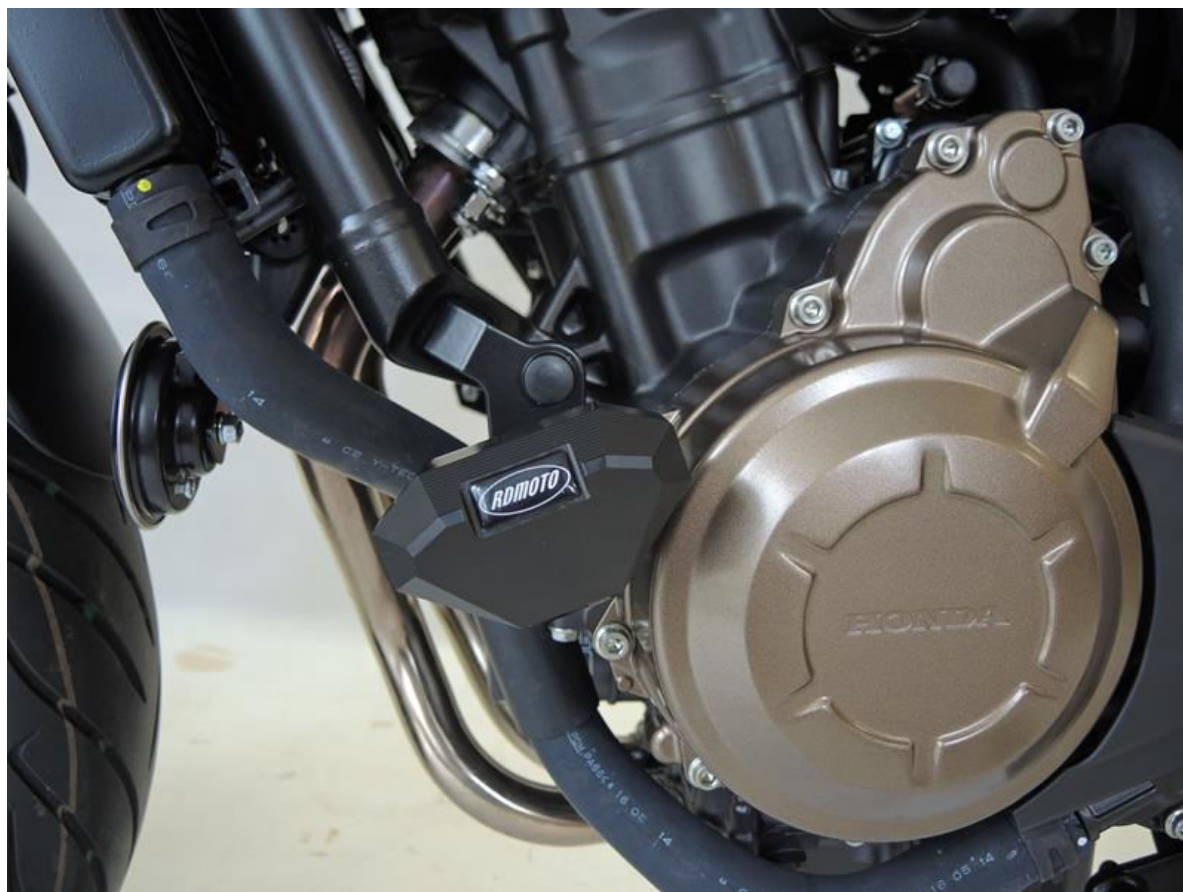

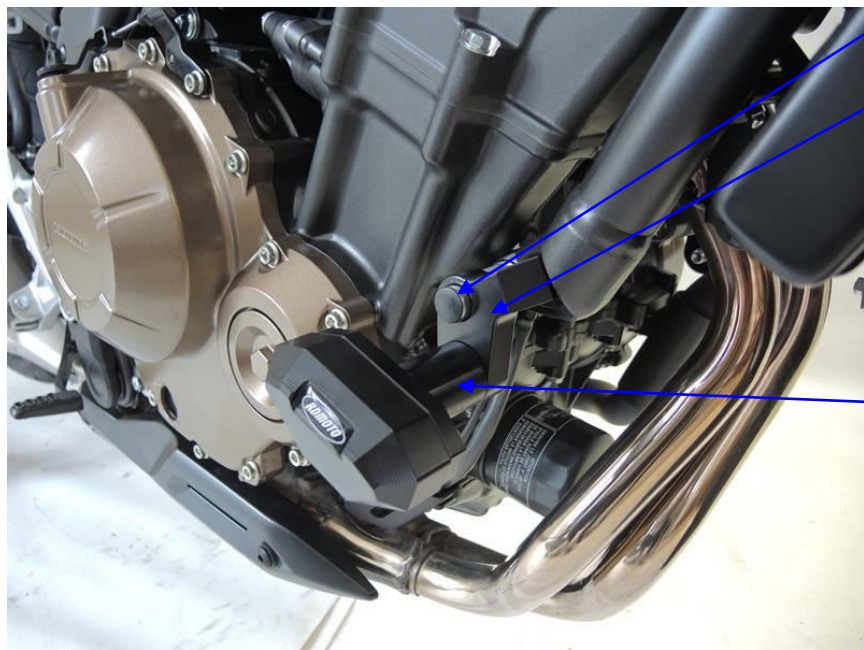

1. Remove the original bolt from motorcycle frame
2. Fit the Dural. Protector carrier (ID.1) onto motorcycle frame using bolt M10 (ID.3), put a roller (ID.4) between frame and the protector carrier.
3. Fit the plastic plug onto allen screw (ID.5).
4. Insert the ID.7 bolt M10 through dural. protector carrier (ID.2) and dural. adapter (ID.5), then screw it onto the protector carrier already fitted to frame.
5. Attach the slider using ID.8 bolts and ID.9 washers.

Note: We recommend using a thread glue (blue color) during installation.