


H52

Honda CBF 125 '15-

Fitting kit:

ID	Description	Cat.N	QTY
1	Steel sleeve	X1	2
2	duralumin adapter l=80mm- Left side	259	1
3	duralumin adapter l=90mm- Right side	260	1
4	bolts M10x50mm	849	2
5	M10x130x30x30	-	1

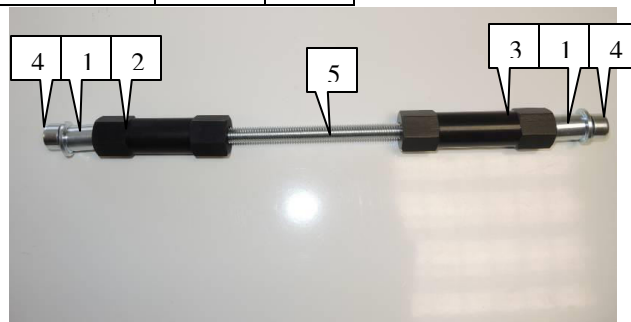

Installation:

Dismantle original bolt from chassi. Insert threaded bar and assmby ID.2 part from left side and ID.3 part from right side.

Insert steel sleeves ID.1 into the protectors. By bolts M10x50 assembly ant tighten protectors on the special aluminium holders.

Note: We recommend to use glue for all threads during assembly.