

K9


Kawasaki ZX-6R/RR '05-'06

Kit for right side:

ID.	Description	Cat.n	Qt
1	Steel box M10	X1	1
2	Nut M10	814	1
3	Alu. spacer d=50mm	5	1
4	Bolt M10x90	880	1
5	Washer M10	804	1
6	Lock Nut M10	810	1
7	Steel adapter	538	1
8	Bolt M10x60	850	1
9	Spacer d=5mm	16	1

Kit for left side:

ID.	Description	Cat.n	Qt
1	Steel box M10	X1	1
2	Nut M10	814	1
3	Alu. spacer d=40mm	4	1
4	Bolt M10x140	953	1

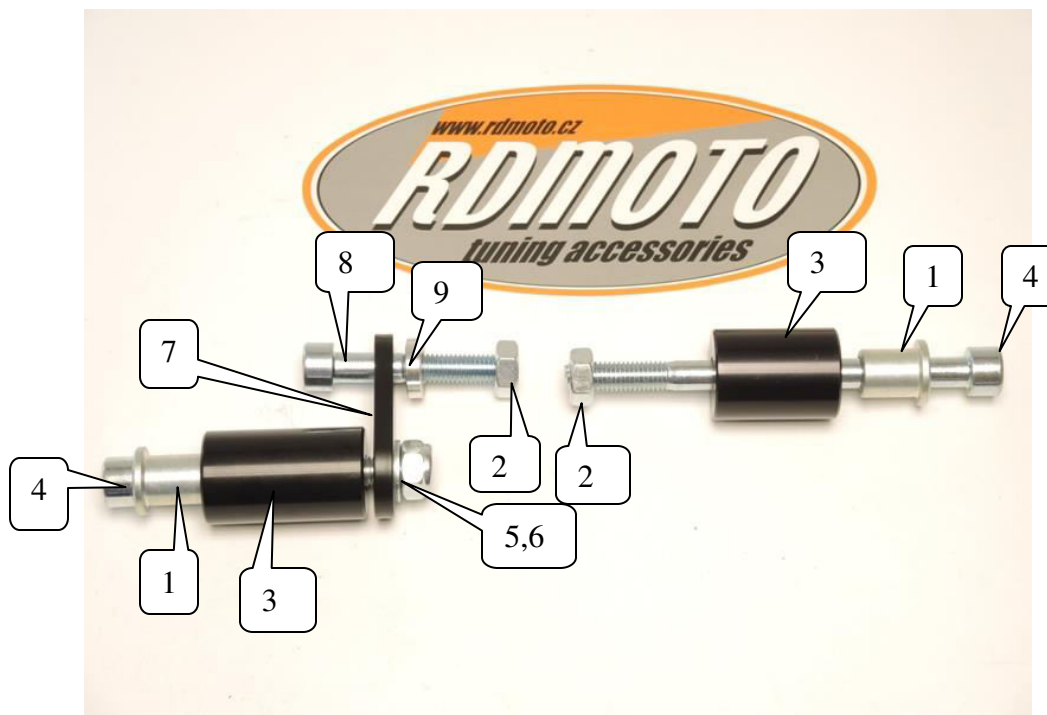

Warning - on the threads of the screws we recommend using premium adhesive glue (blue).

Fitting instruction:

1. **Right side:** Into the protector insert steel box ID.1 and bolt ID.4.
2. Under the protector place alu. spacer ID.3. Insert bolt through the protector, alu. spacer, frame and engine. Tighten this bolt from back side by nut ID.2.
3. **Left side:** Dismantle original bolt from frame. Place steel adapter on the frame, use bolt ID.8. Between the frame and adapter insert spacer ID.9. For tighten use nut ID.2.
4. Into the protector insert steel box ID.1 and bolt ID.4.
5. Place alu. adapter ID.3 under the protector. Put washer and nut ID.5ID.6 from back side and tighten protector.

