

T2S


Triumph Speed Triple 1050
2005-2010

Kit pro levou stranu

ID	Description	Cat.no.	Pcs
1	Bolt M10x30	882	1
2	Slider adapter	DV317	1
3.1	Bolt M12x40x1,25mm	933	1
4	Washer M10	801	1
5.1	Duralový adapter (left)	619	1
6	Washer M12	803	1
7	Bolt M6x25	877	3
8	Bolt M4x12	876	2

Kit pro pravou stranu

ID	Description	Cat.no.	pcs
1	Bolt M10x30	882	1
2	Slider adapter	DV317	1
3.2	Bolt M12x65mm	963	1
4	Washer M10	801	1
5.2	Duralový adapter (right)	620	1
6	Washer M12	803	2
7	Bolt M6x25	877	3
8	Bolt M4x12	876	2
9	Nut M12 (safety)	811	1

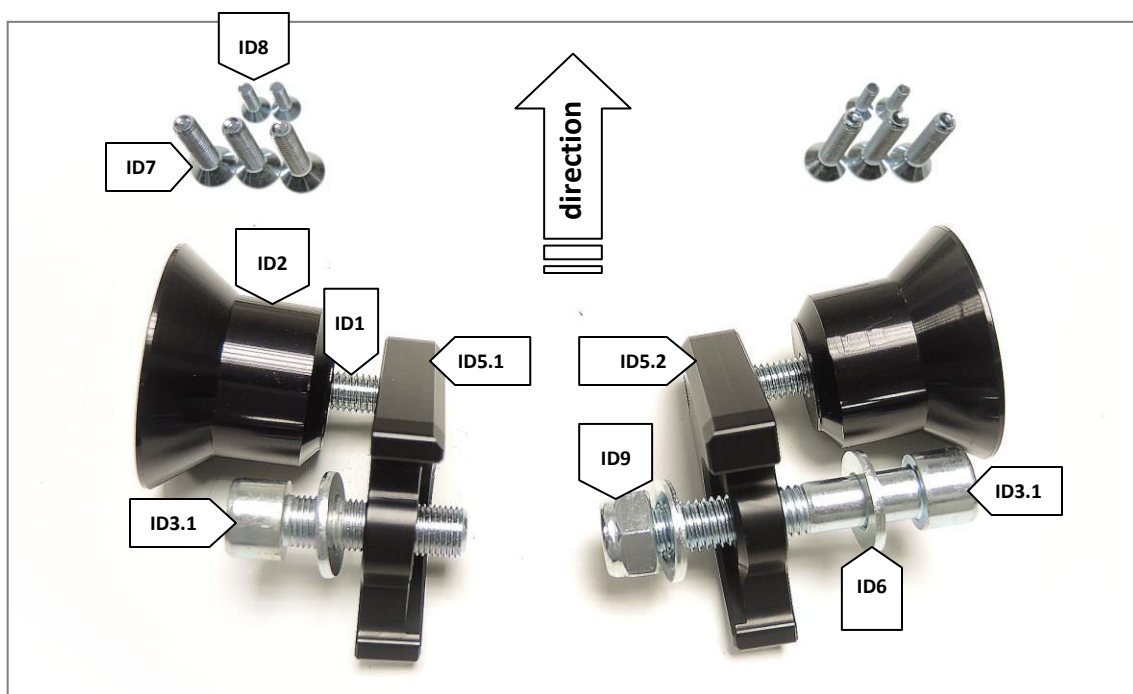

Installation for the left side:

- 1.) Remove original M12 bolt from the frame of motorcycle.
- 2.) Mount dural adapter (ID5.1) on the frame of motorcycle using bolt M12 (ID3.1).
Don't forget to place M10 washer (ID6).
- 3.) Now fit slider adapter (ID2) on the dural adapter (ID5.1) using bolt M10 (ID1).
- 4.) Fit slider on the slider adapter using three M6 bolts (ID7).
- 5.) Fit coloured cover on the slider using two M4 bolts (ID6).

Installation for the right side:

- 1.) Remove original M12 bolt from the frame of motorcycle.
- 2.) Mount dural adapter (ID5.1) on the frame of motorcycle using bolt M12 (ID3.1) and safety nut M12 (ID9). Don't forget to place M10 washer (ID6).
- 3.) Now fit slider adapter (ID2) on the dural adapter (ID5.1) using bolt M10 (ID1).
- 4.) Mount slider on the slider adapter using three M6 bolts (ID7).
- 5.) Mount coloured cover on the slider using two M4 bolts (ID6).

We recommend to use the glue (medium strong) on all threads.

