



# T7S

## Triumph Tiger 1050 2007-

### Kit for left side

Note	Description	Cat.No.	Pcs.
1	Slider RDmoto	SL	1
2	Cover	SLcap..	1
3	Adapter moto	DV-316	1
4	Bolt M10x20mm	819	1
5	Bolt M6x25	877	3
6	Bolt M4x16	876	2
7	Duralumin adapter	591	1
8	Bolt M12x60x1,25mm	916	1
9	Bolt M8x60mm	839	1
10	Duralumin cylinder d=10mm	103	1
11	Duralumin cylinder d=21mm	104	1


### Kit for right side

Note	Description	Cat.No.	Pcs.
1	Slider RDmoto	SL	1
2	Cover	SLcap..	1
3	Adapter moto	DV-350	1
4	Bolt M12x30mm	855	1
5	Bolt M6x25	877	3
6	Bolt M4x16	876	2
7	Duralumin adapter	592	1
8	Bolt M12x80mm	956	1
9	Bolt M12x130mm	886	1
10	Duralumin cylinder d=34mm	105	1
11	Nut M12 (safety)	811	2
12	washer M12	803	2

**Warning – we recommend to use safety glue on threads of all bolts (medium strong – blue colour).**

### **Installation – the left side:**

1. use the bolt (No. 8) and the bolt (No. 9) for the mounting of the duralumin adapter (No. 7), give the duralumin cylinders (No. 10) and (No. 11) on the bolt (No. 8) and (No. 9) during the installation
2. if you mounted duralumin adapters, you can mount gripping for slider. Use bolt (No. 4) for mounting of duralumin adapter (No. 3). You have to mount adapter with thread M6 up, then slider have the right rotation.
3. put slider (No. 1) and use the bolts (No. 5) for mounting
4. insert in slider the cover (No. 2) and use the bolts (No. 6) for gripping

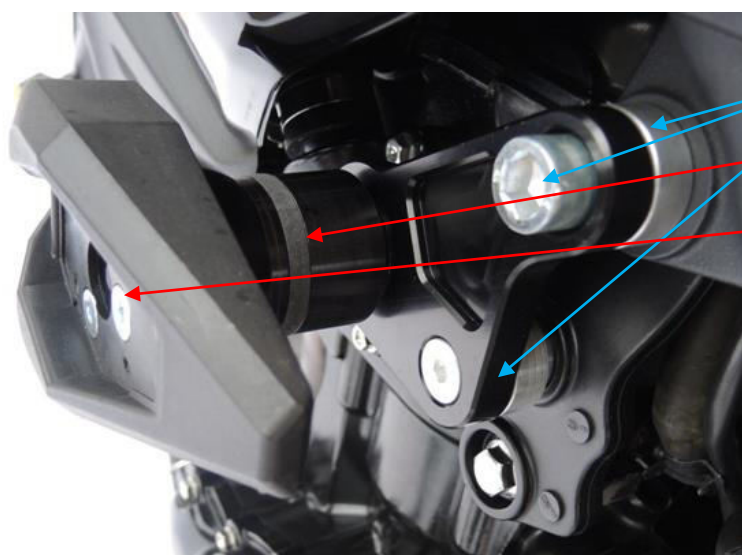

- 1.
- 2.
- 3.
4. insert in slider the cover (No. 2) and use the bolts (No. 6) for gripping

### **Installation – the right side:**

1. Take duralumin adapter (note 7) and from the back Put the screw (note 4) to the following thread the bolt-through from the other side of duralumin duralumin cylinder adapter (note 3) and pull the slider had good rotation, you must attach the thread adapter M6 up
2. Remove the plastic cover on the cooler.
3. screw (note 8) and screw (note 9) Alu mount adapter (note 7), when mounting thread the screw (note 9) duralumin cylinder (note 10). During the installation, use nut M12 (note 11) with washers M12 (note12)
4. Attach the slider (note 1) and fasten bolts (note 5)
5. Insert the slider cover (note 2) and fasten bolts (note 6)
6. Install the plastic back on the bike

**Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).**

