

KTM6S


KTM 1290 Super Duke 2013-

Kit for left side:

Kit for right side:

ID.	Description	Cat.N	Qt
1	Steel bracket for SL01	688	1
2	Bolt M10x80	852	1
3	Washer M10	804	1
4	Plastic cap	X4	1
5	Polyamid cylinder with threadd=40mm	X65	1
6	Bolt M8x40 cone	835	1
7	Dural.spacer d=60mm	318	1
8	Bolt M6x25	877	3
9	Bolt M4x16	876	2
10	3M Tape	3M	1
11	Bolt M10x30	882	1
12	Dural. roller d=7mm	405	1

ID	Description	Cat.N	Qt
1	Steel bracket for SL01	689	1
2	Bolt M10x80	852	1
3	Washer M10	804	1
4	Plastic cap	X4	1
5	Polyamid cylinder with threadd=40mm	X65	1
6	Bolt M8x40 cone	835	1
7	Dural.spacer d=60mm	318	1
8	Bolt M6x25	877	3
9	Bolt M4x16	876	2
10	3M Tape	3M	1
11	Bolt M10x30	882	1
12	Dural. roller d=7mm	405	1

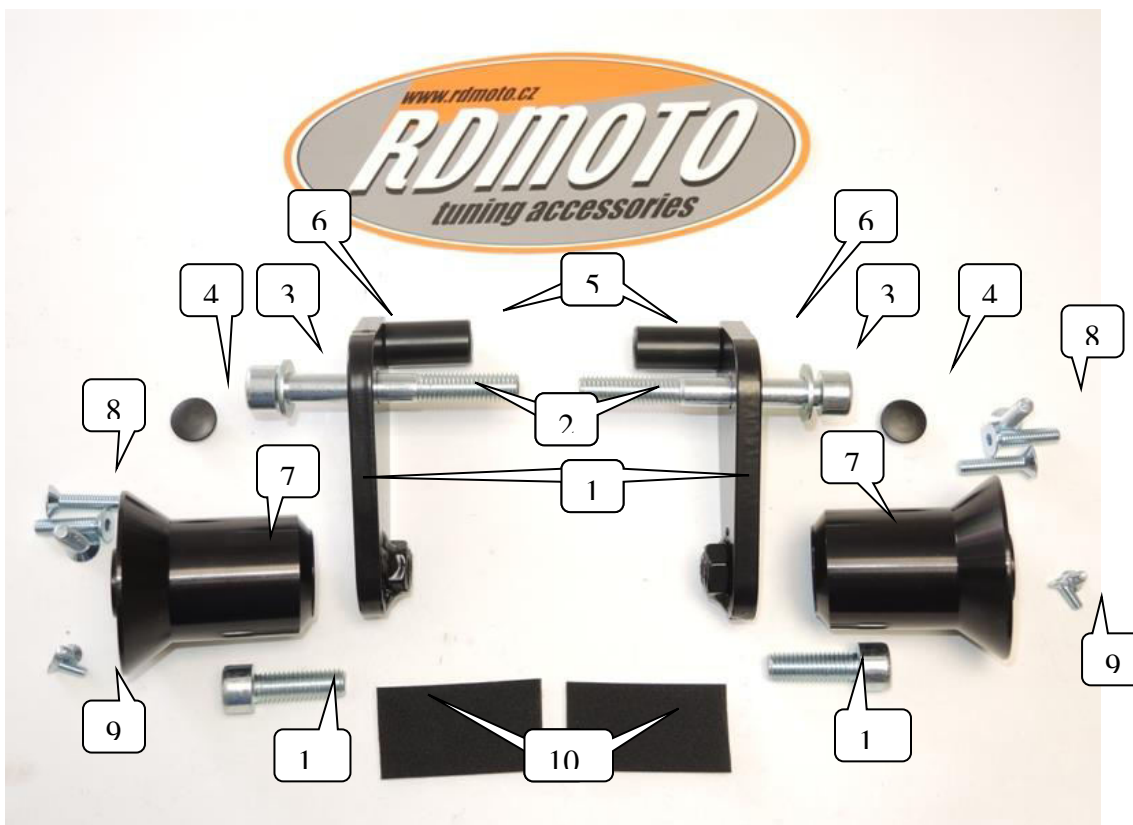

Instruction to assembly left side:

1. Mounting polyamide cylinder ID.5 on the steel bracket ID.1 by bolt ID.6.
2. Stick 3M tape on the frame. In the place where is polyamide cyl. touching the frame.
3. Take out original bolt M10 from frame. Original dural. spacer leave in frame and insert a roller into it ID.12.
4. Insert washer ID.3 on the bolt ID.2. Steel bracket mounting on the frame.
5. Tighten bolt M10 and put plastic cover ID.4 into the head.
6. Dural. spacer ID.7 mounting on the steel bracket, use bolt ID.11. For right position Cheb photo.
7. Bolts ID.8 gripping slider and insert alu.cap. Mounting it by bolts ID.9.
8. **Do this assembly on the right side.**

Warning- Use the glue of all threads. Medium strong.

