

MV4

MV Agusta Brutale 990/ 1090

Fitting kit for the left side			
ID	Description	Cat.N	Qt
1	Steel insert	X2	1
2	Screw M12x95x1.25	900	1
3	Dural roller	1204	1


Fitting kit for the right side			
ID	Description	Cat.N	Qt
1	Steel insert	X2	1
2	Screw M12x95x1.25	900	1
3	Dural roller	1204	1

Instruction to assembly:

We recommend to finish one side and than the second one.

1. Remove original screws from frame of motorcycle.
2. Put steel insert ID1 on screw ID2.
3. Through dural roller ID3 tighten protector with screw ID2.

Warning - use the glue on all threads (medium strong)

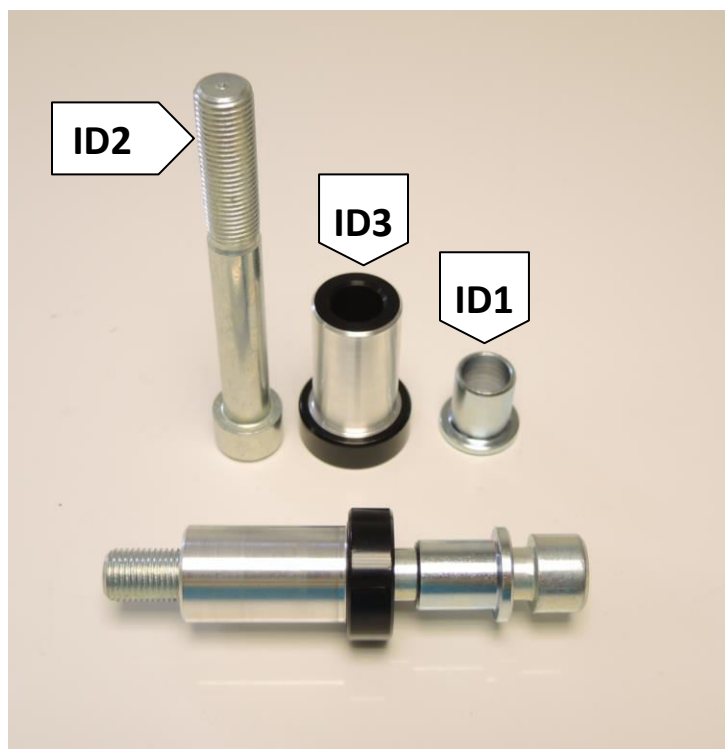

Illustrative picture

