



# B15S

## BMW S1000R 2017-

### Kit for left side

ID	Description	Cat.No.	Pcs
1	Steel adapter	758	1
2	Dural. roller l=8mm	1334	2
3	Bolt M10x60mm	1048	2
4	AL adapter under slider	318	1
5	Bolt M10x35mm	847	1
6	Dural. roller l=5mm	1335	1
7	Bolt M5x25mm	1036	1
8	Washer M5-large	1057	1
9	Bolt M6x25mm	877	3
10	Bolt M4x12mm	876	2


### Kit for right side

ID	Description	Cat.No.	Pcs
1	Steel adapter	759	1
2	Dural. roller l=8mm	1334	2
3	Bolt M10x60mm	1048	2
4	AL adapter under slider	292	1
5	Bolt M10x35mm	847	1
6	Dural. roller d=5mm	1335	1
7	Bolt M5x25mm	1036	1
8	Washer M5-large	1057	1
9	Bolt M6x25mm	877	3
10	Bolt M4x12mm	876	2

**Note – For threads of all screws we recommend using medium strenght thread glue (blue color).**

### **Right side :**

1. Remove the motorcycle side plastic.
2. Remove the original screws.
3. Take the steel adapter ID.1 and the screws ID.3, insert the screws into the steel adapter and slide the ID.2 duralumin rollers onto the screws on the other side of the adapter.
4. Mount the entire assembly on the motorcycle frame.
5. You can refit the side plastic, to move the side plastic away, use the ID.6 duralumin roller at the rear to support the plastic and tighten the plastic with the ID.7 screw with the ID.8 washer.
6. Take the AL adapter under slider ID.4 and screw M10x35mm ID.5. Mount this AL adapter on a steel adapter that you already have attached to the motorcycle.
7. Now take the plastic slider itself and mount the M6x25mm ID.9 screws on the AL adapter.
8. Finally, attach the colored AL cover to the slider with M4x12mm ID10 screws.

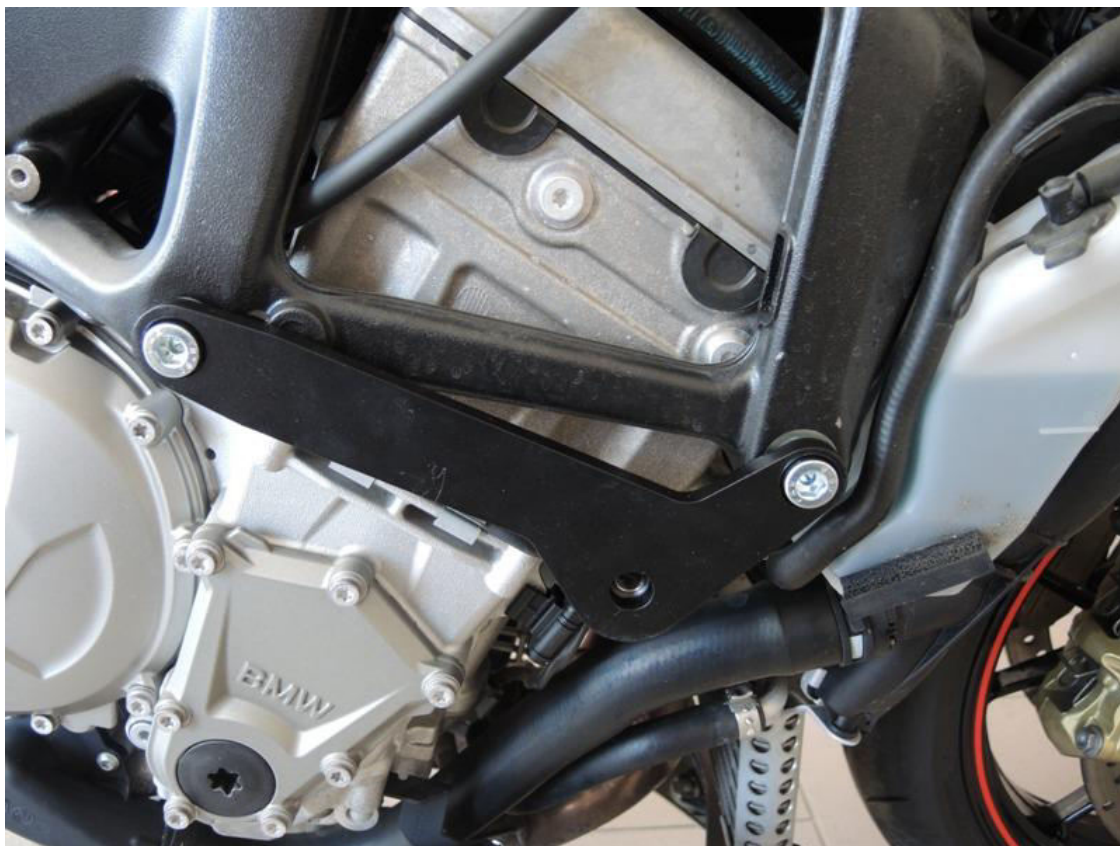

**Left side :**

1. Remove the motorcycle side plastic.
2. Remove the original screws.
3. Take the steel adapter ID.1 and the screws ID.3, insert the screws into the steel adapter and slide the ID.2 duralumin rollers onto the screws on the other side of the adapter.
4. Mount the entire assembly on the motorcycle frame.
5. You can refit the side plastic, to move the side plastic away, use the ID.6 duralumin roller at the rear to support the plastic and tighten the plastic with the ID.7 screw with the ID.8 washer.
6. Take the AL adapter under slider ID.4 and screw M10x35mm ID.5. Mount this AL adapter on a steel adapter that you already have attached to the motorcycle.
7. Now take the plastic slider itself and mount the M6x25mm ID.9 screws on the AL adapter.
8. Finally, attach the colored AL cover to the slider with M4x12mm ID.10 screws.

