


S47SD

Suzuki GSX-S1000 '15- Kit for the Right Side:

Kit for the Left Side:

ID	Description	Cat.No	Pcs
1	SLD sleeve l=20mm	DV-10	1
2	Bolt M10x45	848	1
3	Dural.sleeve l=15	1281	2
4	Bolt M10x65x1,25	945	2
5	Plastic cap	X4	2
6	Aluminum adapter left	735	1
7	Bolt M8x25	815	2
8	Washer M8	800	2
9	SLD adapter	537	1
10	Spring washer M10	801	1

ID	Description	Cat.No	Pcs
1	SLD sleeve l=20mm	DV-10	1
2	Bolt M10x45	848	1
3	Dural. sleeve d=15mm	1281	1
4	Dural. sleeve d=10mm	1282	1
5	Plastic cap	X4	2
6	Bolt M10x75x1,25	938	1
7	Bolt M10x70x1,25	898	1
8	Aluminum adapter-right	734	1
9	Bolt M8x25	815	2
10	Washer M8	800	2
11	SLD adapter	537	1
12	Spring washer M10	801	1

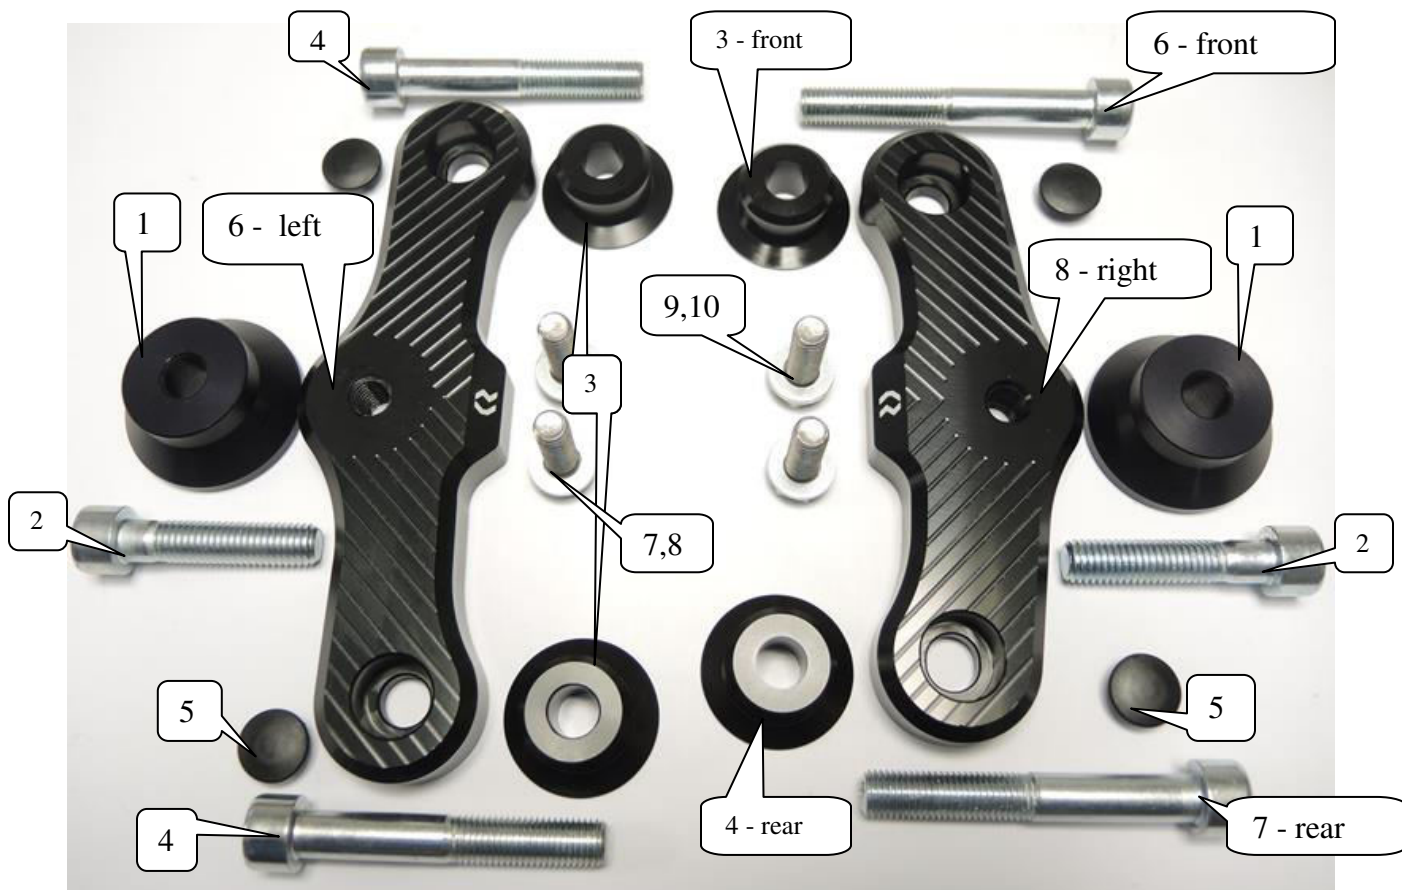

Instructions:

1. Remove original bolts on the right side.
2. Insert the bolt (ID6) in the front part into the adapter (ID 8), insert the sleeve (ID3), insert the bolt (ID7) in the rear part and insert the sleeve (ID4). Mount this assembly in the motorcycle frame.
3. Place on the bolt M10 (ID2), spring washer M10 (ID12), SLD adapter (ID11) and sleeve (ID1). Mount this assembly in the adapter on the motorcycle.
4. Attach the slider using bolts M8 (ID9) and washer M8 (ID10)
5. Tighten all bolts and put on plastic caps (ID5)
6. Finish one side first then assemble the other side

Warning - We recommend using medium strength thread glue during assembly

