

CF104

Honda X-ADV 750_2017-


Kit for left side			
ID	Description	Cat. No.	Pcs.
1	Frame	CF104	1
2	Bolt M8x60	838	1
3	Bolt M8x50	837	1
4	Dural. roller d=31mm	1264	1
5	Dural. roller d=19mm	1265	1
6	Bolt M8x40	828	1
7	Washer M8 flat	800	2
8	Plastic cover	X5	3
9	RDmoto Sticker		1

Kit for right side			
ID	Description	Cat. No.	Pcs.
1	Frame	CF104	1
2	Bolt M8x60	838	1
3	Bolt M8x50	837	1
4	Dural. roller d=31mm	1264	1
5	Dural. roller d=19mm	1265	1
6	Bolt M8x40	828	1
7	Washer M8 flat	800	2
8	Plastic cover	X5	3
9	RDmoto Sticker		1

We recommend using medium strength thread glue.

Mounting Instructions (same for both sides):

- 1.) Unscrew the original bolts from your motorcycle.
- 2.) Prepare the new frame all necessary bolts.
- 3.) Attach the top part with M8 ID.2 bolt, then do the same with bottom part and M8 ID3 bolt + M8 ID.7 washer (insert the ID.4 roller between crash frame and motorcycle frame) and then mount the rear part with M8 ID.6 bolt + ID.7 washer (here use the ID.5 roller to put between crash and motorcycle frame).
- 4.) Proceed on the other side using the same procedure
- 5.) Finally, tighten all screws and attach ID.8 plastic covers.

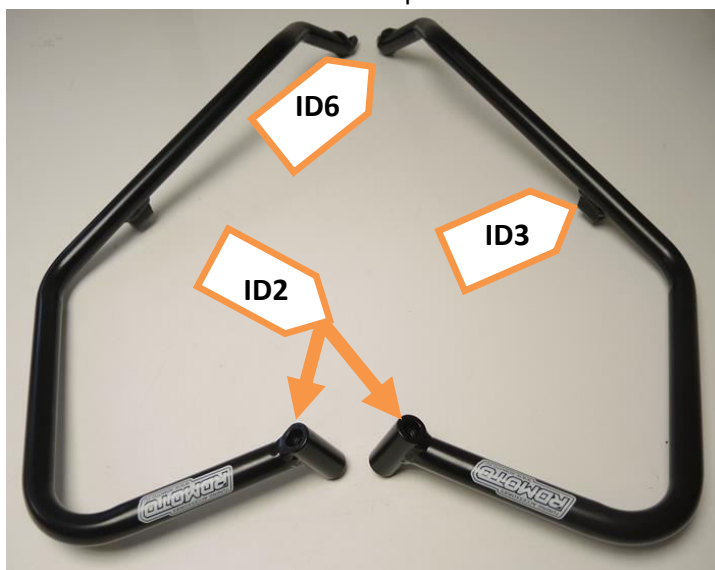



Bolt M8 ID2 + ID8



Bolt M8 ID6 + Washer
M8 ID7 + dural. roller
ID5 + ID8

Bolt M8 ID3 + washer
M8 ID7 + dural. roller ID
4 + ID8