


CF153

Triumph Tiger 900 / GT / PRO

Kit for the left side			
ID	Description	Cat.No.	Pcs
1	Steel adapter	X156	1
2	Steel adapter	X158	1
3	Bolt M8x50mm	837	1
4	Washer M8	803	1
5	Dural.roller l=30mm	1391	1
6	Bolt M10x80mm	852	1
7	AL insert to the protector	X131	1
8	Protector	PVPKN-0/16	1
9	Washer M10	804	3
10	Nut M10-insurance	810	3
11	Dural.roller l=9mm	DV87	1
12	Dural.roller l=5mm	DV16	2
13	Dural.roller l=29mm	DV1357	1
14	Bolt M10x75x1,25mm	938	1
15	Insert AL (black)	X115	2
16	Plast. cover	X4	2
17	Bolt M10x30mm	882	1
18	Bolt M8x25mm	833	1
19	Bolt M8x30mm	834	1
20	Sticker RDmoto		1

Kit for the right side			
ID	Description	Cat.No.	Pcs
1	Steel adapter	X155	1
2	Steel adapter	X157	1
3	Bolt M8x50mm	837	1
4	Washer M8	803	1
5	Dural.roller l=30mm	DV1391	1
6	Bolt M10x80mm	852	1
7	AL insert to the protector	X131	1
8	Protector	PVPKN-0/16	1
9	Washer M10	804	3
10	Nut M10-insurance	810	2
11	Steel.rod	10x300x30x30	1
12	Nut M10-classic	814	1
13	Dural.roller l=5mm	DV16	2
14	Dural.roller l=20mm	DV1358	1
15	Bolt M10x65x1,25mm	945	1
16	Insert AL (black)	X115	2
17	Plast. cover	X4	2
18	Bolt M10x30mm	882	1
19	Bolt M8x25mm	833	1
20	Sticker RDmoto		1


We recommend using medium strength thread glue during assembly.

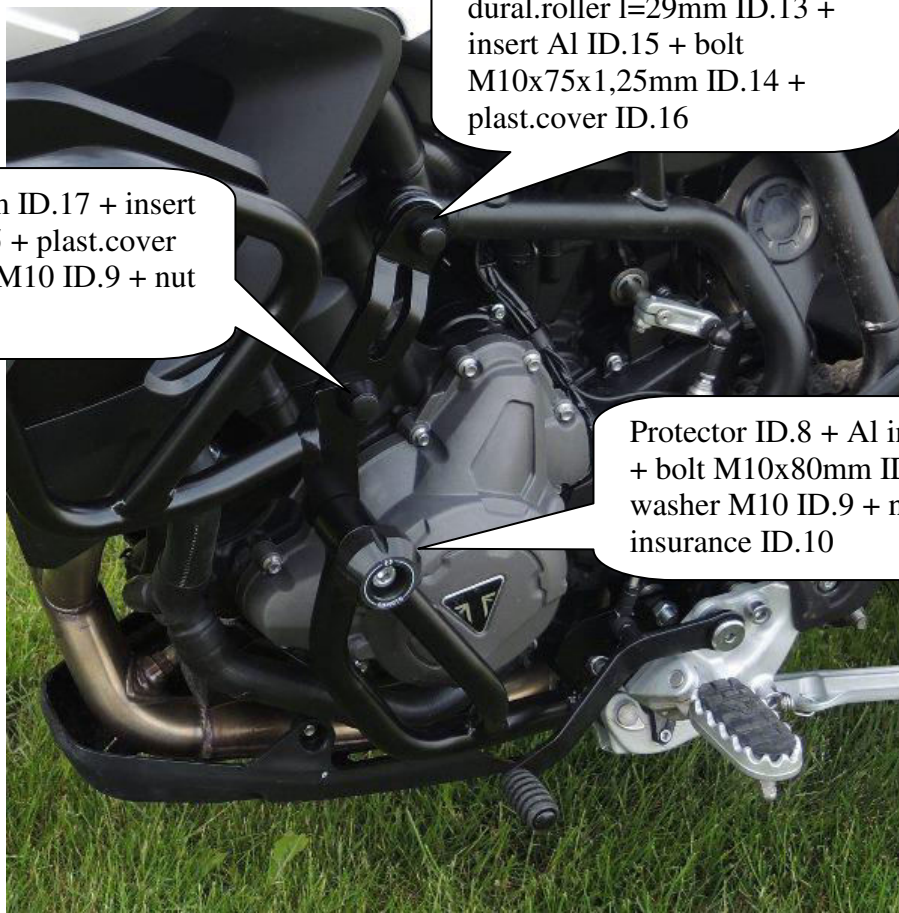


Bolt M10x30mm ID.17 + insert AL(black) ID.15 + plast.cover ID.16 + washer M10 ID.9 + nut M10 ID.10



Steel adapter ID.1. + dural.roller l=29mm ID.13 + insert Al ID.15 + bolt M10x75x1,25mm ID.14 + plast.cover ID.16

Protector ID.8 + Al insert ID.7 + bolt M10x80mm ID.6 + washer M10 ID.9 + nut M10-insurance ID.10

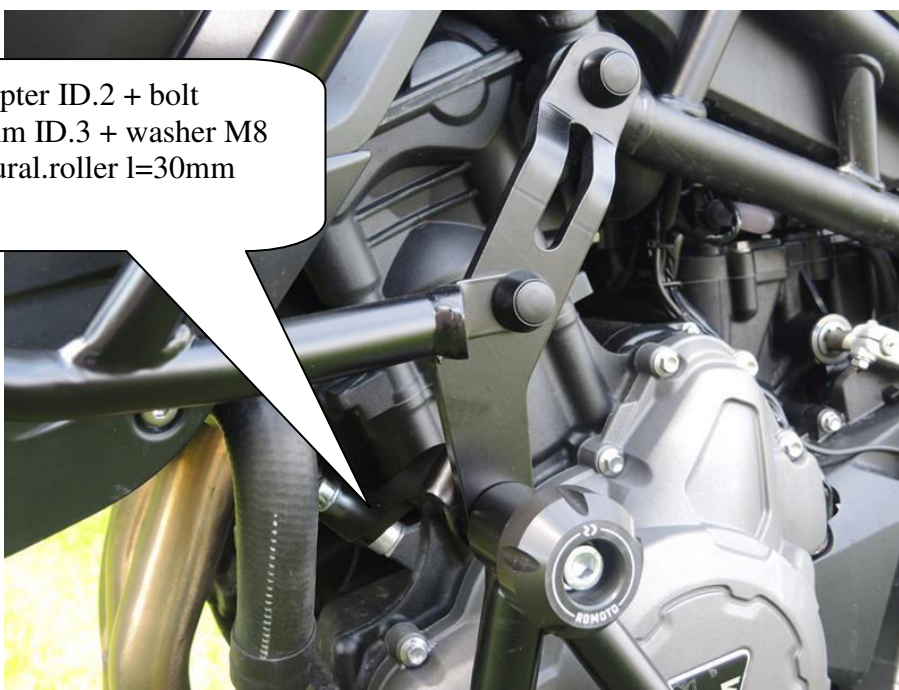

Steel adapter ID.2 + bolt M8x50mm ID.3 + washer M8 ID.4 + dural.roller l=30mm ID.5

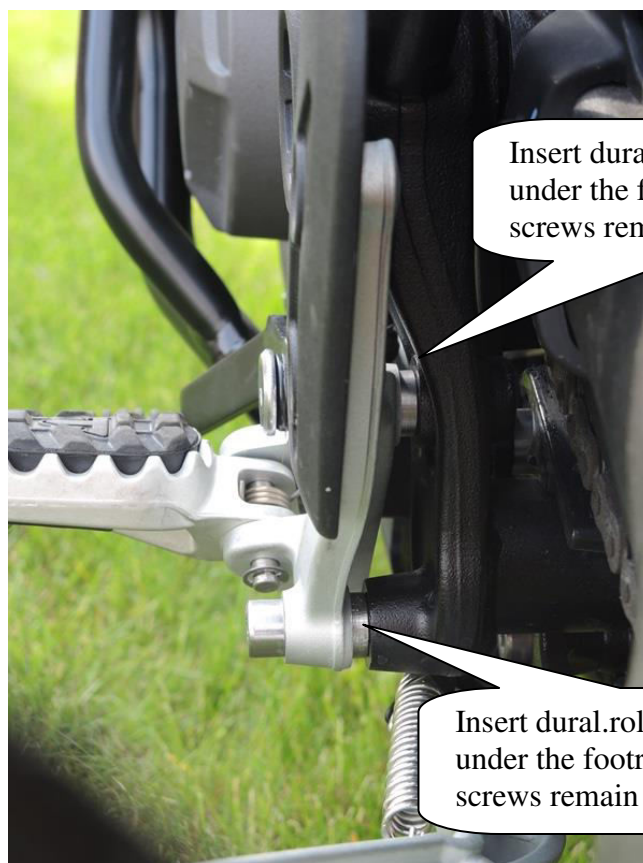

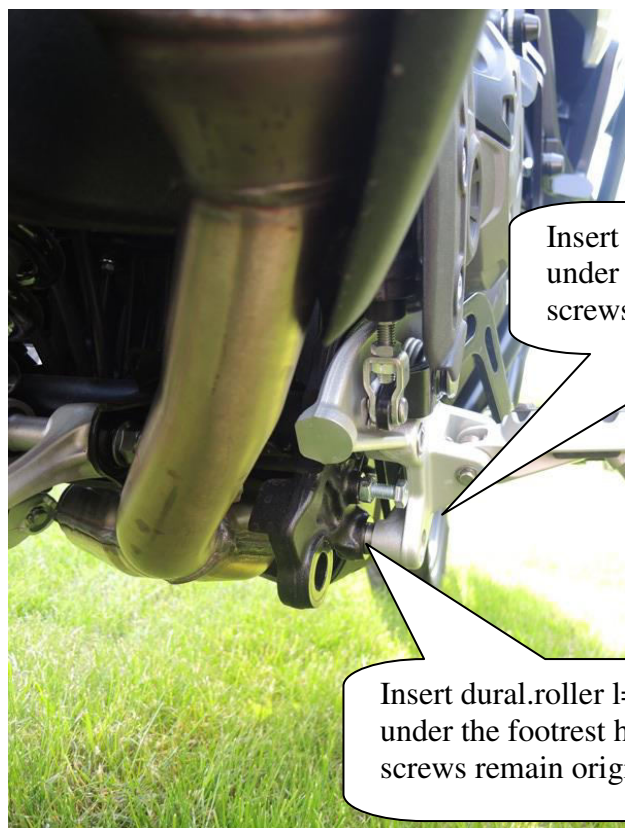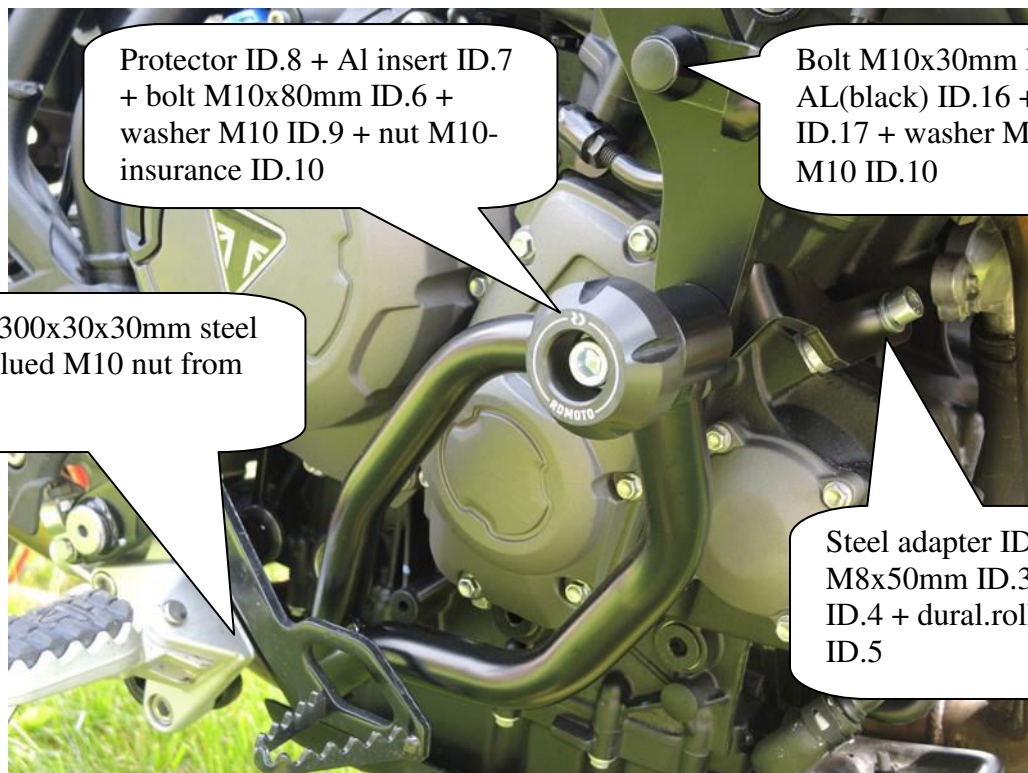

Steel adapter ID.1. +
dural.roller l=20mm ID.14 +
insert Al ID.16 + bolt
M10x65x1,25mm ID.15 +
plast.cover ID.17



Bolt M8x30mm ID.19,
designed to connect frames.

2x bolts M8x25mm ID.18 and
ID.19 + 2x washers M8 ID.4