

# H66SD

## Honda CBR1000RR 2020-

### Kit for left side

ID.	Description	Cat.No.	Pc
1	Adapter SLD	537	1
2	Bolt M12x100x1,25mm	911	1
3	Dural. roller l=35,5mm	1394	1
4	Dural. roller l=15mm	149	1
5	Bolt M8x25mm	815	2
6	Washer M8	802	2

### Kit for right side

ID.	Description	Cat.No.	Pc
1	Adapter SLD	537	1
2	Bolt M12x85x1,25mm	899	1
3	Dural. roller l=17mm	1359	1
4	Dural. roller l=15mm	149	1
5	Bolt M8x25mm	815	2
6	Washer M8	802	2

### Assembly:


Install the left and right sliders into the mount according to the photos attached below.

Slide duralumin adapters under slider ID.1 with duralumin rollers ID.4 and ID.3 on both screws - for the left side with a length of 35.5mm and for the right side with a length of 17mm.

Install this assembly into the motorcycle frame on the left side and then on the right side.

Take the SLD sliders and M8x25mm ID.5 bolts with M8 ID.6 washers and fit them into the duralumin adapters on the bike.

**Warning - we recommend using medium-strength (blue) locking glue on the threads of all screws.**

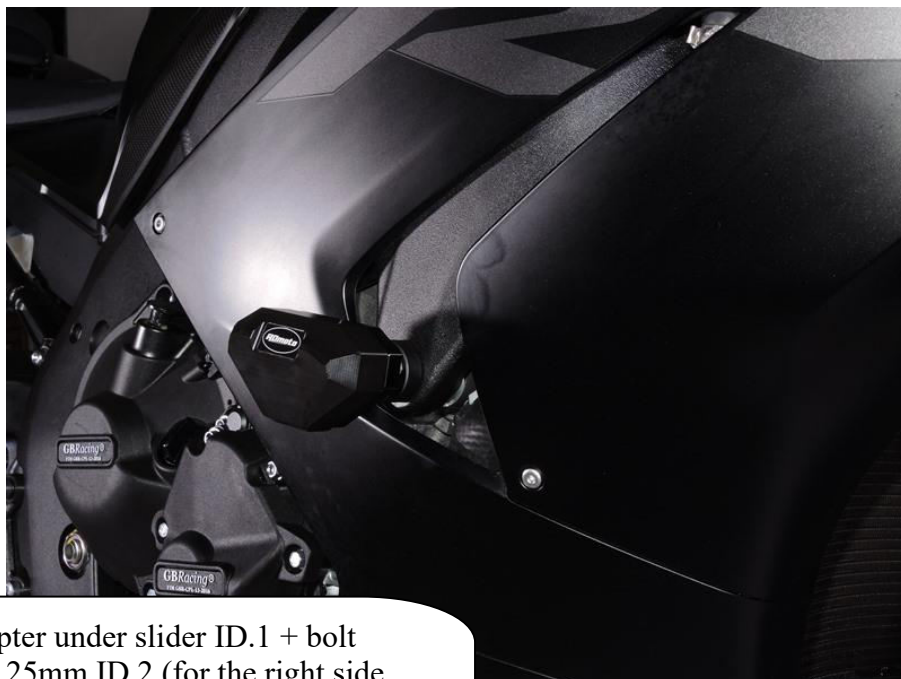

Slider + adapter under slider ID.1 + bolt  
M12x100x1,25mm ID.2 (for the right side  
M12x85x1,25mm) + dural.roller l=15mm  
ID.4 + dural.roller l=35,5mm ID.3 (for the  
right side l=17mm) + bolts M8x25mm ID.5 +  
washers M8 ID.6

