

H15


Honda VTR1000 Firestorm 1997-

Fitting kit left side:

ID	Description	Cat.N	Qty
1	Dural.adapter	636	1
2	Steel box	X1	1
3	Dural.cylinder d=40	4	1
4	Bolt M10x90	880	1
5	Nut M12	811	1
6	Washer M12	803	1
7	3M Tape		1
8	Steel bar 12x410x30x30		1

Fitting kit right side:

ID	Description	Cat.N	Qty
1	Dural.adapter	637	1
2	Steel box	X1	1
3	Dural.cylinder d=50	5	1
4	Bolt M10x90	880	1
5	Nut M12	811	1
6	Washer M12	803	1
7	3M Tape		1

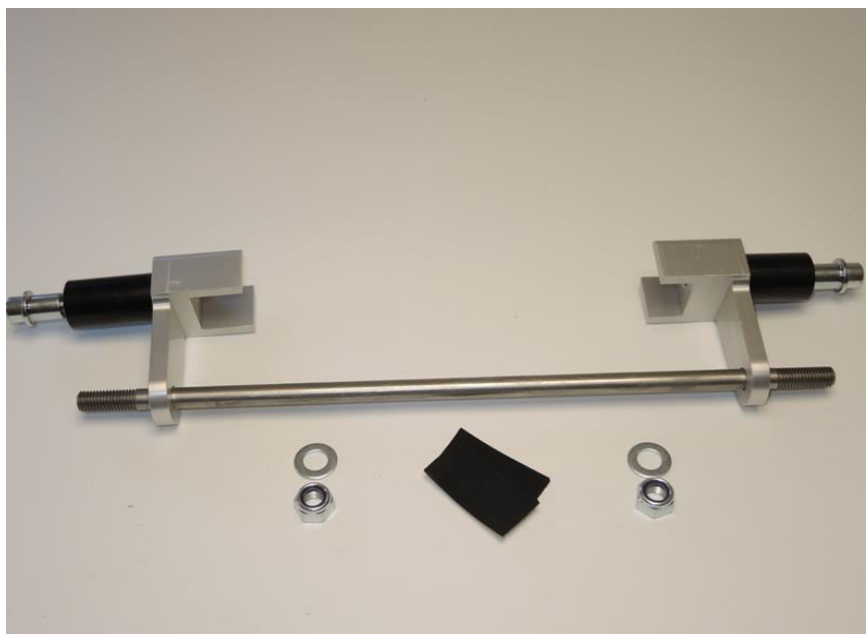

Instruction to assembly:

1. Dismantle original bolt from frame- M12.
2. Through the frame insert stainless steel bar ID.8.
3. Put on it adapter ID.1. When the adapter is touching with frame, stick 3M tape.
4. Tighten adapter. Use bolt and washer ID.6, ID.5.
5. Insert steel box ID.2 inside a protector, through the protector insert bolt ID.4 and put on it dural.cylinder ID.3.
6. This set mount on the adapter.

Instruction to assembly-right side:

1. Put on steel bar adapter ID.1. When the adapter is touching with frame, stick 3M tape.
2. Tighten adapter. Use bolt and washer ID.6, ID.5.
3. Insert steel box ID.2 inside a protector, through the protector insert bolt ID.4 and put on it dural.cylinder ID.3.
4. This set mount on the adapter.

Warning: We recommend use the glue of all threads. Medium strong.

