

H45S

Honda CBR300R 2014-


Fitting kit left side:

ID	Description	Cat.N	Qt
1	Steel holder	684	1
2	Alu spacer d=5mm	16	1
3	Bolt M6x60	872	1
4	Alu. spacer d=25mm	1159	1
5	Nut M10	810	1
6	Washer M6	947	1
7	Alu. adapter	314	1
8	Spacer d=40	4	1
9	Bolt M10x65	943	1
10	Bolt M6x25	877	3
11	Bolt M4x16	876	2

12	M10x300x30x30		1
----	---------------	--	---

Fitting kit right side:

ID	Description	Cat.N	Qt
1	Steel holder	685	1
2	Alu spacer d=5mm	16	1
3	Bolt M6x60	872	1
4	Alu. spacer d=25mm	1159	1
5	Nut M10	810	1
6	Washer M6	947	1
7	Alu. adapter	314	1
8	Spacer d=40	4	1
9	Bolt M10x65	943	1
10	Bolt M6x25	877	3
11	Bolt M4x16	876	2

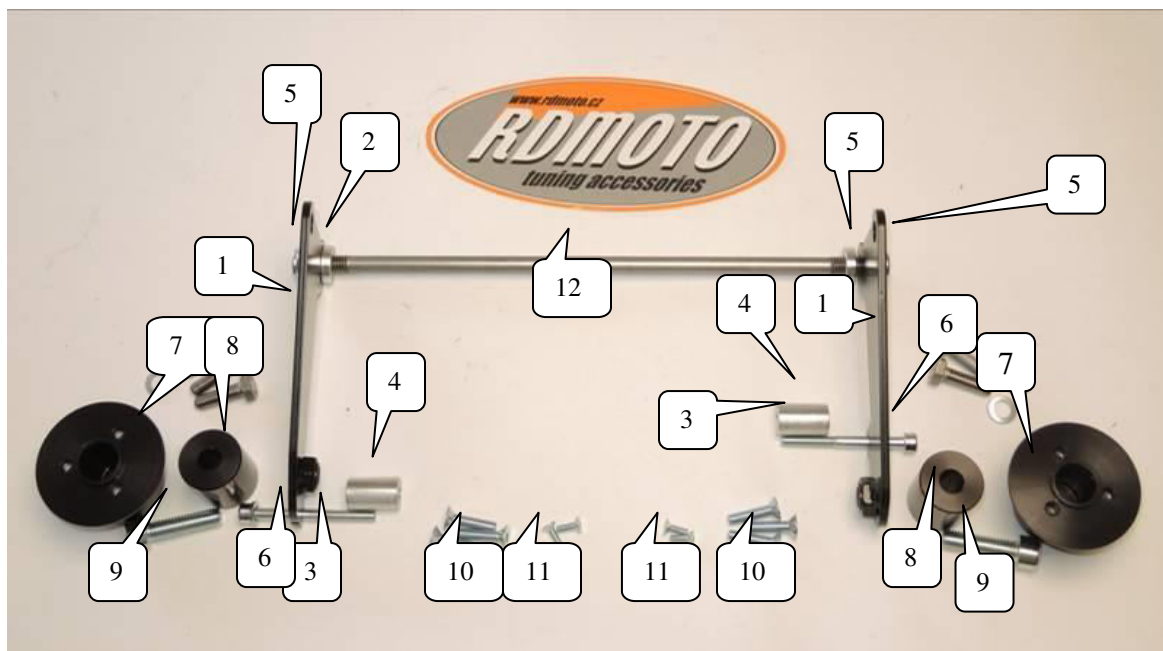

Assembly instruction:

1. Dismantle lower fairing out of the bike.
2. Dismantle bolt M10 from the chassi on the left side.
3. Take out bolt M6 from engine case on the left side.
4. Place rod ID.12 trough the engine and chassi. Place alu spacers ID.2 on the rod and after place steel adapter ID.1. Tighten it by nut and for top gripping use original bolt.
5. **For the right side is same assembly.**
6. Place spacer ID.4 between engine case cover and steel holder. On the bolt ID.3 place washer ID.6 and tighten it.
7. **For the right side is same assembly.**
8. Now check and re-tighten all bolts and place fairing back the bike.
9. Assembly for left and right sliders is same.
10. Bolt ID.9 place through the adapter ID.7 and spacer ID.8. This kit assembly on the steel adapter.
11. Place slide rand tighten it by bolts ID.10.
12. Insert cover into the slider and tighten it by bolts ID.11.

Notice: During installation, we recommend using glue on the threads (blue color)

