

# K16SDM

## Kawasaki Versys 650 2006-

### LEFT SIDE KIT

| ID | Description                       | Cat.no. | Pcs |
|----|-----------------------------------|---------|-----|
| 1  | Adapter SLDM                      | 537/B   | 1   |
| 2  | Nut M8                            | 813     | 1   |
| 3  | Washer M8                         | 802     | 1   |
| 4  | Dural. cylinder 50mm              | 209     | 1   |
| 5  | Bolt M12x100                      | 986     | 1   |
| 6  | Dural adapter                     | 544     | 1   |
| 7  | Bolt M10x100x1,25mm               | 892     | 1   |
| 8  | Bolt M8x40mm                      | 828     | 1   |
| 9  | Dural. cylinder 41mm              | 36      | 1   |
| 10 | Dural. SLD adapter 15mm           | DV149   | 1   |
| 11 | Bolt M6x20                        | 1024    | 2   |
| 12 | Washer M6                         | 1023    | 2   |
| 13 | Dural. rod<br>AL20(M12)x314x30x30 |         | 1   |


### RIGHT SIDE KIT

| ID | Description          | Cat.no. | Pcs |
|----|----------------------|---------|-----|
| 1  | Adapter SLDM         | 537/B   | 1   |
| 2  | Nut M8               | 813     | 2   |
| 3  | Washer M8            | 802     | 2   |
| 4  | Dural.váleček d=30m  | 170     | 1   |
| 5  | Bolt M12x80          | 956     | 1   |
| 6  | Dural. adapter       | 543     | 1   |
| 7  | Bolt M10x110x1,25mm  | 928     | 1   |
| 8  | Bolt M8x40           | 828     | 2   |
| 9  | dural. cylinder 61mm | 37      | 1   |
| 10 | Dural. SLD adapter   | DV149   | 1   |
| 11 | Bolt M6x20           | 1024    | 2   |
| 12 | Washer M6            | 1023    | 2   |
|    |                      |         |     |

### INSTRUCTIONS

- 1) Remove side fairing and unbolt bolts M10 and M8.
- 2) Fit dural adapter ID6 on the left side using bolt ID7 and ID8, use safety nut ID2 and washer ID3.
- 3) Insert dural. cylinder ID9 between frame and motorcycle.
- 4) Fit steel adapter ID6 on the right side using bolt ID7 and ID8, use nut ID2 and washer ID3.
- 5) Insert dural. cylinder ID9 between frame and motorcycle.
- 6) Put bolt ID5 through adapter ID1, insert adapter ID10 and cylinder ID4 under steel adapter.
- 7) Mount this kit into dural. rod ID13. Place this rod before engine, between adapters for protectors.
- 8) Fit SLD adapter ID1 and adapter ID10 and cylinder ID4 using bolt ID5 into dural rod ID13.
- 9) Fit slider using three bolts ID11.
- 10) Fit cover using two bolts ID12.

**We recommend to use safety glue on all threads.**

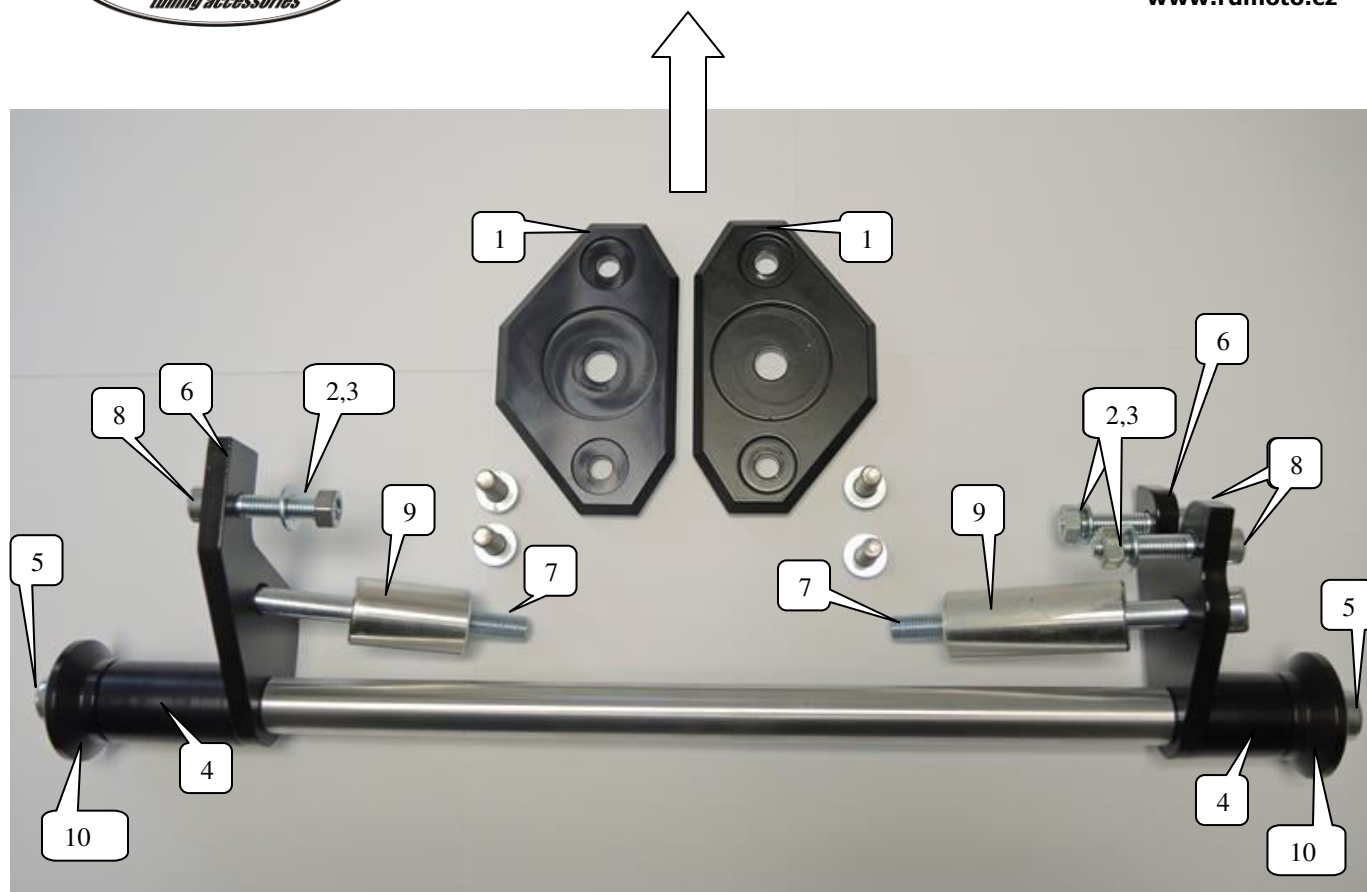

**Old type of protector**

