

K30SD


Kawasaki ER-6N '12-

Kit for left side:

ID.	Description	Cat.NO	QTY
1	Slider SLD	SLD	1
2	Bracket for SLD	537	1
3	Bolt M8x25	815	2
4	Washer M10	804	1
5	Nut M10	810	1
6	Washer M8	802	2
7	Dural cylinder d=60mm	14	1
8	Steel adapter	649	1
9	Washer (spring) M10	801	1
10	Bolt M10x90mm	880	1

Kit for right side:

ID.	Description	Cat.No	QTY
1	Slider SLD	SLD	1
2	Bracket for SLD	537	1
3	Bolt M8x25	815	2
4	Washer M10	804	1
5	Nut M10	810	1
6	Washer M8	802	2
7	Dural. cylinder d=60mm	14	1
8	Steel adapter	648	1
9	Washer spring M10	801	1
10	Bolt M10x90mm	880	1

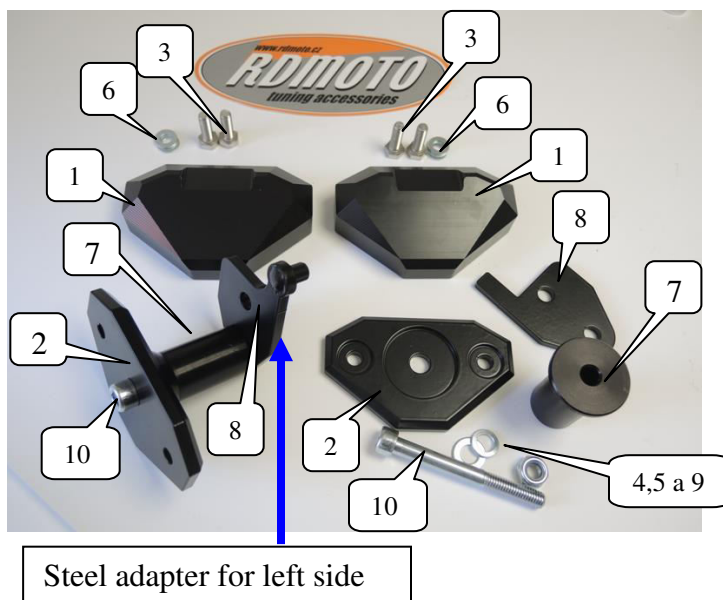

Instruction to assembly left side:

1. Dismantle original bolt from frame M10.
2. On the frame mounting steel adapter (ID8) use original bolt.
3. Put on the bolt M10x90 (ID10) bracket for SLD (ID2) and dural. cylinder d=60mm (ID7), this set fit on the steel adapter and use washers and nut (ID4, ID9 and ID5).
4. Fit on the bracket slider (ID1) use bolts and washers (ID6), (ID3).

Warning- use the glue of all threads. We recommended use medium strong glue.

Instruction to assembly right side :

1. Dismantle original bolt from frame M10.
2. On the frame mounting steel adapter (ID8) use original bolt.
3. Put on the bolt M10x90 (ID10) bracket for SLD (ID2) and dural. cylinder d=60mm (ID7), this set fit on the steel adapter and use washers and nut (ID4, ID9 and ID5).
4. Fit on the bracket slider (ID1) use bolts and washers (ID6), (ID3).

Warning- use the glue of all threads. We recommended use medium strong glue.

