

S22


Suzuki SV650 N/S 2007-

Fitting kit left side:

ID	Description	Cat.No	QTY
1	Steel box M10	X1	1
2	Screw M10x110x1,25	928	1
3	Dural.cylinder d=20	182	1

Fitting kit right side:

ID	Description	Cat.No	QTY
1	Steel box M10	X1	1
2	Screw M10x160x1,25	929	1
3	Dural.cylinder	181	1

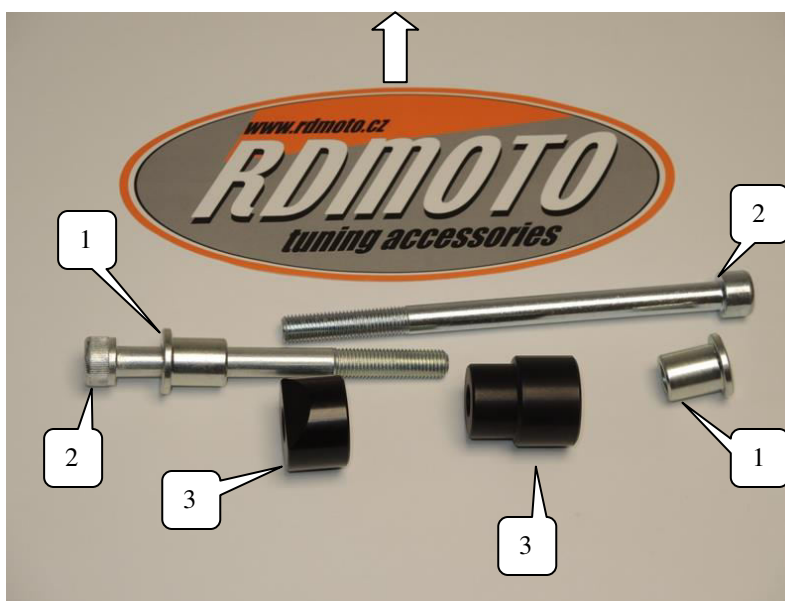

Assembly make to the frame, position on photos. Make first left side.

Assembly to left side:

1. Take out original bolt from frame.
2. Insert steel box ID.1 into the protector and after insert bolt ID.2.
3. Take dural.cylinder ID.3 and insert it on the bolt.
4. This kit mount into the frame.
5. Tighten the safety bolt on frame.

Assembly to right side:

1. Take out original bolt from frame.
2. Insert steel box ID.1 into the protector and after insert bolt ID.2.
3. Take dural.cylinder ID.3 and insert it on the bolt.
4. This kit mount into the frame.

Warning:

We recommend use the glue of all threads. Medium strong.

