


S27S

Suzuki GSF 1250 Bandit '07-



Left side kit:

ID	Description	Cat.no	Pcs
1	Bolt M8x40	828	2
2	Alu.adapter	568	1
3	Alu. cylinder	187	1
4	Steel adapter	566	1
5	Bolt M8x20	823	2
6	Bolt M12x40	858	1
7	Bolt M8x30	834	1
8	Washer M8	802	1
9	Slider adapter	350	1
10	Bolt M6x25	877	3
11	Bolt M4x16	876	2

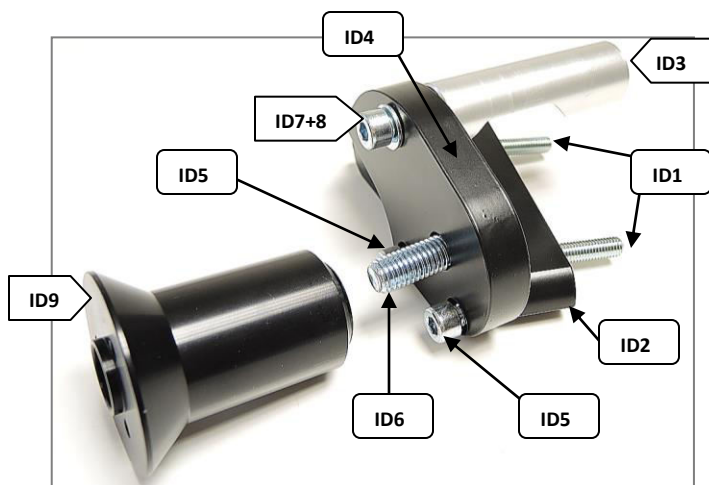

Right side kit:

ID	Description	Cat.no	Pcs
1	Alu. cylinder	186	1
2	Bolt M10x30	882	1
3	Plastic cap	X4	1
4	Steel stirrup	950	1
5	Nut M8	951	2
6	Washer M8	802	2
7	Bolt M12x40	858	1
8	Steel adapter	567	1
9	Slider adapter	350	1
10	Bolt M6x25	877	3
11	Bolt M4x16	876	2
12	3M tape	3M	1

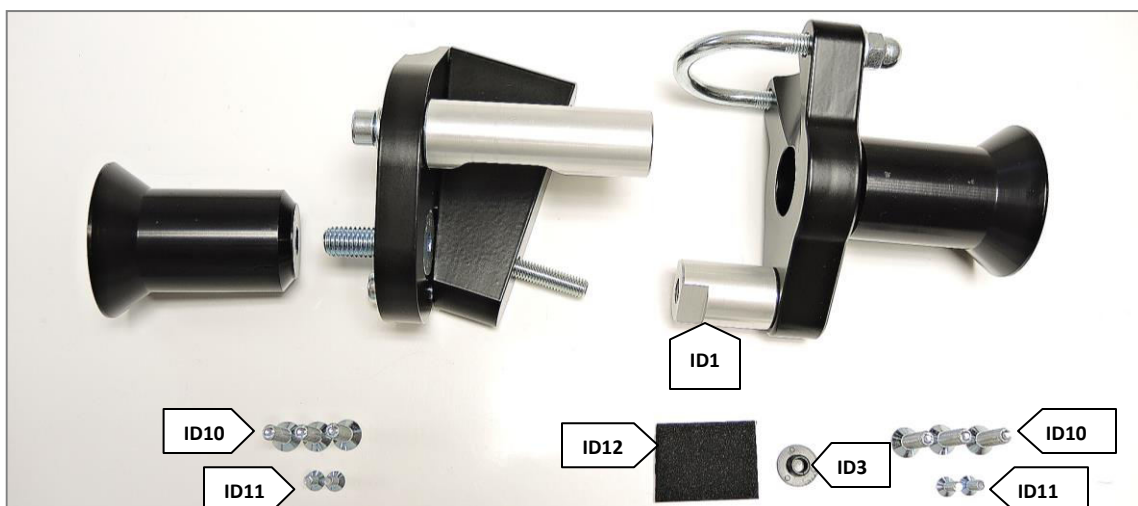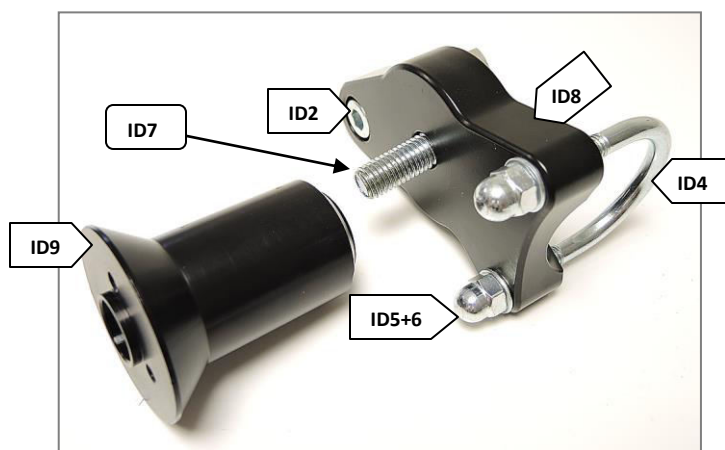

Instructions – left side:

- 1.) Remove original bolts M8 from the frame of motorcycle.
- 2.) Mount adapter ID2 on the frame of motorcycle using bolt ID1.
- 3.) Mount alu. Cylinder ID3 using bolt ID7+ID8 into the steel adapter ID4.
- 4.) Mount adapter for slider ID9 on the steel adapter ID4 using bolt ID6.
- 5.) Fit this kit on the frame using two bolts ID5.
- 6.) Fit slider using three bolts ID10.
- 7.) Fit coloured cover using two bolts ID11.

Instructions – right side:

- 1.) Remove nut from the frame of motorcycle. Mount cylinder ID1 into the thread.
- 2.) Mount slider adapter ID9 on the steel adapter ID4 using bolt ID7.
- 3.) Stick 3M tape on the frame of motorcycle.
- 4.) Place „U” stirrup ID4 and tighten it using nuts and washers ID5 and ID6.
- 5.) Tighten bolt ID2 with alu. Cylinder ID1. Cover bolt with plastic cap ID3.
- 6.) Fit slider using three bolts ID10.
- 7.) Fit coloured cover using two bolts ID11.

We recommend to use the glue on all threads (medium strong).

