

# S31S


## Suzuki GSX-R1000 09-11

### Kit for the left side

ID	Description	Cat.n	qt
3	Alu.adapter for slider	317	1
4	Bolt M10x30mm	882	1
5	Bolt M6x25	877	3
6	Bolt M4x16	876	2
7	Boltb M10x60x1,25mm	896	1
8	Alu. spacer d=10mm	108	1
9	Steel adapter	570	1
11	3M tape		1
12	Poly.nut d=20mm	X10	1

### Kit for the right side

ID	Description	Cat.n	qt
3	Alu.adapter for slider	317	1
4	Bolt M10x30mm	882	1
5	Bolt M6x25	877	3
6	Bolt M4x16	876	2
7	Boltb M10x60x1,25mm	896	1
8	Alu.spacer d=3mm	284	1
9	Steel adapter	569	1
11	3M tape		1
12	Poly. nut d=20mm	X10	1

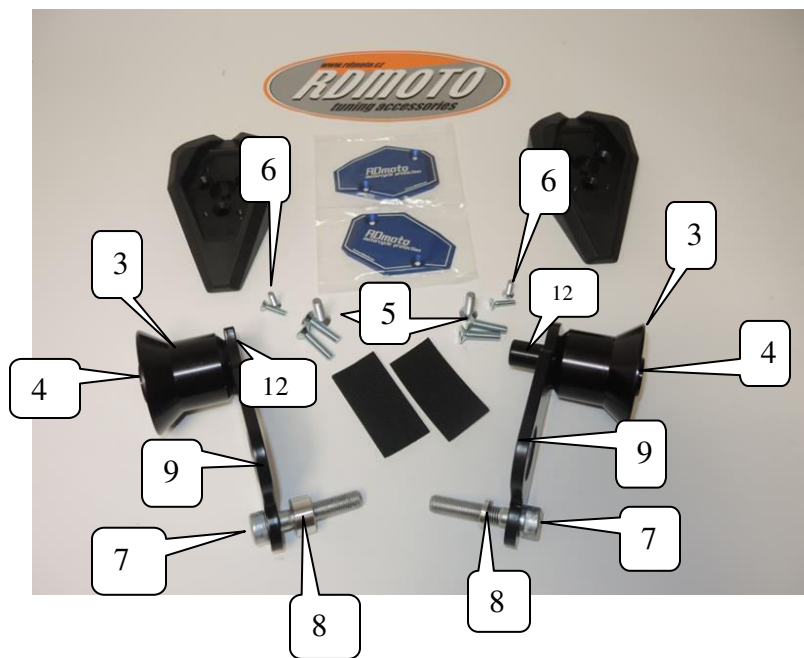

### **Installation – the left side:**

1. remove frame and the original bolt M10 from frame
2. place ID.3 on the steel bracket and tighten it by bolt ID.4 from back side mount poly. Nut ID.12 on the bolt
3. use the bolt ID.7 for mounting of the steel adapter ID9. Give the duralumin cylinder ID.8 under the adapter during the installation. Stick the 3M tape ID.11 on the frame of the motorcycle at the point of touching.
4. Put fairing back the bike.
5. use bolts ID.5 for gripping slider. Insert cover into the slider and use the bolts ID.6 for gripping

### **Installation – the right side:**

1. remove frame and the original bolt M10 from frame
2. place ID.3 on the steel bracket and tighten it by bolt ID.4 from back side mount poly. Nut ID.12 on the bolt
3. use the bolt ID.7 for mounting of the steel adapter ID9. Give the duralumin cylinder ID.8 under the adapter during the installation. Stick the 3M tape ID.11 on the frame of the motorcycle at the point of touching.
4. Put fairing back the bike.
5. use bolts ID.5 for gripping slider. Insert cover into the slider and use the bolts ID.6 for gripping

**Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).**

