

T2



Triumph Speed Triple 1050 2005-2010

Kit for the left side:

ID	Description	Cat.no.	Pcs
1	Bolt M10x40mm	854	1
2	Steel insert	X1	1
3	Bolt M12x40x1,25mm	933	1
4	Washer M10	801	1
5.1	Dural adapter (left side)	619	1
6	Washer M12	803	1

Kit for the right side:

ID	Description	Cat.no.	pcs
1	Bolt M10x40mm	854	1
2	Steel insert	X1	1
3	Bolt M12x65mm	963	1
4	Washer M10	801	1
5.2	Dural adapter (right side)	620	1
6	Washer M12	803	2
7	Nut M12 (pojistná)	811	1

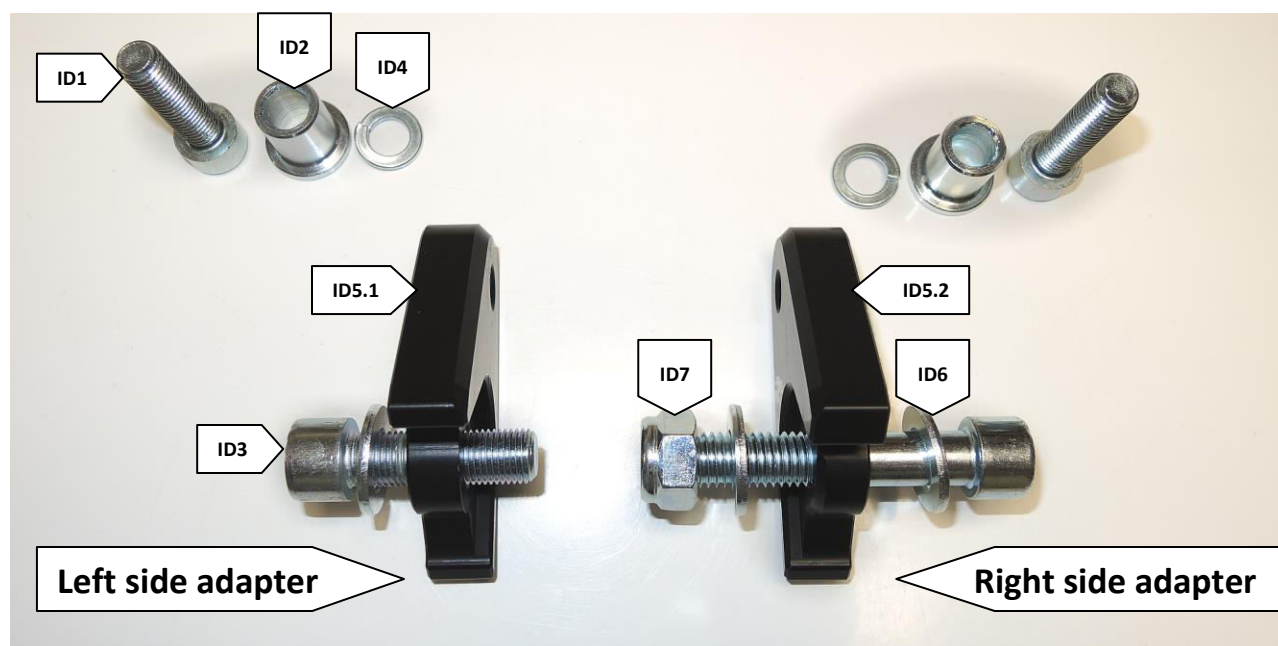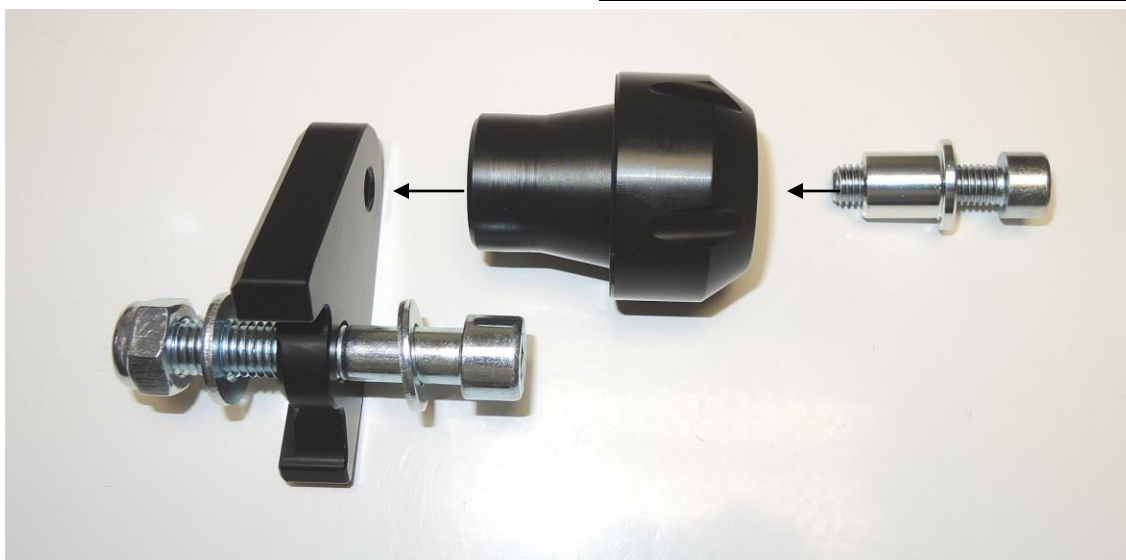

Instructions – left side:

- 1.) Remove original M12 bolts from the frame of motorcycle.
- 2.) Mount dural adapter (ID5.1) on the frame of motorcycle using bolt M12 (ID3). Don't forget to place washer M12 (ID6).
- 3.) Now fit protector using bolt M10 (ID1) and steel washer (ID2) according to the picture above. Don't forget to place washer M10 (ID4).

Instructions – right side:

- 1.) Remove original M12 bolts from the frame of motorcycle.
- 2.) Mount dural adapter (ID5.2) on the frame of motorcycle using bolt M12 (ID3) and safety nut M12 (ID7). Don't forget to place two washers M12 (ID6).
- 3.) Now fit protector using bolt M10 (ID1) and steel washer (ID2) according to the picture above. Don't forget to place washer M10 (ID4).

We recommend to use the glue on all threads (blue colour – medium strong).

