

T5S


Triumph Daytona 675 2006-2010 Triumph Daytona 675R 2011-

Kit for the left side

ID	Description	Cat.no.	Pcs
1	Slider adapter	DV-313	1
2	Washer M10 (spring)	801	1
3	Bolt M10x25mm	868	1
4	3M tape	-	1
5	Bolt M6x25	877	3
6	Bolt M4x16	876	2
7	Steel adapter	589	1
8	Bolt M10x110x1,25mm	928	1
9	Bolt M10x58x1,25mm	901	1
10	Dural. cylinder d=32,5mm	136	1

Kit for the right side


No.	Description	Cat.no.	Pcs
1	Slider adapter	DV-318	1
2	Washer M10 (spring)	801	1
3	Bolt M10x40mm	854	1
4	3M tape	-	1
5	Bolt M6x25	877	3
6	Bolt M4x16	876	2
7	Steel adapter	590	1
8	Bolt M10x115x1,25mm	894	1
9	Bolt M10x60x1,25mm	896	1
10	Dural. cylinder d=28mm	135	1

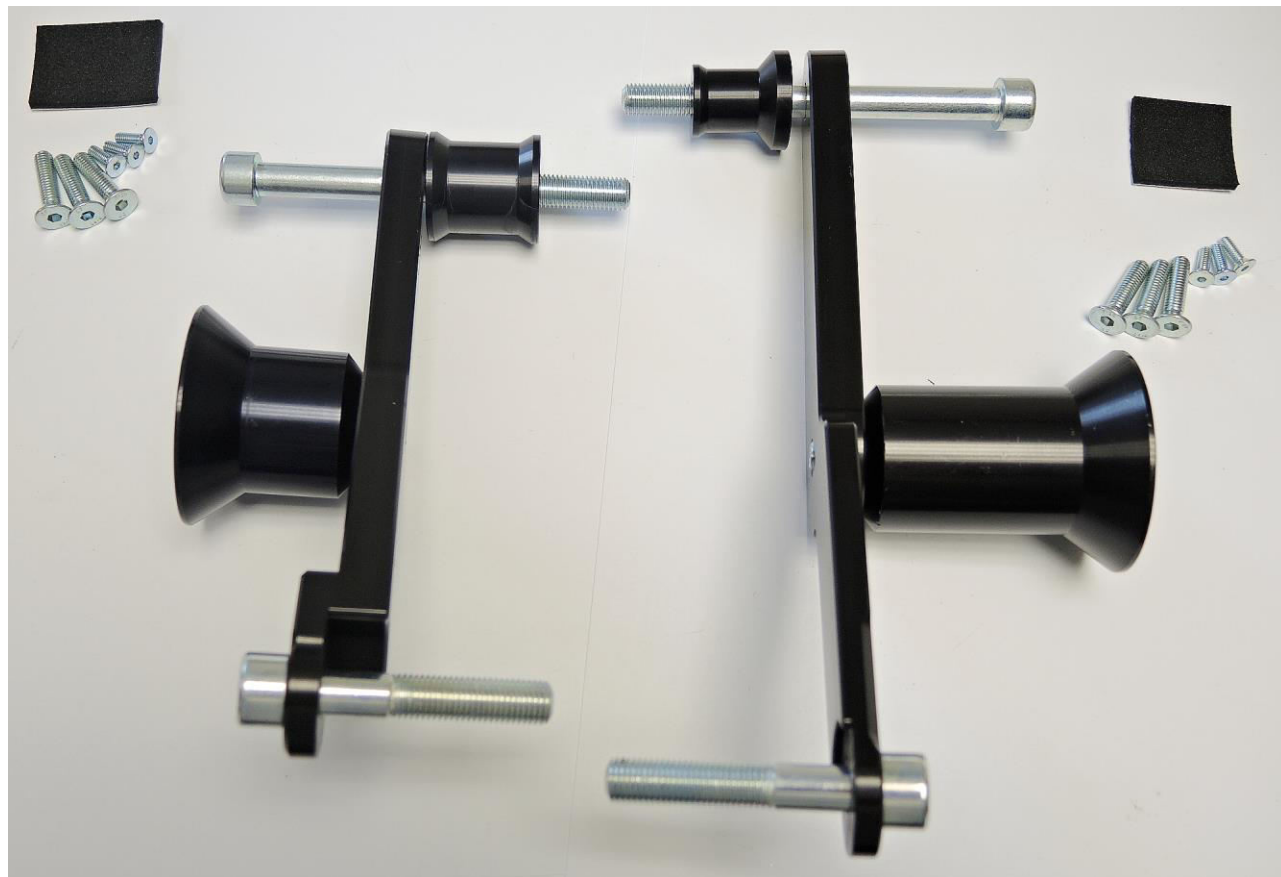

LEFT SIDE INSTRUCTIONS

- 1) Demontujte původní šrouby podle obrázku.
- 2) Stick 3M tape on the motorcycle to prevent its damage.
- 3) Fit steel adapter ID7 on the motorcycle using bolts ID8 and ID9. Place cylinder ID10 on the longer front bolt.
- 4) Fit slider adapter ID1 using bolt ID3 and washer ID2.
- 5) Fit slider using three M6 bolts.
- 6) Fit coloured cover using two M4 bolts.

We recommend to use the glue on all threads (medium strong).

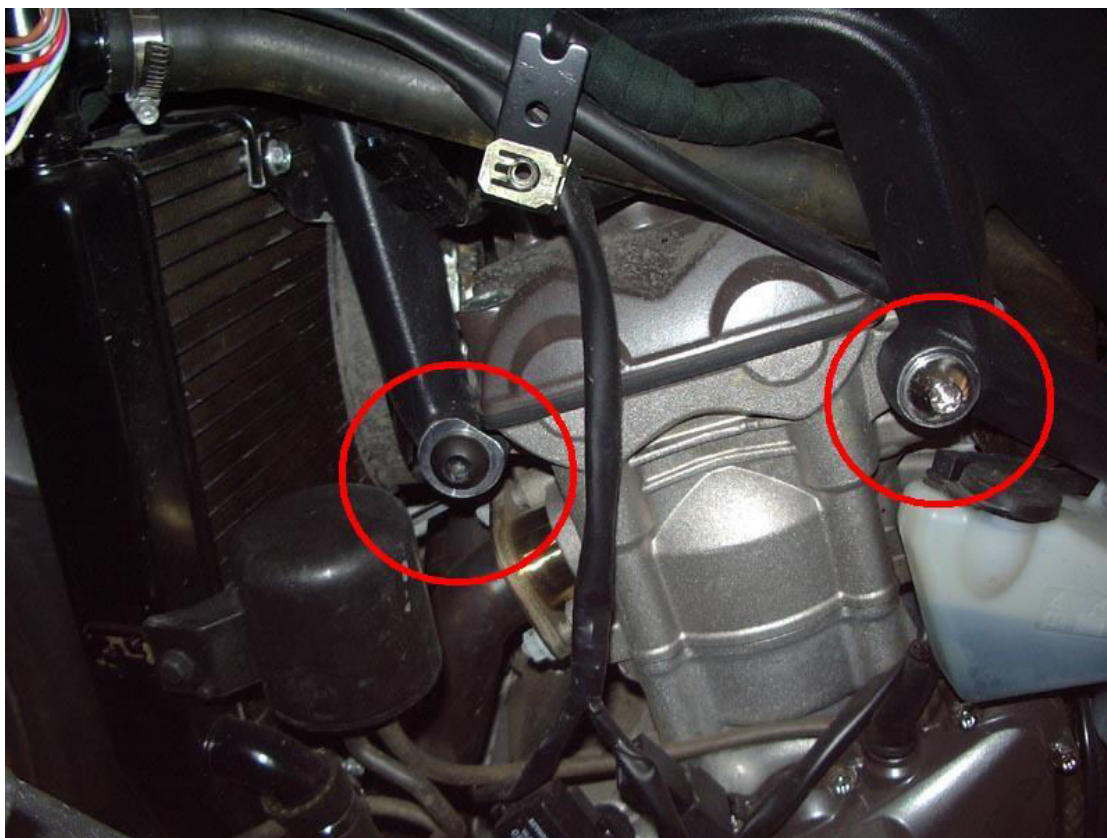

RIGHT SIDE INSTRUCTIONS

- 1) Demontujte původní šrouby podle obrázku.
- 2) Stick 3M tape on the motorcycle to prevent its damage.
- 3) Fit steel adapter ID7 on the motorcycle using bolts ID8 and ID9. Place cylinder ID10 on the longer front bolt.
- 4) Fit slider adapter ID1 using bolt ID3 and washer ID2.
- 5) Fit slider using three M6 bolts.
- 6) Fit coloured cover using two M4 bolts.

We recommend to use the glue on all threads (medium strong).

