



RDMOTO CZECH REPUBLIC
info@rdmoto.cz
www.rdmoto.cz

T7

Triumph Tiger 1050

Kit for the left side


No.	Description	Cat.no.	Pcs
1	Duralumin adapter	591	1
2	Bolt M10x50mm	849	1
3	Bolt M12x60x1,25mm	916	1
4	Bolt M8x60mm	839	1
5	Dural. cylinder d=10mm	103	1
6	Dural. cylinder d=21mm	104	1
7	Dural. cylinder d=15mm	9	1
8	Steel box M10	X1	1

Kit for the right side

No.	Description	Cat.no.	Pcs
1	Duralumin adapter	592	1
2	Bolt M12x60mm (kužel.hlava)	955	1
3	Bolt M12x80mm	956	1
4	Bolt M12x130mm	886	1
5	Dural. cylinder d=34mm	105	1
6	Dural. cylinder d=30mm	171	1
7	Special nut	X17	1
8	Nut M12 (safety)	811	2
9	Pad M12	803	2

Installation – the left side:



Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

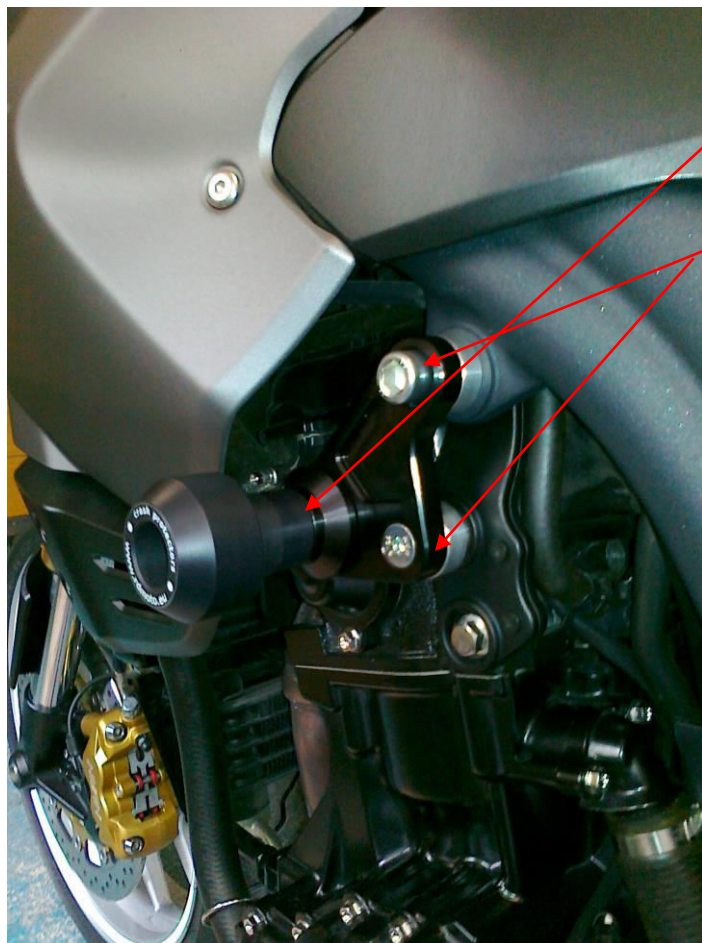

1. Put inside steel housing (note 8) to the crash protector.
2. Through crash protector and dural. cylinder (note 7) insert bolt (note 2) Whole sets mounting on the adapter (note 1).
3. Bolt (note 3) and bolt (note 4) mounting duralumin adapter (note 1), Put on the bolts (note 3) and (note 4) duralumin cylinder (note 5) and (note 6)
4. Put on cover on the protectors PHV1 and PHV2.

Installation – the right side:

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

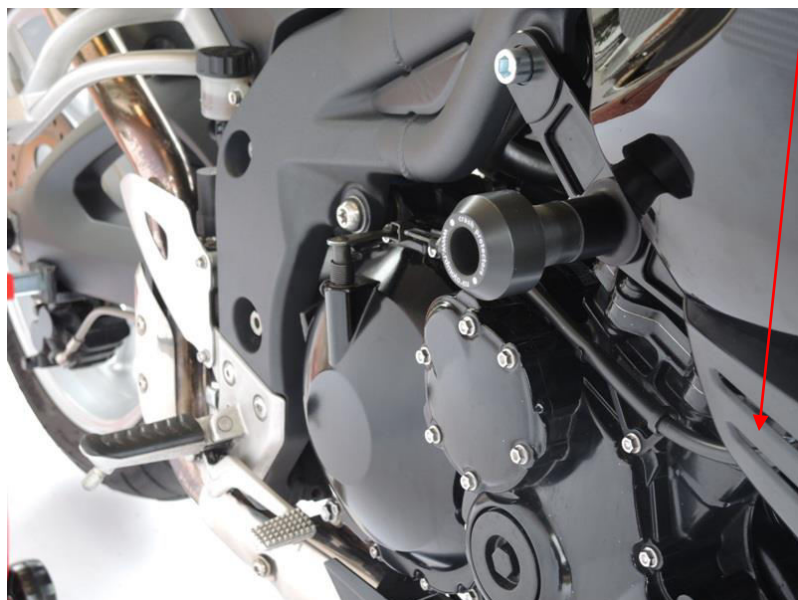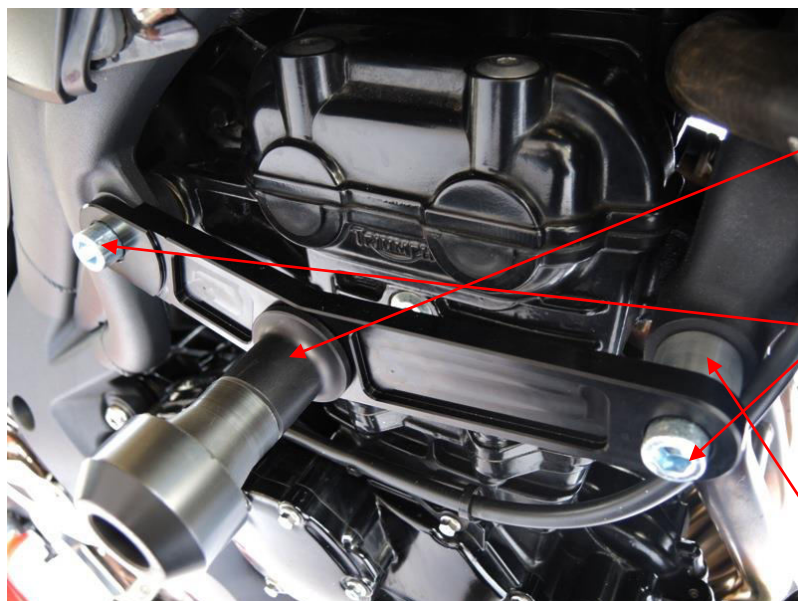

1. Take on duralumin adapter (note 1) from the back side Put the screw (note 2).
2. From front side put on the bolt duralumin adapter (note 6) and crash protector. This set fixed by special nut (note 7).
3. Take off plastic cover
4. Take off original bolts from bike.
5. Put on the adapter (note 1) on the bike, just do it screw (note 3) rear, and screw (note 4) front. Put on the bolt (note 4).
6. Put in duralumin cylinder (note 5) between adapter and frame.
7. Use the nut (note 8) and washer (note 9) to tightening
8. Put on the bike plastic cover
9. On the protectors PHV1 and PHV2 mounting color cover.