

T9S


Triumph Tiger 800 2011-

Kit for the left side

No.	Description	Cat.no	Pcs
1	Slider RDMoto	SL	1
2	Cover	SLcap..	1
4	Slider adapter	DV-318	1
6.1	Bolt M10x30mm	882	1
8	Bolt M6x25	877	3
9	Bolt M4x16	876	2
10.1	Bolt M10x145x1,25mm	909	1
11.1	Bolt M10x70x1,25mm	898	1
12.1	Duralumin adapter	595	1
13.1	Duralumin cylinder d=83mm	278	1
14.1	Duralumin cylinder d=34mm	279	1
15	Washer M10 (safety)	801	1
16	Plastic cover - black	X4	2

Kit for the right side

No.	Description	Cat.no	Pcs
1	Slider RDMoto	SL	1
2	Cover	SLcap..	1
4	Slider adapter	DV-318	1
6.2	Bolt M10x55mm	1002	1
8	Bolt M6x25	877	3
9	Bolt M4x16	876	2
10.2	Bolt M10x100x1,25mm	892	1
11.2	Bolt M10x70x1,25mm	898	1
12.2	Duralumin adapter	596	1
13.2	Dural.cylinder d=26mm	280	1
14.2	Dural.cylinder d=33mm	281	1
15	Washer M10 (safety)	801	1
16	Plastic cover - black	X4	2
17	Tape 3M		1

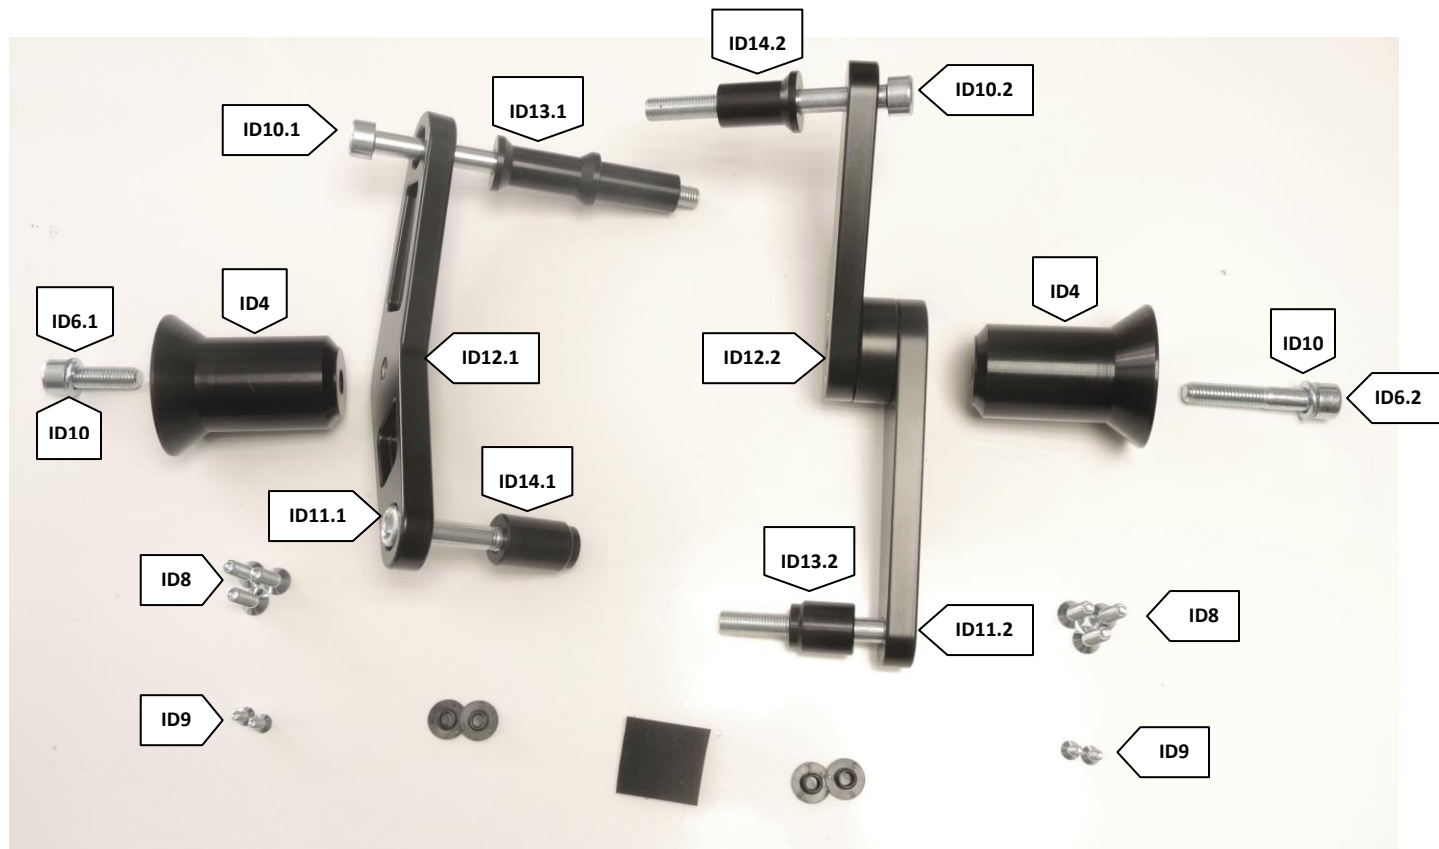

Installation – left side:

1. Remove original bolts from the frame of motorcycle.
2. Fit dural adapter (ID12.1) on the frame of motorcycle using two bolts M10 (ID10.1 + ID11.1). Don't forget to place two spacers (ID13.1 + ID14.1) under dural adapter.
3. Using bolt M10 (ID6.1) fit slider adapter (ID4) on dural adapter (ID12.1). Don't forget to use safety washer (ID10).
4. Fit slider on slider adapter (ID4) using three bolts M6 (ID8).
5. Insert coloured cover into slider. Fit coloured cover using two screws M4 (ID9).

Warning! We recommend to use safety glue on threads of all bolts (medium strong – blue colour).



Installation – right side:

1. Remove original bolts from the frame of motorcycle.
2. Fit dural adapter (ID12.2) on the frame of motorcycle using two bolts M10 (ID10.2 + ID11.2). Don't forget to place two spacers (ID13.2 + ID14.2) under dural adapter.
3. Insert tape 3M between engine and dural adapter (ID12.2).
4. Using bolt M10 (ID6.2) fit slider adapter (ID4) on dural adapter (ID12.2). Don't forget to use safety washer (ID10).
5. Fit slider on slider adapter (ID4) using three bolts M6 (ID8).
6. Insert coloured cover into slider. Fit coloured cover using two bolts M4 (ID9).

Warning! We recommend to use safety glue on threads of all bolts (medium strong – blue colour).

